

# Compact Slide

ø6, ø10, ø16, ø20

New


RoHS

Improved linear guide rigidity reduces  
the amount of table  
displacement by **48%**

Displacement due to a force  
acting in the **pitch** direction

**48% reduction**


0.31 mm → **0.16 mm**

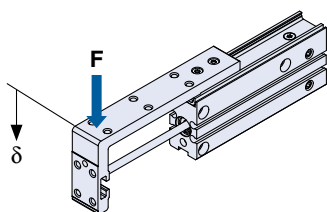

Displacement due to a force  
acting in the **yaw** direction

**63% reduction**


0.24 mm → **0.09 mm**

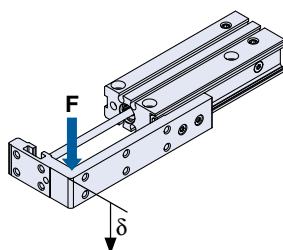

Displacement due to a force  
acting in the **roll** direction

**90% reduction**

0.06 mm → **0.006 mm**

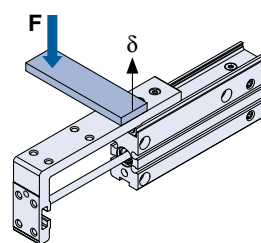

\* At ø10 and 60 mm stroke, 50% of the respective allowable load is applied (compared to the existing MXH series) For details, refer to pages 5 and 6.

Max. standard stroke: **150 mm**

(For ø20)




**MXH2 Series**



CAT.ES20-276A

## High Rigidity Achieved

Increased rigidity by extending the guide length of the linear guide. Significantly reduced table displacement when a moment is applied.


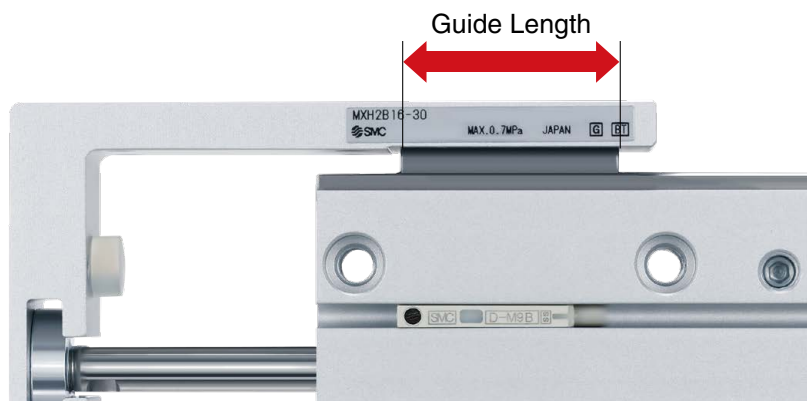


## Weight **Max. 6% reduction**

194 g → **182 g**

(Compared with the existing MXH series ø16 and 5 mm stroke)

The allowable moment and traveling parallelism are equivalent to the existing MXH series. **p. 6**

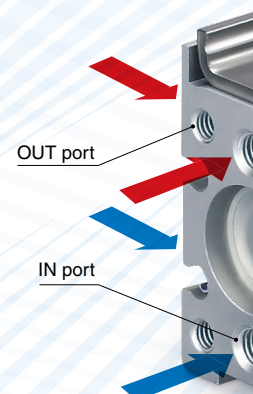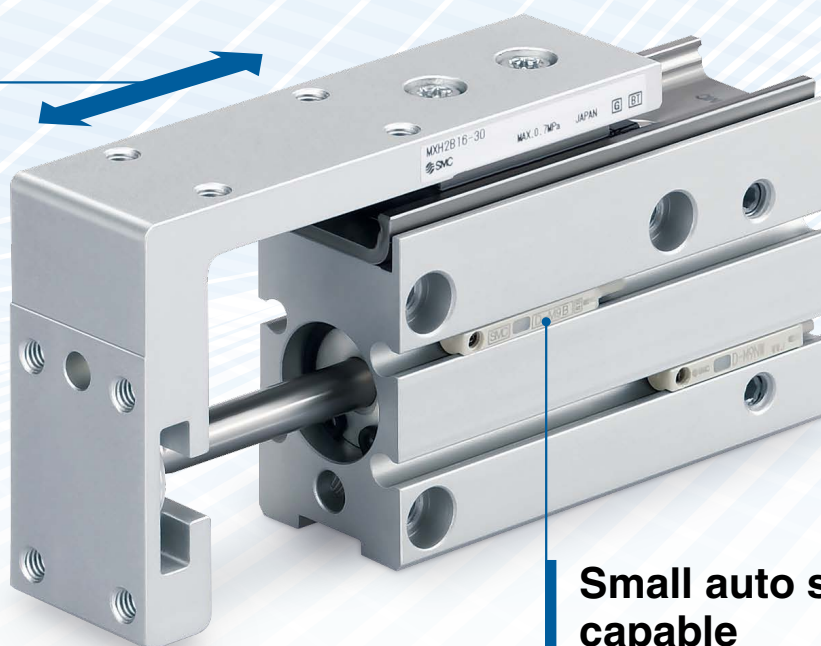

**Small auto switches capable**

(D-M9□, D-A9□)

**Max. standard stroke length has increased.**  
(Max. 150 mm)

(Existing product: Max. 60 mm)

Max. Strokes [mm]

	<b>MXH2</b>	Existing model
ø6	<b>60</b>	60
ø10	<b>100</b>	
ø16	<b>125</b>	
ø20	<b>150</b>	




**Dimensions for mounting and length are equivalent to the existing MXH series.**


Dimensions including workpiece mounting dimensions and cylinder mounting dimensions are the same as the existing model.

**Piping is possible in 3 directions.**


If changing the port location, "Made to Order" model (-XC3□) is available.

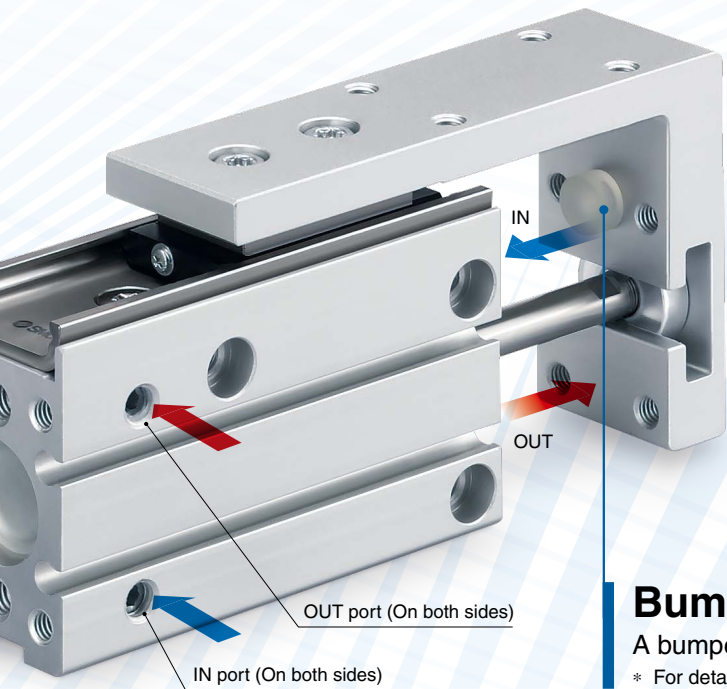

**Mounting is possible in 4 directions.**

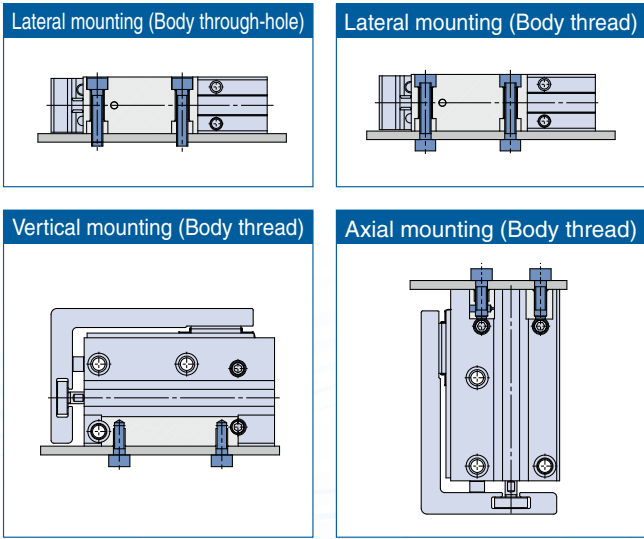

**2 mounting options for workpieces are available.**

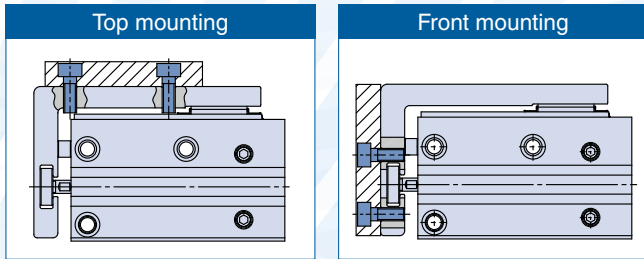


**Bumper**

A bumper is also installed inside the cylinder.

\* For details, refer to page 9, "Construction."

**Variations**

	Action	Cushion	Bore size [mm]	Stroke [mm]	Made to Order (pp. 20 to 22)
<b>MXH2</b> 	Double acting	Rubber bumper on both ends	6	5 to 60	- <b>XB13</b> : Low-speed cylinder (5 to 50 mm/s)
			10	5 to 100	- <b>XC3□</b> : Special port location
			16	5 to 125	- <b>XC19</b> : Intermediate stroke (Spacer type)
			20	5 to 150	- <b>XC22</b> : Fluororubber seals - <b>XC79</b> : Machining tapped hole, drilled hole and pin hole additionally



**CONTENTS**

Model Selection .....	p. 3	Simple Specials .....	p. 20
How to Order .....	p. 7	- <b>XC79</b> Tapped hole, drilled hole, pinned hole machined additionally .....	p. 20
Specifications .....	p. 8	Made to Order Common Specifications .....	p. 21
Construction .....	p. 9	- <b>XB13</b> Low-speed cylinder (5 to 50 mm/s) .....	p. 21
Dimensions .....	p. 10	- <b>XC3□</b> Special port location .....	p. 21
Auto Switch Mounting .....	p. 17	- <b>XC19</b> Intermediate stroke (Spacer type) .....	p. 22
Prior to Use		- <b>XC22</b> Fluororubber seals .....	p. 22
Auto Switch Connections and Examples .....	p. 19	Specific Product Precautions .....	p. 23

# MXH2 Series Model Selection

**⚠ Caution** Confirmation of theoretical output is required separately. Refer to “Theoretical Output” on page 8.


**Selection Conditions:** Follow the tables below in order to determine selection conditions and choose one selection graph.

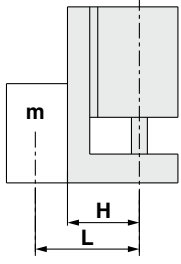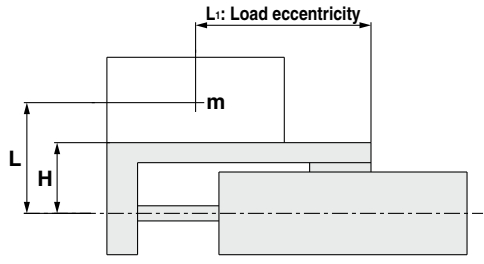Mounting orientation	Vertical			Horizontal								
												
Max. speed [mm/s]	Up to 100	Up to 300	Up to 500	Up to 100			Up to 300			Up to 500		
Load eccentricity L <sub>1</sub> [mm]	—			50	100	200	50	100	200	50	100	200
Selection graph	1	2	3	4	5	6	7	8	9	10	11	12




\* L: Overhang (the distance from the cylinder shaft center to the load center of gravity)  
The direction of L can also be a diagonal direction. (Refer to the drawing at right.)

\* H: Distance from the cylinder center axis to the mounting surface for the table


H dimension [mm]	5 to 60 mm stroke				75 to 150 mm stroke		
	ø6	ø10	ø16	ø20	ø10	ø16	ø20
H dimension [mm]	24.5	30.5	34.5	41.5	32.5	36.5	45.5

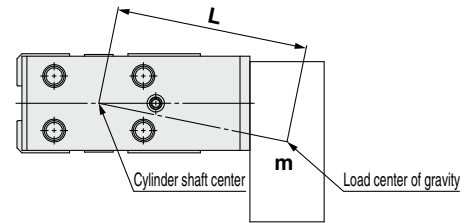

## Selection Graph 1 to 3 (Vertical Mounting)

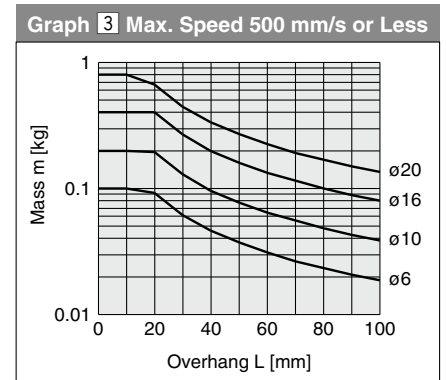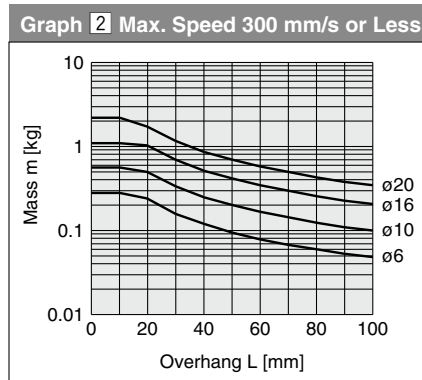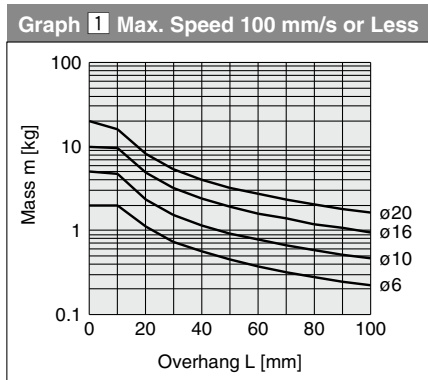

## Selection Example (Vertical Mounting)

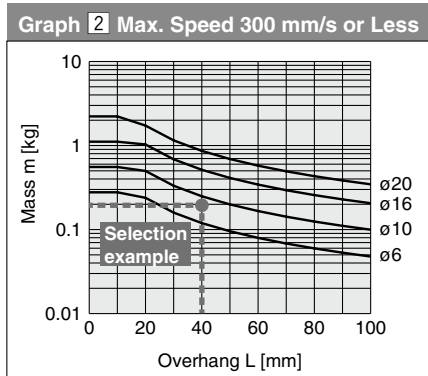

Selection conditions { Mounting: Vertical  
Max. speed: 300 mm/s  
Overhang L: 40 mm  
Load mass **m**: 0.2 kg

\* The load mass **m** should be: mass of workpiece + mass of moving parts (see table below).

Refer to Graph 2 based on vertical mounting and a speed of 300 mm/s.  
From Graph 2, as the intersection of overhang **L**: 40 mm and load mass **m**: 0.2 kg is in the area below the ø10 line, a ø10 is selected.

### Mass of Moving Parts


Bore size [mm]	Stroke [mm]													
	5	10	15	20	25	30	40	50	60	75	100	125	150	
6	0.02	0.02	0.03	0.03	0.03	0.03	0.03	0.03	0.04	—	—	—	—	
10	0.04	0.04	0.05	0.05	0.05	0.05	0.06	0.06	0.06	0.08	0.10	—	—	
16	0.08	0.08	0.09	0.09	0.09	0.09	0.10	0.11	0.11	0.14	0.16	0.19	—	
20	0.14	0.14	0.15	0.15	0.16	0.16	0.17	0.18	0.19	0.24	0.28	0.31	0.35	




## Selection Graph 4 to 12 (Horizontal Mounting)

### Max. Speed 100 mm/s or Less


Graph 4 Load Eccentricity 50 mm

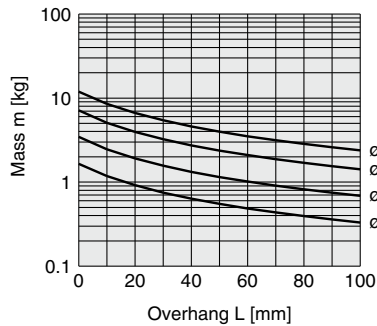

Graph 5 Load Eccentricity 100 mm

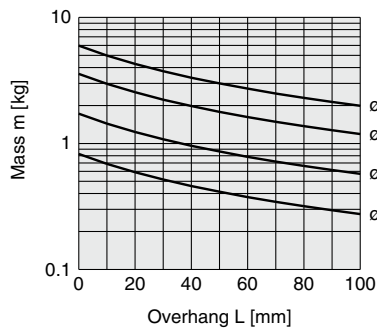


Graph 6 Load Eccentricity 200 mm

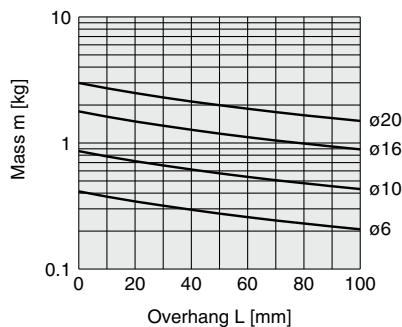


### Max. Speed 300 mm/s or Less


Graph 7 Load Eccentricity 50 mm

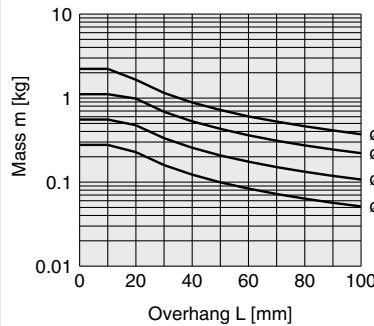

Graph 8 Load Eccentricity 100 mm

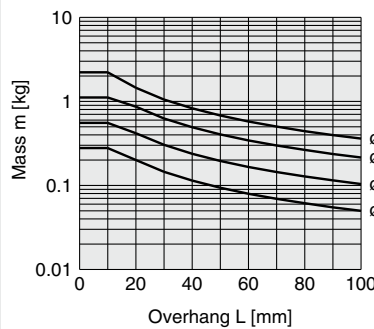


Graph 9 Load Eccentricity 200 mm

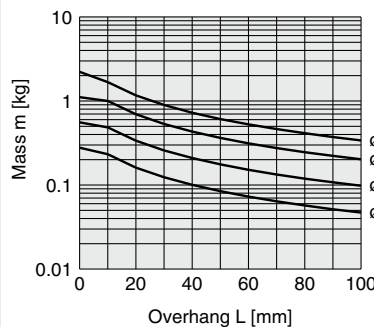


### Max. Speed 500 mm/s or Less


Graph 10 Load Eccentricity 50 mm

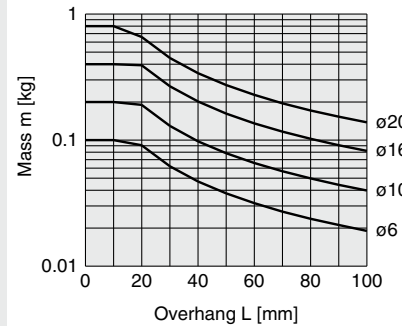

Graph 11 Load Eccentricity 100 mm

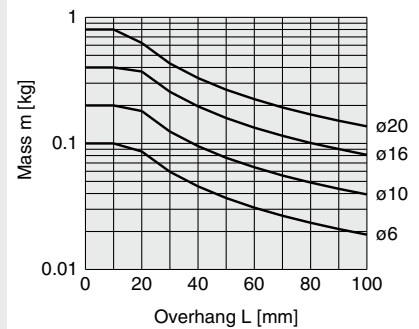


Graph 12 Load Eccentricity 200 mm

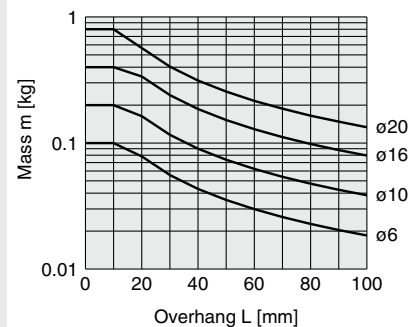

## Selection Example (Horizontal Mounting)

Graph 6 Load Eccentricity 200 mm

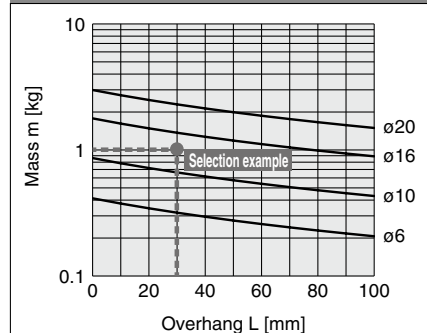

Selection conditions

- Mounting: Horizontal
- Max. speed: 100 mm/s
- Load eccentricity  $L_1$ : 200 mm
- Overhang  $L$ : 30 mm
- Load mass  $m$ : 1.0 kg

\* The load mass  $m$  should be: mass of workpiece + mass of moving parts (see table below).

Refer to Graph 6 based on horizontal mounting, a speed of 100 mm/s and load eccentricity  $L_1$  of 200 mm. From Graph 6, as the intersection of overhang  $L$ : 30 mm and load mass  $m$ : 1.0 kg is in the area below the ø16 line, a ø16 is selected.

### Mass of Moving Parts

Bore size [mm]	Stroke [mm]												[kg]
	5	10	15	20	25	30	40	50	60	75	100	125	150
6	0.02	0.02	0.03	0.03	0.03	0.03	0.03	0.03	0.04	—	—	—	—
10	0.04	0.04	0.05	0.05	0.05	0.05	0.06	0.06	0.06	0.08	0.10	—	—
16	0.08	0.08	0.09	0.09	0.09	0.09	0.10	0.11	0.11	0.14	0.16	0.19	—
20	0.14	0.14	0.15	0.15	0.16	0.16	0.17	0.18	0.19	0.24	0.28	0.31	0.35

## Table Displacement (Reference)


### Table displacement due to a force acting in the pitch direction

The amount of Table end displacement when load F is applied directly at the end of stroke in the pitch direction.

Calculate the table end load F using the following formula.  
(Refer to the table below for L and  $\alpha$  values.)

$$F = \frac{L(1-\alpha)}{L} \times m \times 9.81$$

Table end load [N]  
L1: Load eccentricity [mm]  
m: Load mass [kg]  
L: Refer to the table below.  
 $\alpha$ : Refer to the table below.

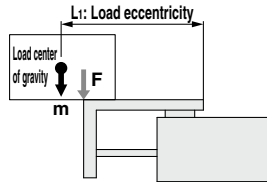

#### L and $\alpha$ by Bore Size and Stroke

[mm]

Stroke	$\phi 6$		$\phi 10$		$\phi 16$		$\phi 20$	
	L	$\alpha$	L	$\alpha$	L	$\alpha$	L	$\alpha$
5, 10	30		35		39		46	
15, 20	40		45		49		56	
25, 30	50	14	55	16	59	19	66	19
40	60		65		69		76	
50	70		75		79		86	
60	80		85		89		96	
75			101	14	107		111	
100			126		132	16	136	20
125					157		161	
150							186	


### Table displacement due to a force acting in the yaw direction

The amount of Table end displacement when load F is applied directly at the end of stroke in the yaw direction.

Calculate the table end load F using the following formula.  
(Refer to the table below for L and  $\alpha$  values.)

$$F = \frac{L(1-\alpha)}{L} \times m \times 9.81$$


Table end load [N]  
L1: Load eccentricity [mm]  
m: Load mass [kg]  
L: Refer to the table below.  
 $\alpha$ : Refer to the table below.

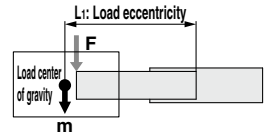

#### L and $\alpha$ by Bore Size and Stroke

[mm]


Stroke	$\phi 6$		$\phi 10$		$\phi 16$		$\phi 20$	
	L	$\alpha$	L	$\alpha$	L	$\alpha$	L	$\alpha$
5, 10	30		35		39		46	
15, 20	40		45		49		56	
25, 30	50	14	55	16	59	19	66	19
40	60		65		69		76	
50	70		75		79		86	
60	80		85		89		96	
75			101	14	107		111	
100			126		132	16	136	20
125					157		161	
150							186	

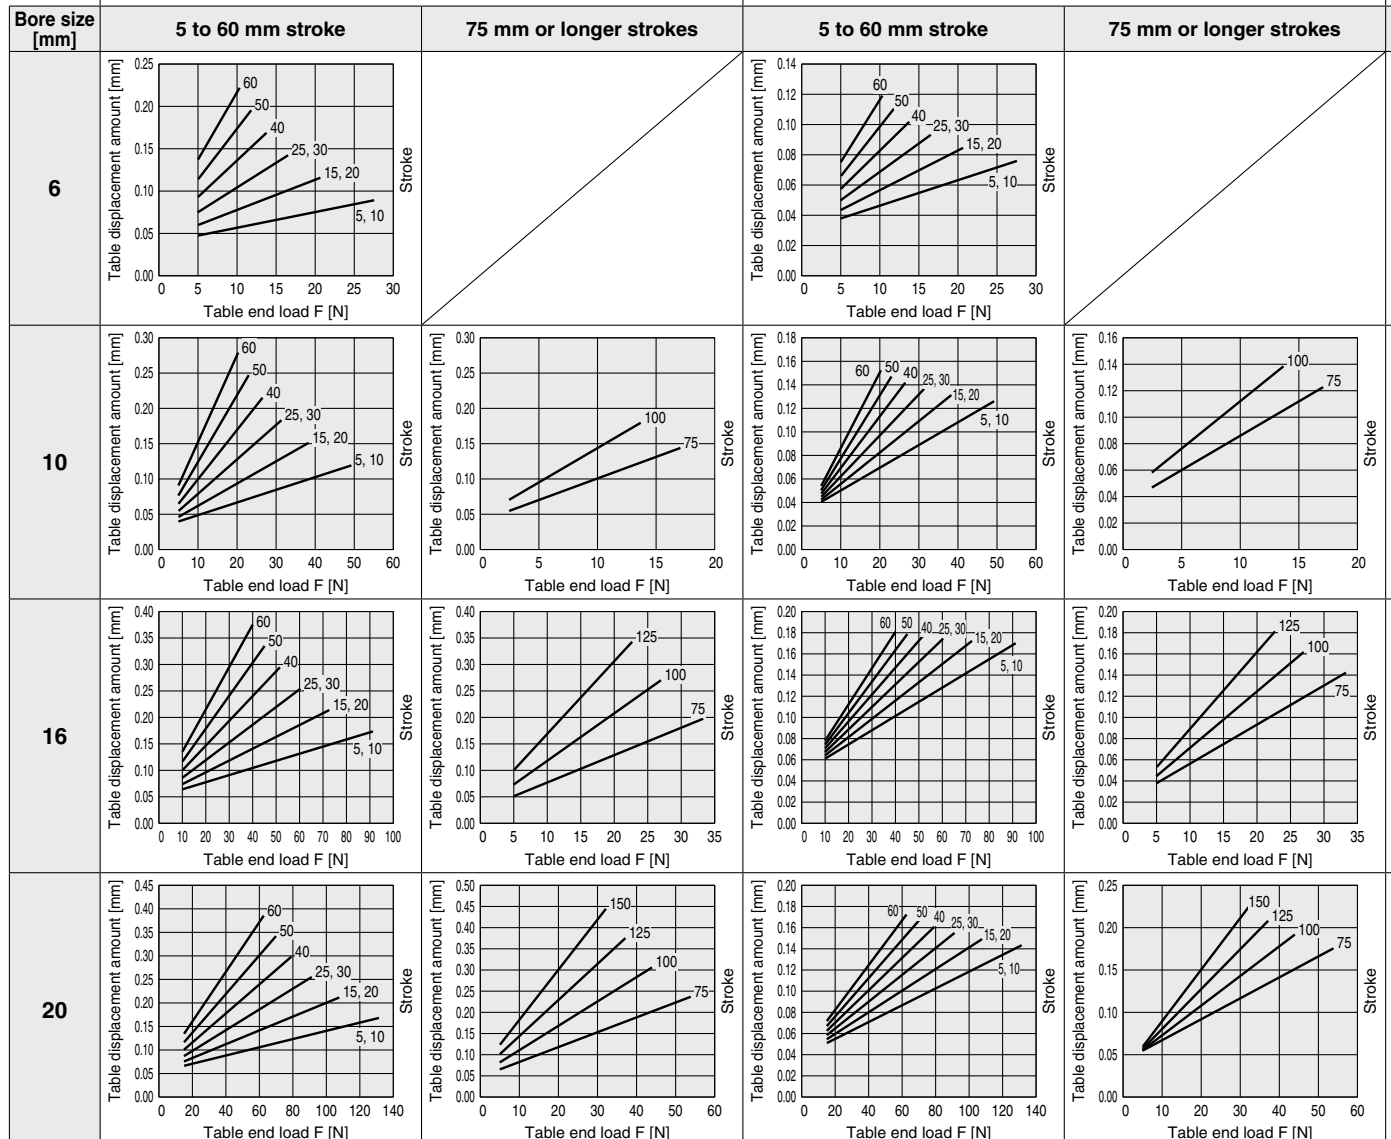

\* The displacement values are taken from a downwards pushing force acting directly on the end of the table. This includes any displacement due to the elastic deformation of the guide rolling assembly.

### Table Displacement due to a moment force acting in the roll direction

The amount of table displacement (at arrow A) with respect to the roll moment  $M_r$  when load  $F$  is applied to arrow  $F$  at the cylinder's stroke end

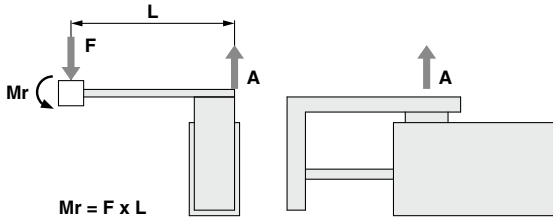

### Traveling Parallelism for a Table

Traveling parallelism	Stroke [mm]					
	5 to 30	40 to 60	75	100	125	150
	0.05 mm or less	0.1 mm or less	0.13 mm or less	0.17 mm or less	0.21 mm or less	0.25 mm or less

\* A table deflection caused by load fluctuation, etc. is not included.



### Allowable Moment

Model	Allowable moment [N·m]		
	Pitch moment $M_p$	Yaw moment $M_y$	Roll moment $M_r$
<b>MXH6</b>	0.81	0.81	1.40
<b>MXH10</b>	1.69	1.69	3.19
<b>MXH16</b>	3.49	3.49	6.47
<b>MXH20</b>	5.86	5.86	11.66

### Design

#### ⚠ Caution

- Selection of a bore size cannot be made only with above allowable moment.  
Select a bore size in accordance with "Model Selection" on pages 3 and 4.
- If the output of the compact slide is applied directly to the table, make sure it is applied along the rod axial line.

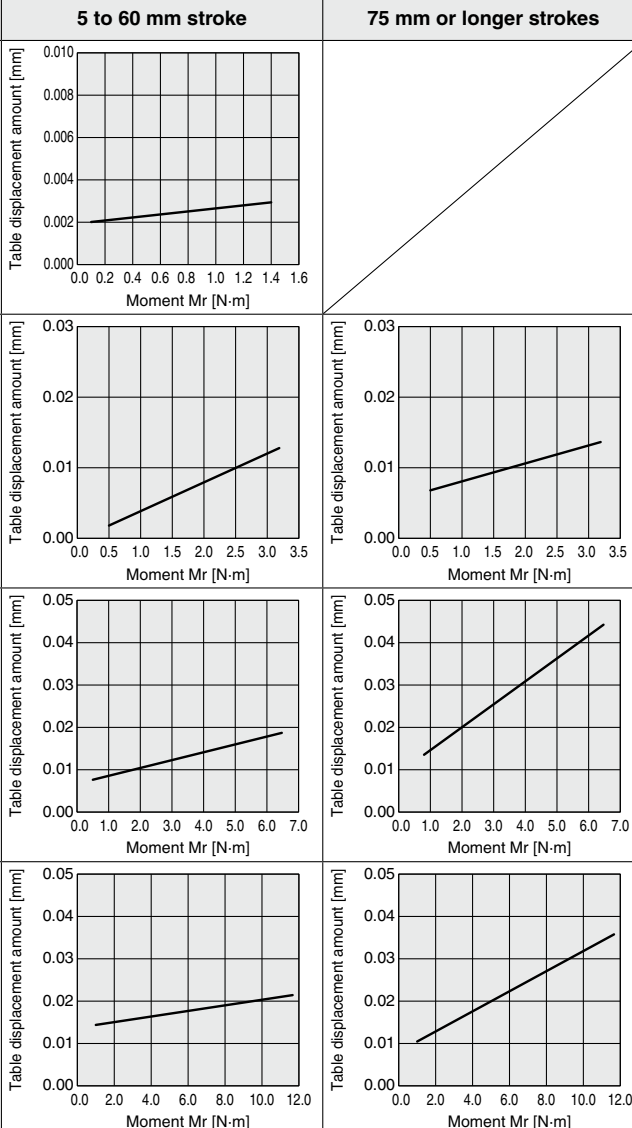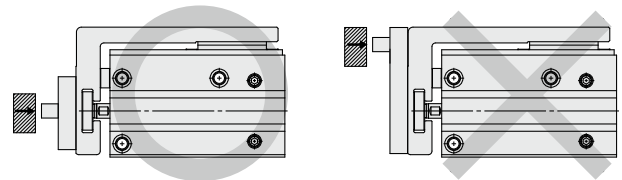


# Compact Slide MXH2 Series

ø6, ø10, ø16, ø20

RoHS

## How to Order

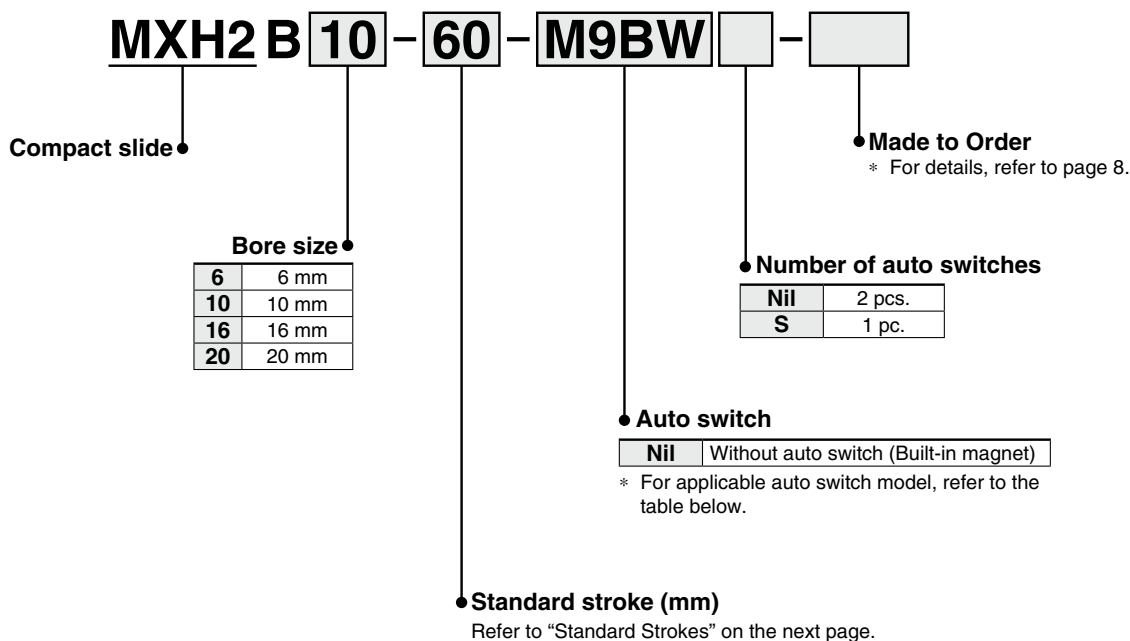

### Applicable Auto Switches / Refer to the Web Catalog for further information on auto switches.

Type	Special function	Electrical entry	Indicator light	Wiring (Output)	Load voltage		Auto switch model		Lead wire length (m)				Pre-wired connector	Applicable load		
					DC	AC	Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)				
Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	24 V	5 V, 12 V	—	M9NV	M9N	●	●	●	○	○	IC circuit	Relay, PLC
				3-wire (PNP)		M9PV		M9P	●	●	●	○	○			
				2-wire		M9BV		M9B	●	●	●	○	○			
	Diagnostic indication (2-color indicator)			3-wire (NPN)		M9NWV		M9NW	●	●	●	○	○	IC circuit		
				3-wire (PNP)		M9PWV		M9PW	●	●	●	○	○			
				2-wire		M9BWV		M9BW	●	●	●	○	○			
				3-wire (NPN)		M9NAV*1		M9NA*1	○	○	●	○	○			
	Water resistant (2-color indicator)			3-wire (PNP)		M9PAV*1		M9PA*1	○	○	●	○	○	IC circuit		
				2-wire		M9BAV*1		M9BA*1	○	○	●	○	○			
Reed auto switch	—	Grommet	Yes	3-wire (NPN equivalent)	—	5 V	—	A96V	A96	●	—	●	—	—	IC circuit	—
				No	2-wire	24 V	12 V	100 V	A93V*2	A93	●	●	●	●	—	
			100 V or less					A90V	A90	●	—	●	—	—	—	

\*1 Water-resistant type auto switches can be mounted on the above models, but SMC cannot guarantee water resistance.

\*2 The 1 m lead wire is only applicable to the D-A93.

\* Lead wire length symbols: 0.5 m ..... Nil (Example) M9NW  
1 m ..... M (Example) M9NWM  
3 m ..... L (Example) M9NWL  
5 m ..... Z (Example) M9NWX

\* Solid state auto switches marked with a "○" are produced upon receipt of order.

\* Refer to page 17 for applicable auto switches other than listed above.

\* For details on auto switches with pre-wired connectors, refer to the Web Catalog.


\* Auto switches are shipped together with the product but do not come assembled.





## Symbol

Rubber bumper

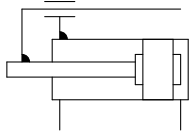

## Made to Order

(For details, refer to pages 20 to 22.)

Symbol	Specifications
<b>-XC79</b>	Tapped hole, drilled hole, pinned hole machined additionally
<b>-XB13</b>	Low-speed cylinder (5 to 50 mm/s)
<b>-XC3</b>	Special port location
<b>-XC19</b>	Intermediate stroke (Spacer type)
<b>-XC22</b>	Fluororubber seals

## Specifications

Bore size [mm]		6	10	16	20
Fluid		Air			
Action		Double acting			
Piping port size		M5 x 0.8			
Minimum operating pressure		0.2 MPa	0.1 MPa		0.08 MPa
Maximum operating pressure		0.7 MPa			
Proof pressure		1.05 MPa			
Ambient and fluid temperature		Without auto switch: −10 to 70°C (No freezing) With auto switch: −10 to 60°C (No freezing)			
Piston speed		50 to 500 mm/s			
Allowable kinetic energy [J]		0.0125	0.025	0.05	0.1
Lubrication	Cylinder unit	Non-lube			
	Guide unit	Lubrication recommended*1			
Cushion		Rubber bumper on both ends			
Stroke length tolerance		+1.0 0			

\*1 Depending on the operating conditions and environment, the performance of the linear guide can be significantly prolonged by regularly greasing the linear guide rails.

A grease pack is not included. Order it separately.

Grease pack part no.: GR-S-010 (10 g)

## Standard Strokes

Bore size [mm]	Standard stroke [mm]
<b>6</b>	5, 10, 15, 20, 25, 30, 40, 50, 60
<b>10</b>	5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 100
<b>16</b>	5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 100, 125
<b>20</b>	5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 100, 125, 150

\* Intermediate strokes are available with "Made to Order" model (-XC19). (For details, refer to page 22.)

## Theoretical Output

Bore size [mm]	Rod size [mm]	Operating direction	Piston area [mm²]	Operating pressure [MPa]		
				0.3	0.5	0.7
<b>6</b>	3	OUT	28	8	14	19
		IN	21	6	10	14
<b>10</b>	4	OUT	78	23	39	55
		IN	66	19	33	46
<b>16</b>	6	OUT	201	60	101	141
		IN	172	51	86	121
<b>20</b>	8	OUT	314	94	157	220
		IN	264	79	132	185

## Weight

														[g]
Bore size [mm]	Stroke [mm]													
	5 st	10 st	15 st	20 st	25 st	30 st	40 st	50 st	60 st	75 st	100 st	125 st	150 st	
6	61	68	75	82	89	96	110	124	137	—	—	—	—	
10	103	113	124	134	144	154	174	195	215	259	312	—	—	
16	182	196	210	224	238	251	279	306	333	406	481	554	—	
20	347	370	392	415	438	460	505	550	596	706	826	948	1069	


Refer to pages 17 and 18 for cylinders with auto switches.

- Minimum Stroke for Auto Switch Mounting
- Auto Switch Proper Mounting Position (Detection at Stroke End) and Mounting Height
- Auto Switch Mounting


# MXH2 Series

## Construction

ø6 to ø16

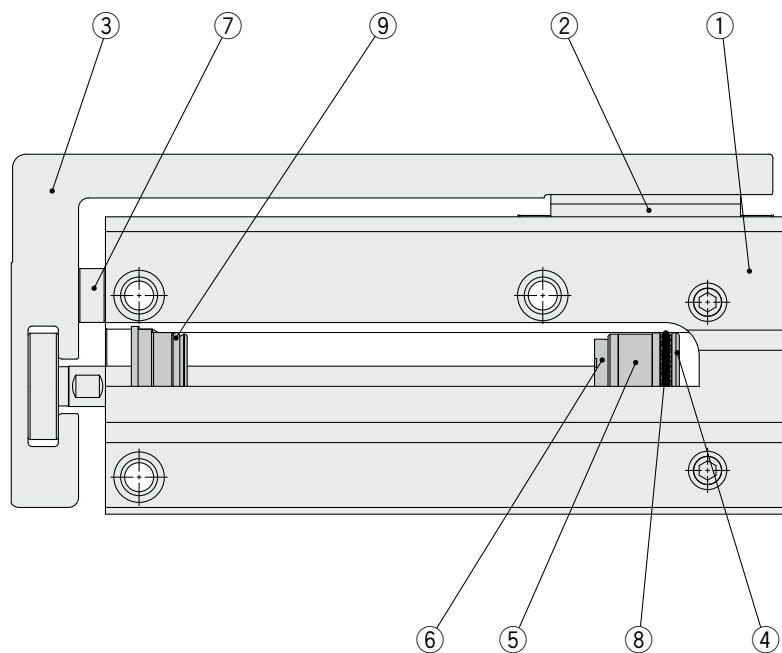

ø20

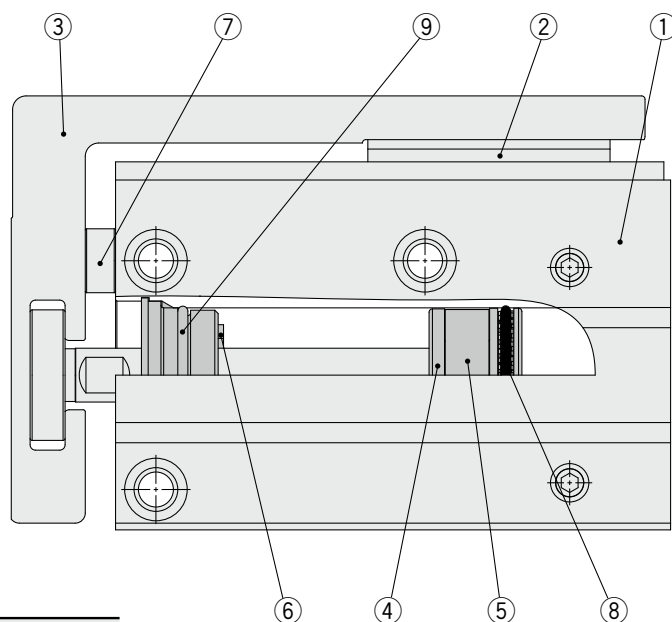


## Component Parts

No.	Description
1	Cylinder tube
2	Guide
3	Table
4	Piston
5	Magnet
6	Bumper
7	Bumper
8	Piston seal
9	Gasket

## Dimensions: **Ø6**

5 to 60 mm stroke

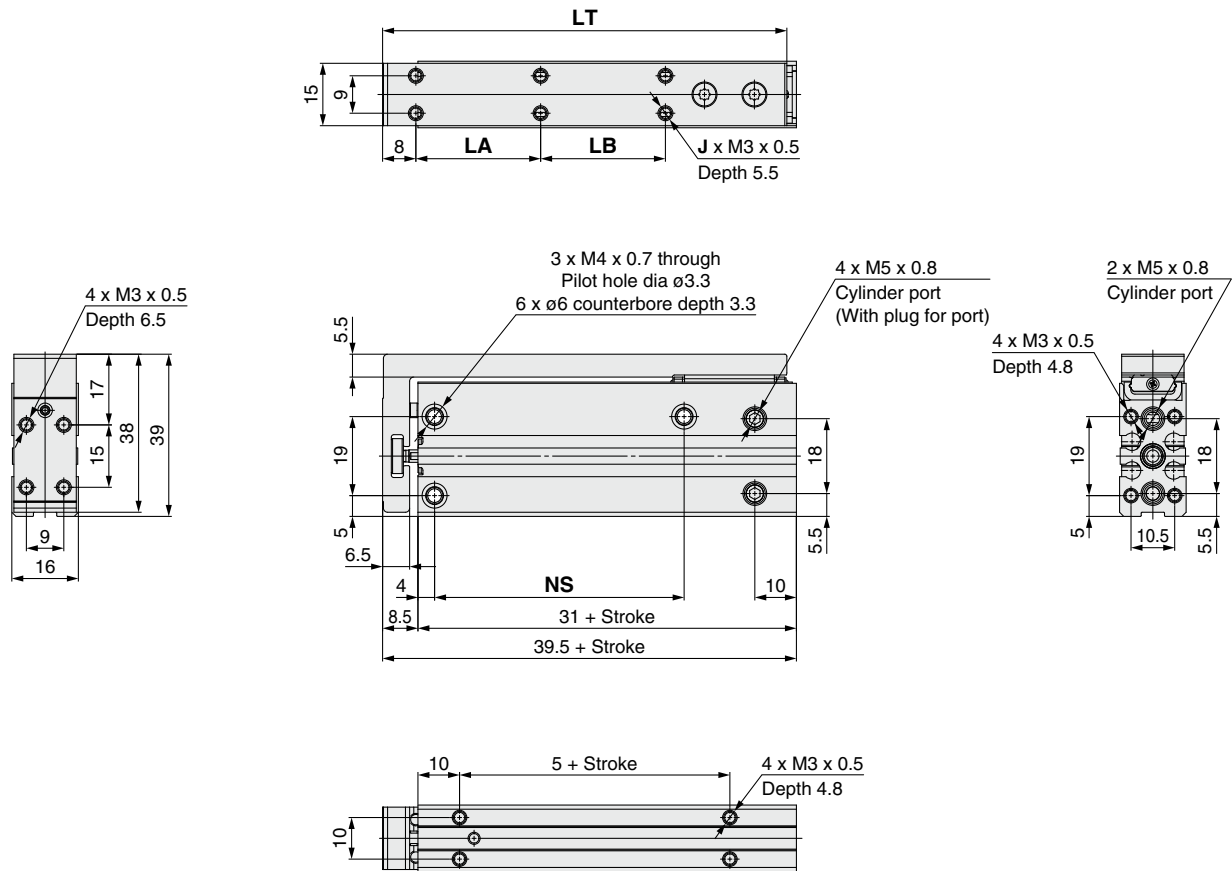


- \* Refer to "Specific Product Precautions" for mounting of the compact slide and a workpiece.
- \* Refer to "Specific Product Precautions" (p. 23) for details on changing port locations.

[mm]					
Stroke	J	LA	LB	LT	NS
5	4	10	—	42	14
10	4	10	—	47	14
15	4	20	—	52	24
20	4	20	—	57	24
25	4	30	—	62	30
30	4	30	—	67	30
40	6	20	20	77	45
50	6	25	25	87	55
60	6	30	30	97	60

# MXH2 Series

## Dimensions: $\varnothing 10$

5 to 60 mm stroke

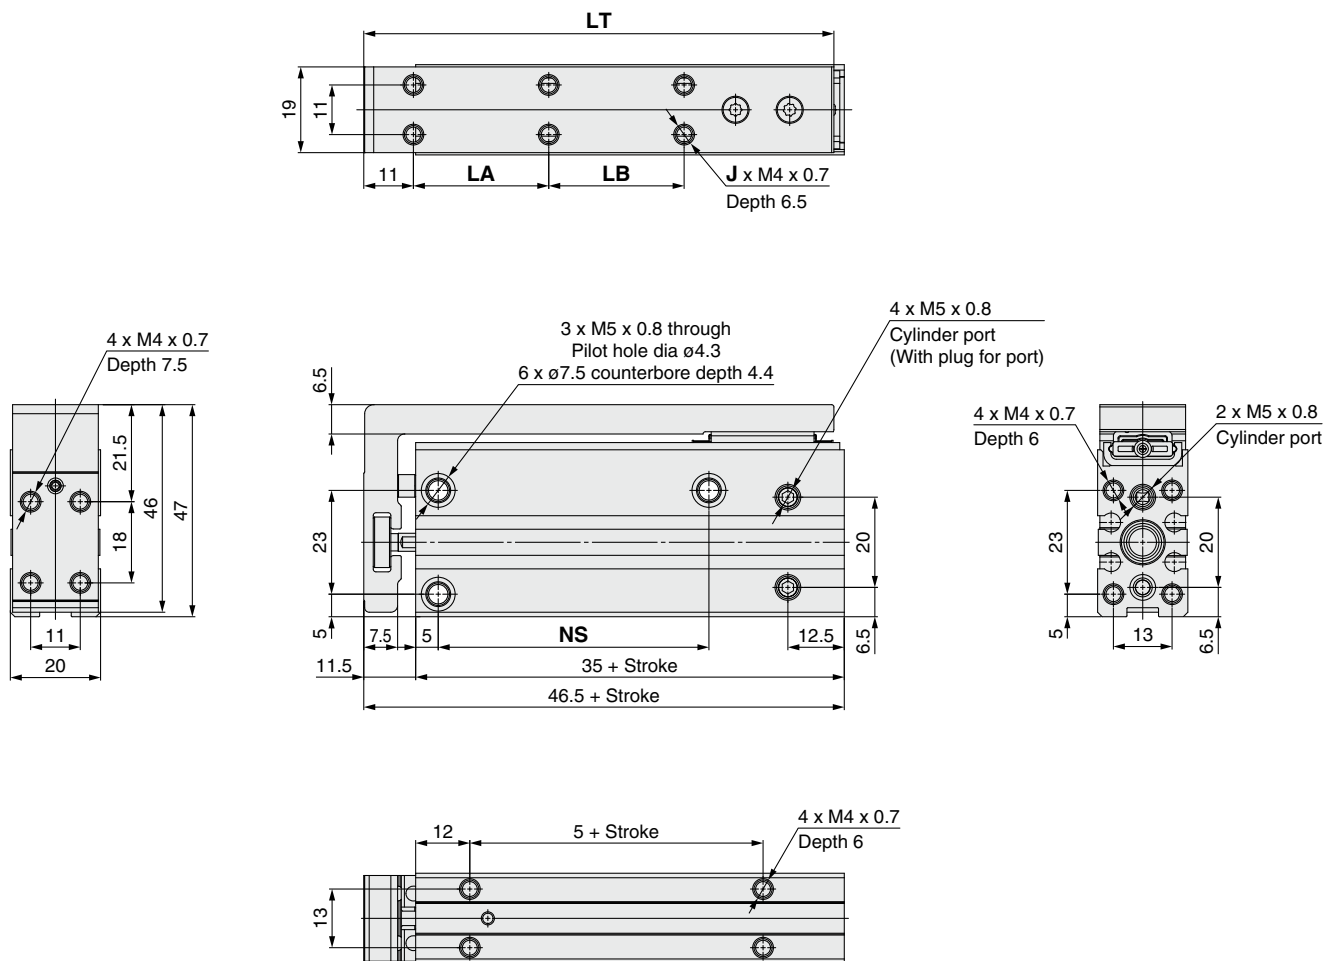


- \* Refer to "Specific Product Precautions" for mounting of the compact slide and a workpiece.
- \* Refer to "Specific Product Precautions" (p. 23) for details on changing port locations.

[mm]					
Stroke	J	LA	LB	LT	NS
5	4	10	—	49	14
10	4	10	—	54	14
15	4	20	—	59	24
20	4	20	—	64	24
25	4	30	—	69	30
30	4	30	—	74	30
40	6	20	20	84	45
50	6	25	25	94	55
60	6	30	30	104	60

## Dimensions: $\varnothing 10$

75 and 100 mm stroke

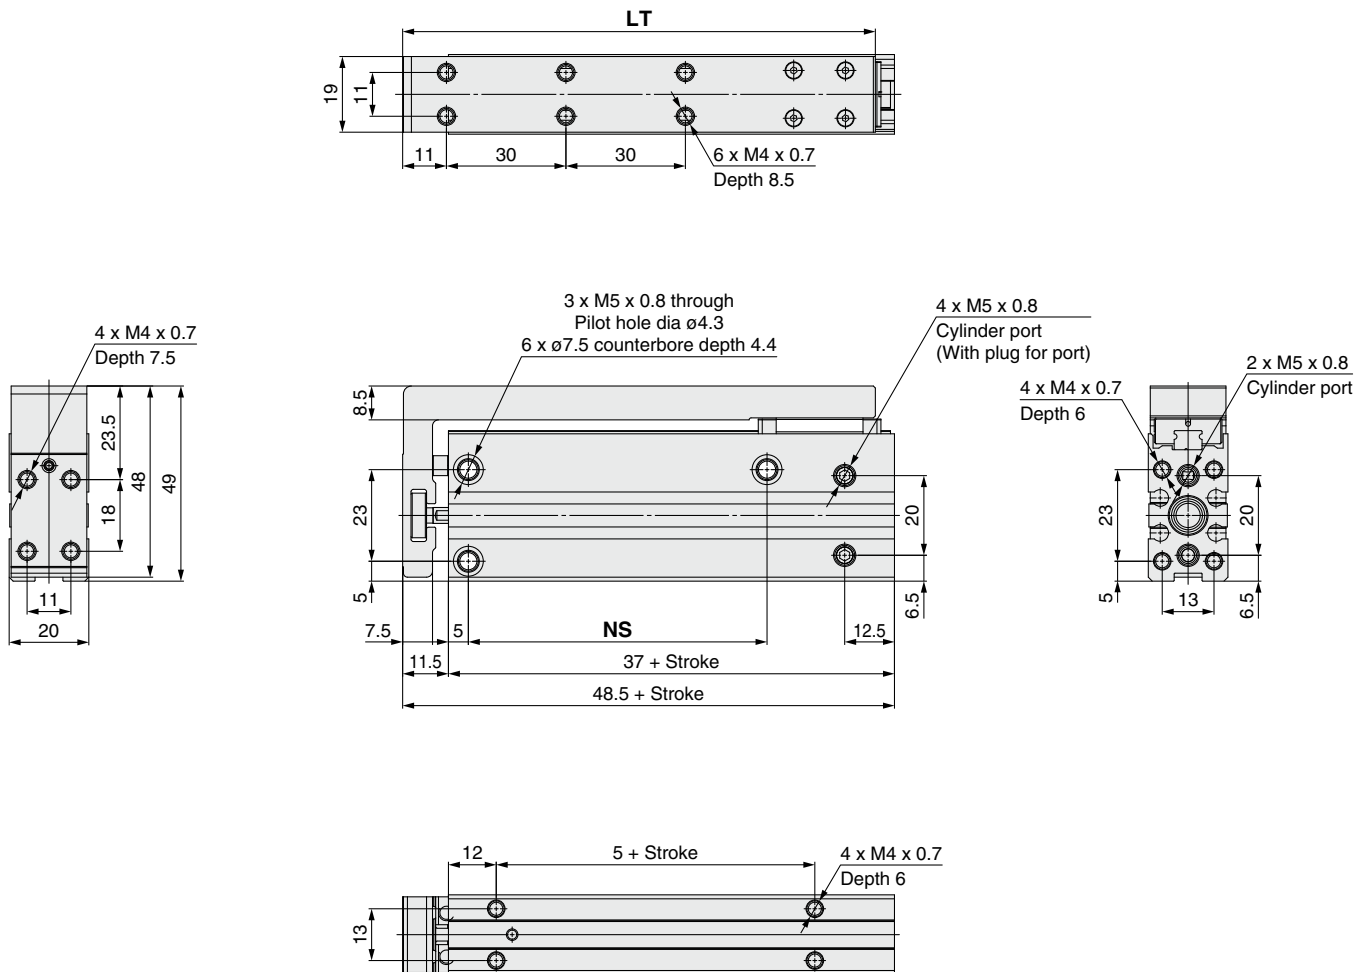

- \* Refer to "Specific Product Precautions" for mounting of the compact slide and a workpiece.
- \* Refer to "Specific Product Precautions" (p. 23) for details on changing port locations.


[mm]		
Stroke	LT	NS
<b>75</b>	119	75
<b>100</b>	144	100



# MXH2 Series

## Dimensions: Ø16

5 to 60 mm stroke

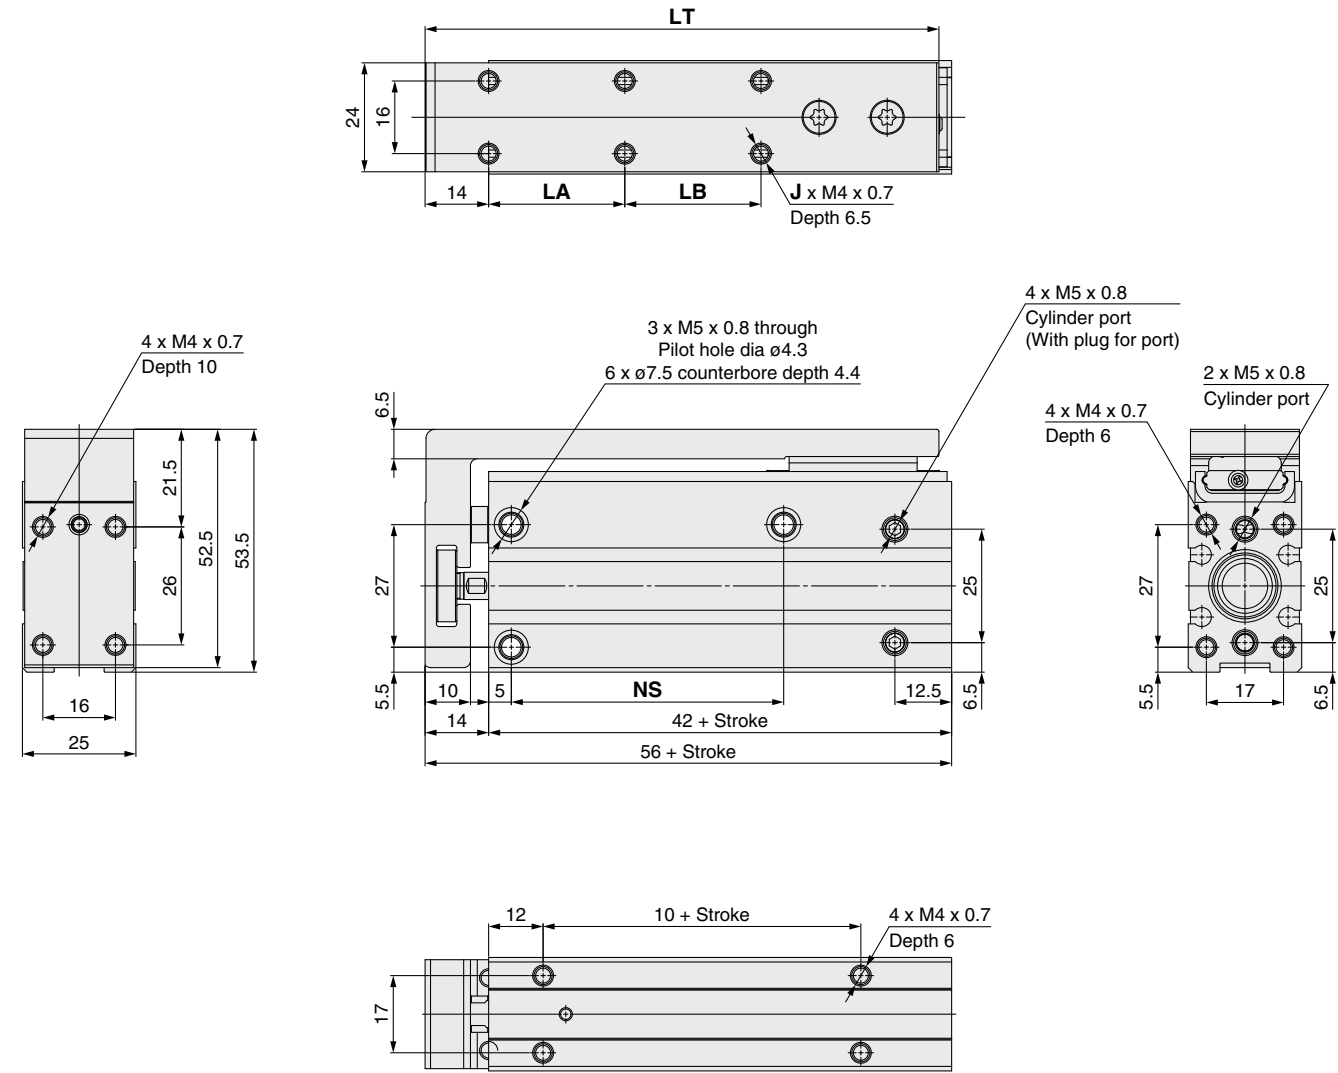


\* Refer to "Specific Product Precautions" for mounting of the compact slide and a workpiece.  
 \* Refer to "Specific Product Precautions" (p. 23) for details on changing port locations.

[mm]					
Stroke	J	LA	LB	LT	NS
5	4	10	—	58	20
10	4	10	—	63	20
15	4	20	—	68	30
20	4	20	—	73	30
25	4	30	—	78	40
30	4	30	—	83	40
40	6	20	20	93	50
50	6	25	25	103	60
60	6	30	30	113	60

## Dimensions: $\varnothing 16$

75, 100 and 125 mm stroke

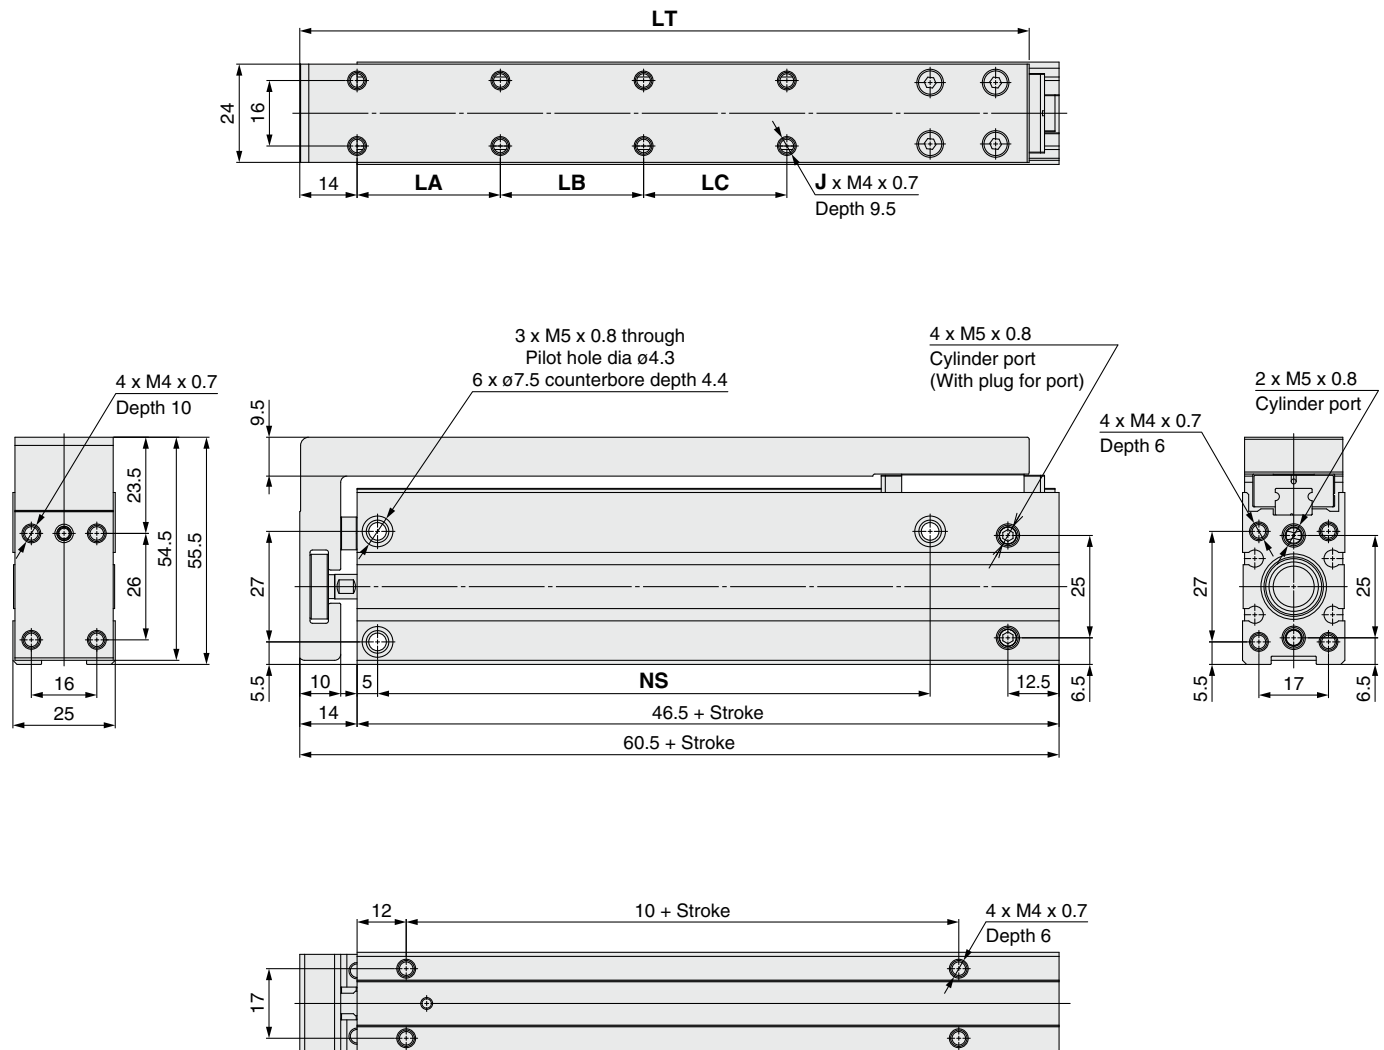


- \* Refer to "Specific Product Precautions" for mounting of the compact slide and a workpiece.
- \* Refer to "Specific Product Precautions" (p. 23) for details on changing port locations.

[mm]						
Stroke	J	LA	LB	LC	LT	NS
75	6	30	30	—	128.5	75
100	6	30	30	—	153.5	100
125	8	35	35	35	178.5	135

# MXH2 Series

## Dimensions: Ø20

5 to 60 mm stroke

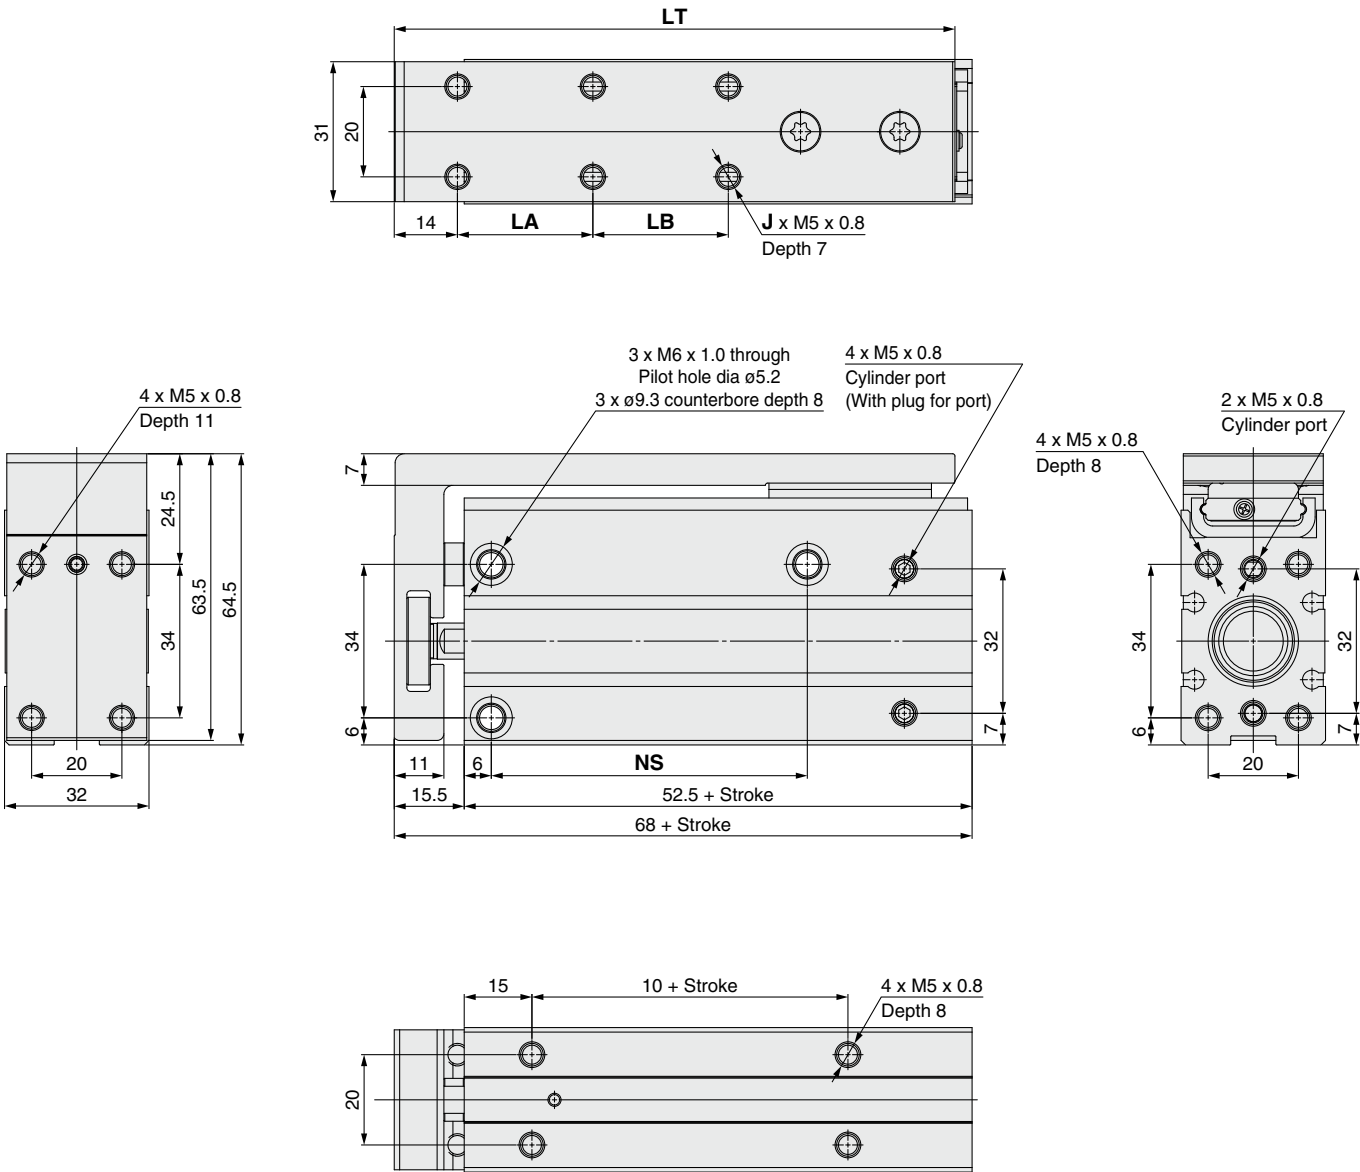


\* Refer to "Specific Product Precautions" for mounting of the compact slide and a workpiece.  
\* Refer to "Specific Product Precautions" (p. 23) for details on changing port locations.

[mm]					
Stroke	J	LA	LB	LT	NS
5	4	10	—	69	20
10	4	10	—	74	20
15	4	20	—	79	25
20	4	20	—	84	25
25	4	30	—	89	40
30	4	30	—	94	40
40	6	20	20	104	50
50	6	25	25	114	70
60	6	30	30	124	70

## Dimensions: $\varnothing 20$

75, 100, 125 and 150 mm stroke

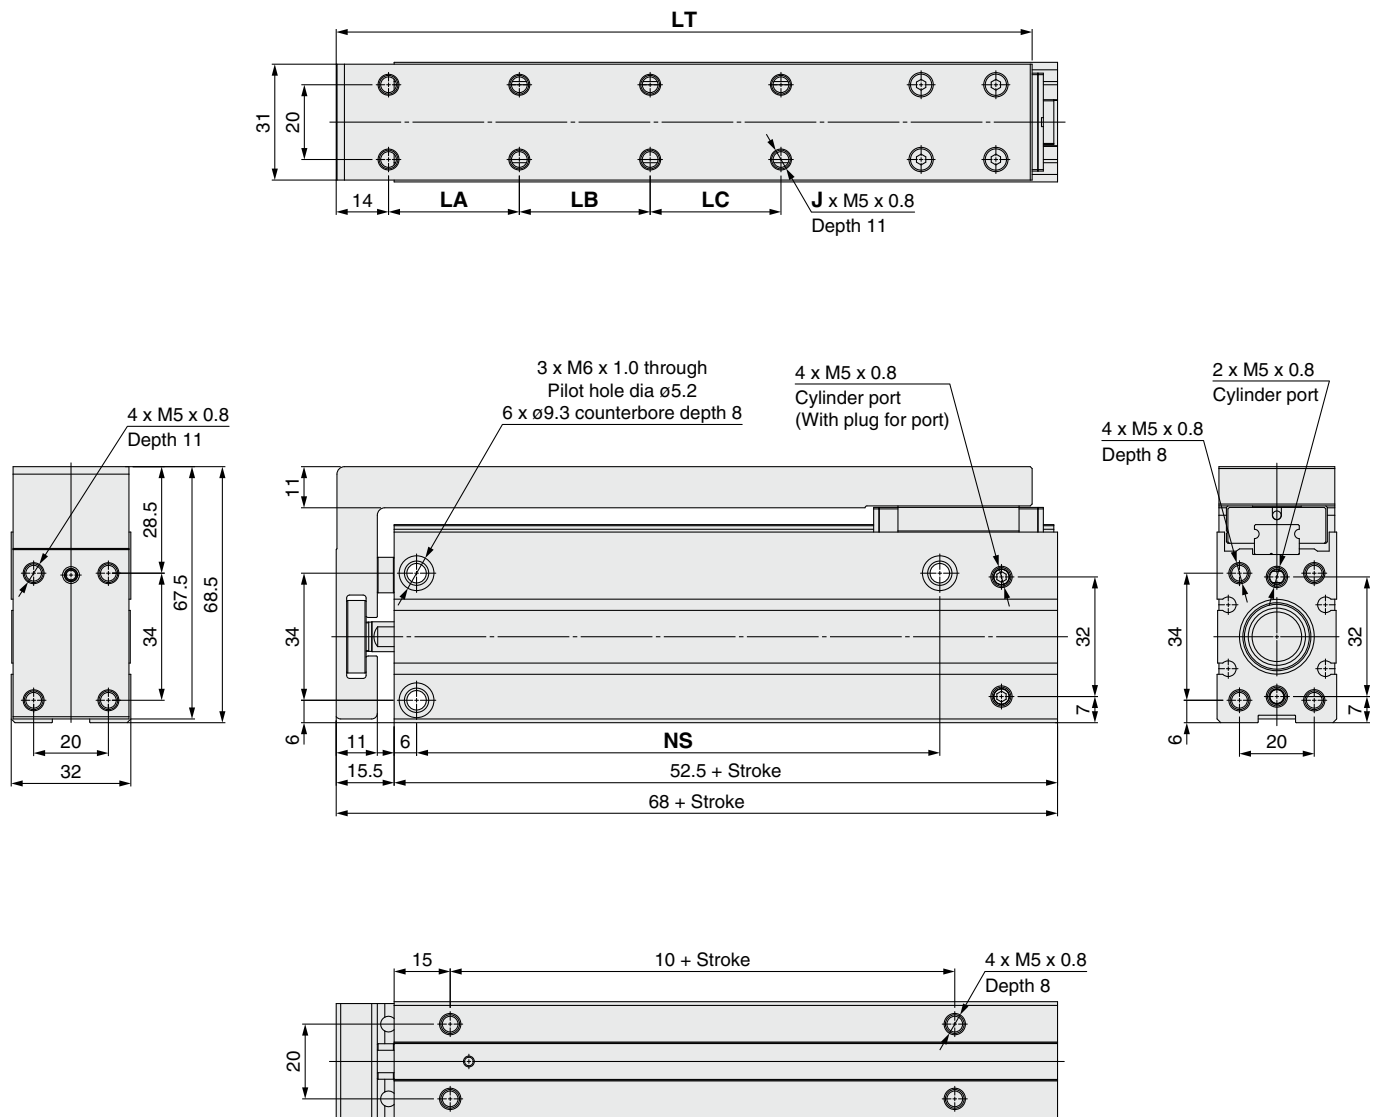

- \* Refer to "Specific Product Precautions" for mounting of the compact slide and a workpiece.
- \* Refer to "Specific Product Precautions" (p. 23) for details on changing port locations.

[mm]						
Stroke	J	LA	LB	LC	LT	NS
<b>75</b>	6	30	30	—	136.5	90
<b>100</b>	6	30	30	—	161.5	115
<b>125</b>	8	35	35	35	186.5	140
<b>150</b>	8	35	35	35	211.5	165

# MXH2 Series


# Auto Switch Mounting

## Minimum Stroke for Auto Switch Mounting

Number of auto switches mounted	Applicable auto switch model		
	D-M9□, M9□V	D-M9□W, M9□WV D-M9□A, M9□AV	D-A9□, A9□V
1 pc.	5	5	5
2 pcs.	5	10	10


## Auto Switch Proper Mounting Position (Detection at Stroke End) and Mounting Height

D-M9□  
D-M9□W  
D-M9□A  
D-A9□

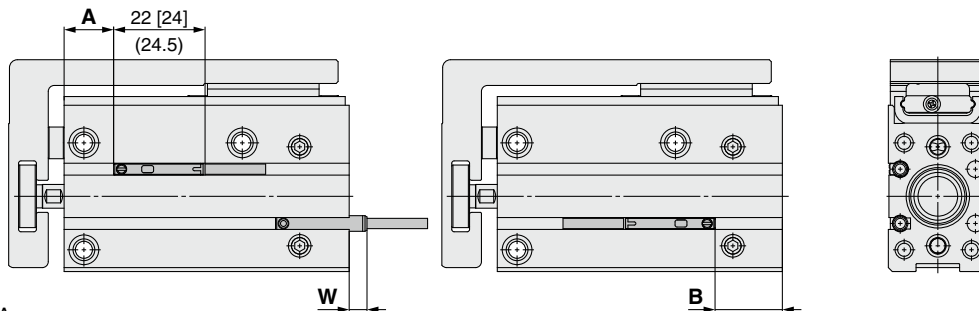

[ ]: Value of the D-M9□A  
( ): Value of the D-A90/A93

D-M9□V  
D-M9□WV  
D-M9□AV  
D-A9□V

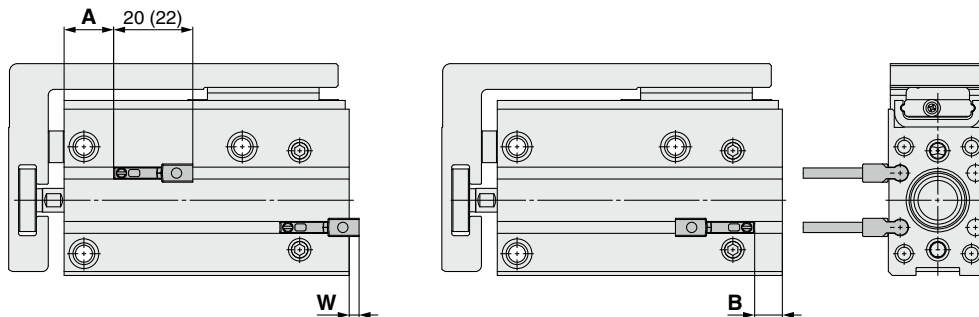

( ): Value of the D-M9□AV/A9□V

Bore size [mm]	D-M9□W/D-M9□			D-M9□WV/D-M9□V			D-M9□A			D-M9□AV			D-A90, A93			D-A96/D-A9□V		
	A	W	B	A	W	B	A	W	B	A	W	B	A	W	B	A	W	B
6	12.0	3.5	6.5	12.0	1.5	6.5	12.0	5.5	6.5	12.0	3.5	6.5	8.0	2.0	2.5	8.0	-0.5	2.5
10	10.0	-2.5 (-4.5)	12.5 (14.5)	10.0	-4.5 (-6.5)	12.5 (14.5)	10.0	-0.5 (-2.5)	12.5 (14.5)	10.0	-2.5 (-4.5)	12.5 (14.5)	6.0	-4.0 (-6.0)	8.5 (10.5)	6.0	-6.5 (-8.5)	8.5 (10.5)
16	12.0	-7.0 (-11.5)	17.0 (21.5)	12.0	-9.0 (-13.5)	17.0 (21.5)	12.0	-5.0 (-9.5)	17.0 (21.5)	12.0	-7.0 (-11.5)	17.0 (21.5)	8.0	-8.5 (-13.0)	13.0 (17.5)	8.0	-11.0 (-15.5)	13.0 (17.5)
20	17.5	-14.0	24.0	17.5	-16.0	24.0	17.5	-12.0	24.0	17.5	-14.0	24.0	13.5	-15.5	20.0	13.5	-18.0	20.0

\* Negative figures in the table W indicate that an auto switch is mounted inward from the edge of the cylinder body.

\* In the case of models with 5 and 10 strokes, the auto switch may not turn off due to operating range or two auto switches may turn on simultaneously. Fix auto switches outside 1 to 4 mm further than the values in the table above. (If one auto switch is used, make sure that it turns ON and OFF properly; If two auto switches are used, make sure that both auto switches turn ON.)

\* Values in brackets ( ) in the tables are dimensions for 75 mm or longer strokes.

## Operating Range

[mm]

Auto switch model	Bore size			
	6	10	16	20
D-M9□, M9□V D-M9□W, M9□WV D-M9□A, M9□AV	3	3.5	5	6
D-A9□, A9□V	5	6	9	11


\* Values which include hysteresis are for guideline purposes only, they are not a guarantee (assuming approx. ±30% dispersion) and may change substantially depending on the ambient environment.

Other than the applicable auto switches listed in "How to Order", the following auto switches can be mounted.

\* Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)) are also available. Refer to the **Web Catalog** for details.



## Auto Switch Mounting

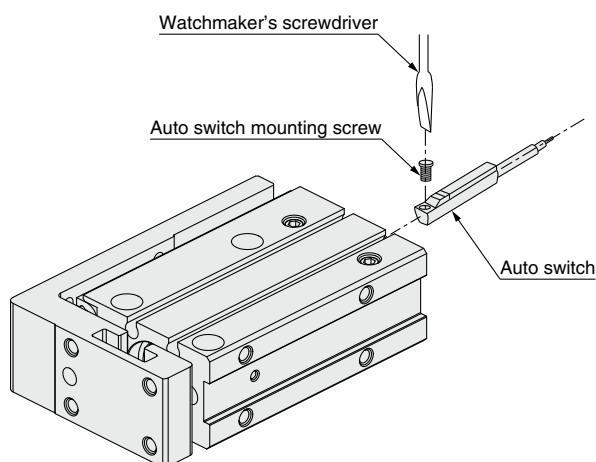

- When tightening the auto switch mounting screw, use a watchmaker's screwdriver with a handle 5 to 6 mm in diameter.

### Tightening Torque of Auto Switch Mounting Screw [N·m]

Auto switch model	Tightening torque
D-M9□(V) D-M9□W(V) D-A93	0.05 to 0.15
D-M9□A(V)	0.05 to 0.10
D-A9□(V)(Excludes the D-A93)	0.10 to 0.20

- \* When used with side ported type, it is not possible to mount the D-A9□V/M9□V type on the side to which the piping is connected.


## ⚠ Auto Switch Mounting

### When installing in close proximity to each other


When the compact slide with the D-A9□ or D-M9□ auto switch is used, the auto switches could activate unintentionally if the space between the products is less than the dimension shown in Table 1. Therefore, make sure to provide at least this much clearance. Due to unavoidable circumstances, if they must be used with less distance than the dimensions given in the table on the right, the cylinders must be shielded. Therefore, affix a steel plate or a magnetic shielding plate (MU-S025) to the area on the cylinder that corresponds to the adjacent auto switch. (Please contact SMC for details.) The auto switch could activate unintentionally if a shielding plate is not used.

Table 1. [mm]

Bore size [mm]	d	L
6	5	21
10	5	25
16	10	35
20	15	47

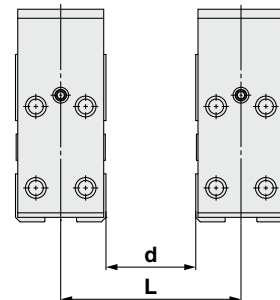

 Dimensions of a shielding plate (MU-S025) that is sold separately are indicated as reference.




Material: Ferrite stainless steel,  
Thickness: 0.3 mm  
Since the back side is treated with adhesive, it is possible to attach to the cylinder.

# Prior to Use


## Auto Switch Connections and Examples

### Sink Input Specifications

#### 3-wire, NPN

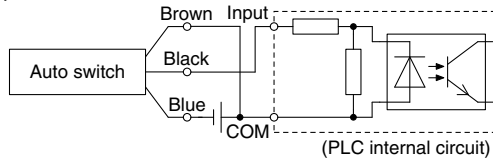


#### 2-wire

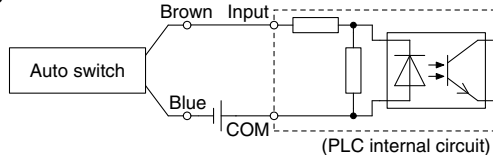


### Source Input Specifications

#### 3-wire, PNP

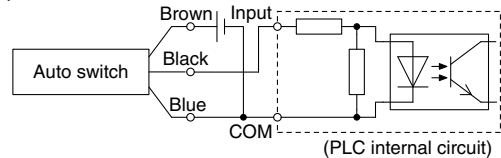

#### 2-wire

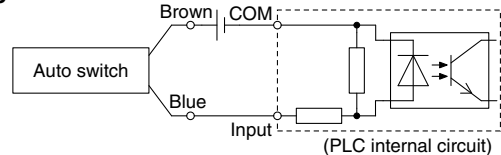


Connect according to the applicable PLC input specifications, as the connection method will vary depending on the PLC input specifications.

### Examples of AND (Series) and OR (Parallel) Connections


\* When using solid state auto switches, ensure the application is set up so the signals for the first 50 ms are invalid. Depending on the operating environment, the product may not operate properly.

#### 3-wire AND connection for NPN output


(Using relays)

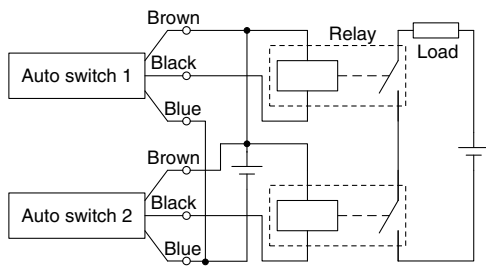

(Performed with auto switches only)

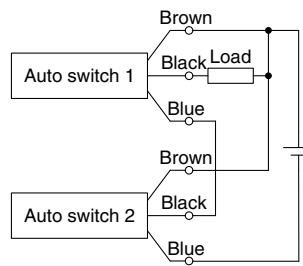


#### 3-wire OR connection for NPN output

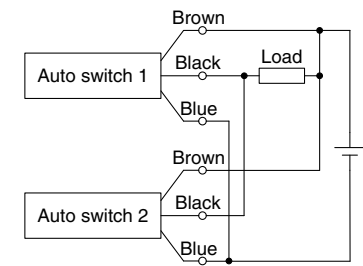


#### 3-wire AND connection for PNP output


(Using relays)

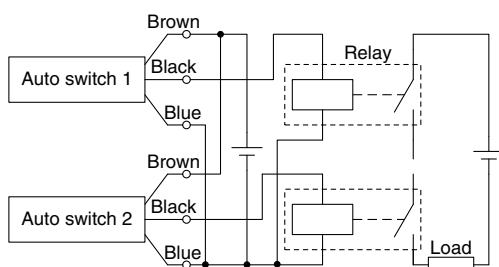


(Performed with auto switches only)

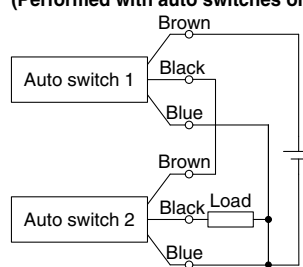

#### 3-wire OR connection for PNP output

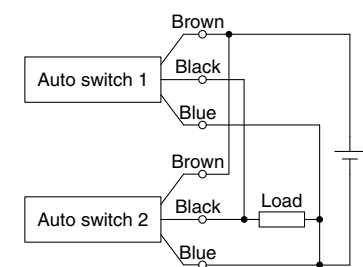


#### 2-wire AND connection

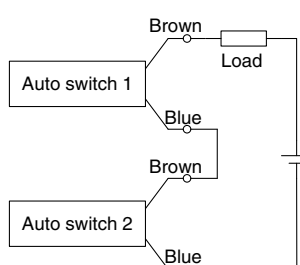

When two auto switches are connected in series, a load may malfunction because the load voltage will decline when in the ON state. The indicator lights will light up when both of the auto switches are in the ON state. Auto switches with a load voltage less than 20 V cannot be used. Please contact SMC if using AND connection for a heat-resistant solid state auto switch or a trimmer switch.

Example) Load voltage at ON  
Power supply voltage: 24 VDC  
Internal voltage drop: 4 V  
Load voltage at ON = Power supply voltage –  
Auto switch internal voltage drop x 2 pcs.  
= 24 V – 4 V x 2 pcs.  
= 16 V

#### 2-wire OR connection

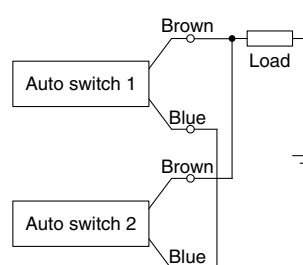

Example) Load voltage at OFF  
Leakage current: 1 mA  
Load impedance: 3 kΩ  
Load voltage at OFF = Leakage current x 2 pcs. x  
Load impedance  
= 1 mA x 2 pcs. x 3 kΩ  
= 6 V

(Solid state)  
When two auto switches are connected in parallel, malfunction may occur because the load voltage will increase when in the OFF state.

(Reed)  
Because there is no current leakage, the load voltage will not increase when turned OFF. However, depending on the number of auto switches in the ON state, the indicator lights may sometimes grow dim or not light up, due to the dispersion and reduction of the current flowing to the auto switches.

# MXH2 Series Simple Specials

The following changes are dealt with through the Simple Specials System.

Please contact your local sales representative for more details.

## 1 Tapped Hole, Drilled Hole, Pinned Hole Machined Additionally

Symbol  
**-XC79**

This simple special is meant for machining additionally tapped hole, drilled hole, and pinned hole, as requested from customer, on parts designed largely for mounting a workpiece, etc. in the combined air cylinders.

But, for each model, since they have the portions which are impossible to machine additionally, refer to the additional machining limitation.

### Applicable Series and Component Parts Machined Additionally

Applicable series	Component parts applicable for additional machining
MXH2	Table

### ⚠ Precautions


- We cannot take any responsibility as for the intensity of holes machined additionally and the effects of decreased intensity for the product itself.
- It will not be plated again for the machined part additionally.
- Be sure to fill in "through" for through-hole, and "effective depth" for blind hole.
- When using by machining through-hole additionally, ensure that the tip of the bolt, etc. for mounting workpiece should not stick into the cylinder side. It may result in an unexpected problem.
- Use caution not to interfere the current mounting hole on the standard products with the hole to be machined additionally. But it is possible to drill additionally the larger size of hole at the same position as the current hole.

### Common Complementary Explanation/Holes which can be additionally machined are the following 3 types.

#### Tapped hole

Designated nominal diameter and tapped hole of a pitch are machined additionally. (Maximum nominal thread diameter M20)

Blind hole is deep into the bottom of prepared hole which sums up A to C in the figure below in contrast to the effective depth of tapped hole. When there is a condition which does not allow through-hole, etc., leave sufficient thickness in the inner part of hole.

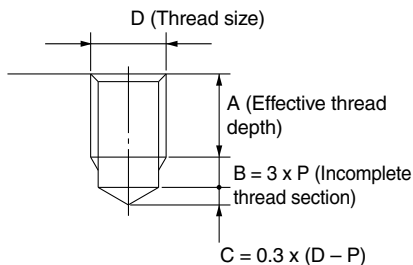


\* P stands for thread pitch.

#### Drilled hole

Drilled hole of a designated internal diameter is machined. (Maximum hole diameter 20 mm)

If you wish for blind hole, instruct us with effective depth. (Refer to the figure below.) Besides, dimensional accuracy for internal diameter will be  $\pm 0.2$  mm.

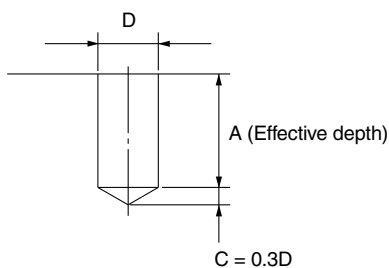


#### Pinned hole

Pinned hole of a designated diameter (reamer hole) is machined. (Maximum hole diameter 20 mm)

Internal dimension tolerates H7 tolerance to the designated hole diameter. (Refer to the table below.)


Hole dia.	3 or less	Over 3 to 6	Over 6 to 10	Over 10 to 18	Over 18 to 20
Tolerance	+0.01 0	+0.012 0	+0.015 0	+0.018 0	+0.021 0

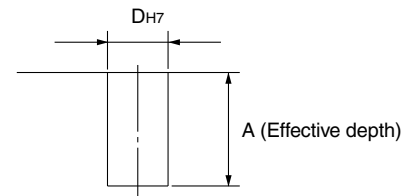

**Limitation for Machining Additionally/Since the slanted lines denote the restricted range for machining additionally, design the dimensions, referring to below.**

### MXH2 series

 Table material: Aluminum



### Dimensional Range Not Possible to Machine Additionally [mm]

Bore size [mm]	LX	LY	LZ
6	28	11	8
10	31	14	8.5
16	39	19	8.5
20	48	23	10.5

## 1 Low-speed Cylinder (5 to 50 mm/s)

 
Symbol

**-XB13**

Stick-slip phenomenon can be prevented, and smooth operation can be achieved even at lower driving speeds between 5 to 50 mm/s.

Description	Model	Action	Note
Compact slide	MXH2	Double acting	

### How to Order



- \* Operate without lubrication from a pneumatic system lubricator.
- \* For the speed adjustment, use speed controllers for controlling at lower speeds. (AS-FM/AS-M series)

### Specifications

Piston speed	5 to 50 mm/s
Dimensions	Same as the standard type
Additional specifications	Same as the standard type

## 2 Special Port Location


Symbol

**-XC3□**

Cylinder with a modified port position in comparison to the standard type.

Description	Model	Action	Note
Compact slide	MXH2	Double acting	

### How to Order

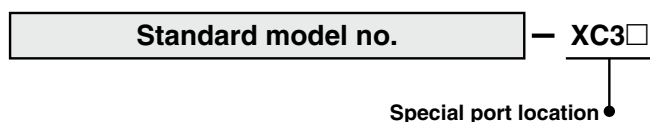

### Specifications: Same as the standard type

The port location of a standard product is in the axial direction, and it is shipped as plugged on both sides. However, side ported types can be ordered. A shifting of the plugs is not required by the customer.

### Relation between Port Location and Plug Location

Standard	-XC3A	-XC3B

### 3 Intermediate Stroke (Spacer type)

Symbol  
**-XC19**

Dealing with intermediate strokes by installing a spacer with the standard stroke cylinder.

Description	Model	Action	Note
Compact slide	MXH2	Double acting	Available through the use of 5 or 10 mm spacers

#### How to Order

Standard model no.	-XC19
	Intermediate stroke (Spacer type)

#### Specifications

Intermediate stroke Product dimensions and mounting dimensions	Refer to Table 1 below.
Specifications other than the above	Same as the standard type

**Table 1. Intermediate Stroke (Spacer type)**

Intermediate stroke	Stroke																
	35	45	55	65	70	80	85	90	95	105	110	115	120	130	135	140	145
Product dimensions and mounting dimensions	Same as 40 mm stroke	Same as 50 mm stroke	Same as 60 mm stroke	Same as 75 mm stroke		Same as 100 mm stroke				Same as 125 mm stroke				Same as 150 mm stroke			

- Dealing with it by installing a 5 mm or 10 mm width spacer with the standard stroke cylinder
- Intermediate strokes not listed in the table are available as a special order.

### 4 Fluororubber Seals

Symbol  
**-XC22**

Description	Model	Action	Note
Compact slide	MXH2	Double acting	

#### How to Order

Standard model no.	-XC22
	Fluororubber seals

#### Specifications

Seal material	Fluororubber
Ambient temperature range	*1 With auto switch : -10°C to 60°C Without auto switch: -10°C to 70°C (No freezing)
Specifications that are not listed above Product dimensions and mounting dimensions	Same as the standard type

\*1 Please confirm with SMC, as the type of chemical and the operating temperature may not allow the use of this product.

\* Cylinders with auto switches can also be produced; however, auto switch related parts (auto switch units, mounting brackets, built-in magnets) are the same as standard products. Before using these, please contact SMC regarding their suitability for the operating environment.





## MXH2 Series

# Specific Product Precautions

Be sure to read this before handling the products. For safety instructions, actuator, and auto switch precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>


### Operating Precautions

#### ⚠ Warning

Be aware that smoking cigarettes etc., after your hands have come into contact with the grease used in this cylinder can create a gas that is hazardous to humans.

#### ⚠ Caution


1. If the vibration of the workpiece due to cylinder operation is clearly noticeable, recheck the operating conditions. Even when the moment applied to the product is under the allowable moment, the vibration width may be increased if a large amount of eccentric load is applied.
2. Do not touch the piston rod. External force may cause the connection between the table and the piston rod to twist, resulting in malfunction.

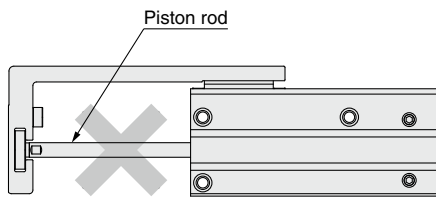

### Operating Direction with Different Pressure Ports

#### ⚠ Caution

1. The compact slide can be piped from 3 directions. Refer to the figure below for the operating directions of the different pressure ports.  
Change the plug position according to the usage conditions. When changing the port position, use the removed plug or a replacement plug (below). If reusing the removed plug, apply sealant, etc., before reassembly. If using a replacement plug, apply a thin layer of grease all the way around the male thread before use. In addition, clear any foreign matter adhered to the port the plug was removed from before piping.  
After reassembly, be sure to check for air leakage before operating the product.

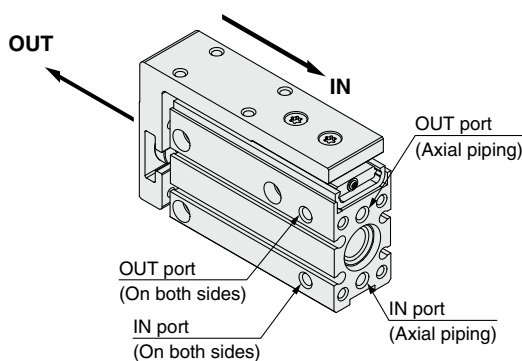


Replacement plug part number: MXH-P (2 pcs.)

### Operating Direction with Different Pressure Ports

#### ⚠ Caution


2. If the plug is tightened excessively when attaching it to the axial piping of MXH2B6, it may be in contact with the internal steel ball, causing air leakage.  
As for the plug tightening guide, make the adjustment so that the plug sunk dimension from the cylinder tube surface is 0 to less than 1 mm.

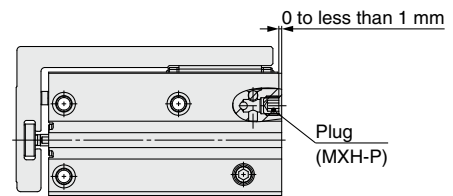

### Backlash in the Stroke Direction

#### ⚠ Caution

1. Since the connection between the piston rod and table is a floating mechanism, the table has backlash in the stroke direction.

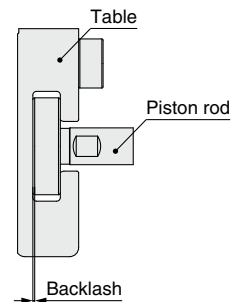

Connecting part of piston rod and table


### Mounting


#### ⚠ Caution


1. Refer to the operation manual for the method to mount the compact slide, the bolt lengths required to mount the workpiece, the tightening torque for each part etc. In particular when mounting a workpiece onto the table, be aware the workpiece may come into contact with the linear guide if it is mounted with longer screws than specified.

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

 **Danger :** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

 **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

 **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

\*1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components  
ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components  
IEC 60204-1: Safety of machinery - Electrical equipment of machines - Part 1: General requirements  
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots etc.

### Warning

#### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

#### 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

#### 4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogs and operation manuals.
3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

### Caution

**We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries.**

**Use in non-manufacturing industries is not covered.**

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

## Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

### Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)  
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.  
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.


\*2) **Vacuum pads are excluded from this 1 year warranty.**

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

 **Safety Instructions** Be sure to read the “Handling Precautions for SMC Products” (M-E03-3) and “Operation Manual” before use.

## SMC Corporation

Akihabara UDX 15F,  
4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN  
Phone: 03-5207-8249 Fax: 03-5298-5362  
<https://www.smcworld.com>  
© 2023 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice  
and any obligation on the part of the manufacturer.

D-G