Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod

CG1KW-Z Series ø20, ø25 ø32. ø40 ø50. ø63



Actuators

Rotary Actuators Air Grippers

Equipment


Control E Modular F.R.L Pressure (

Air Preparation Equipment

Filters

ndustrial

Construction

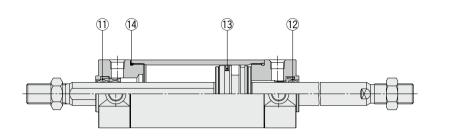

* The numbers correspond with those in the "Construction" of the CG1KW-Z series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note		
1	Rod seal A				
12	Rod seal B	NBR			
13	Piston seal	INDR			
14	Tube gasket				

Disassembly/Replacement

A Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

4. Please consult with SMC when the rod seal is to be replaced.

A rod seal may allow air leakage depending on the position where it is installed. Therefore, please contact SMC when a rod seal is to be replaced.


Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
20	CG1KWN20Z-PS	Set of nos.	
25	CG1KWN25Z-PS		
32	CG1KWN32Z-PS	(1), (12, (13, (14	
40	CG1KWN40Z-PS		

* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is required.

 Grease pack part no.: GR-S-010 (10 g)



1

