



Operation Manual

PRODUCT NAME

Separate Controller Ionizer

MODEL / Series

IZT40
IZT41/42 series (Transistor input/output type)
IZT41-L/42-L series (IO-Link type)

SMC Corporation

Contents

Safety Instructions	3
1. How to Order	11
1-1. System construction	11
1-2. How to Order	14
1-2-1. Product number for single unit (to order separately)	15
1-2-2. Made to Order	17
1-2-3. Accessories (ordered separately)	18
1-2-4. Sold separately	20
2. Procedures to Operation	22
2-1. Flow chart to operation	22
2-2. Initial setting (IZT41/42) ※Initial setting is not necessary for IZT40)	22
3. Installation and wiring	23
3-1. Installation of Ionizer	23
3-1-1. Precautions for Installation	23
3-1-2. Adjustment of Pressure (Flow adjustment)	23
3-1-3. Selection of piping port size	23
3-1-4. Distance for installation	24
3-1-5. Installation of bracket for bar	24
3-1-6. Connecting the controller and high voltage power supply module	25
3-1-7. Installing the controller and high voltage power supply module	27
3-1-8. Routing of cables	32
3-2. Wiring (IZT40/41/42)	35
3-2-1. Ground the F.G. cable	35
3-2-2. Connection Circuit	35
3-2-3. Wiring of the AC adapter (IZT40/41/42)	37
3-3. Timing chart (IZT40/41/42)	38
3-3-1. IZT40	38
3-3-2. IZT41, IZT42	41
4. Function	45
4-1. Name of Parts	45
4-1-1. Controller	45
4-1-2. High voltage power supply module	47
4-2. Operation modes	48
4-2-1. Operation modes of IZT40 and IZT41(-L)	48
4-2-2. Operation modes of IZT42(-L)	48
4-3. High voltage power supply module CH number setting	49
4-4. Controller setting	50
4-4-1. Operation overview	50
4-4-2. Channel selection mode	52
4-4-3. Frequency set mode	53
4-4-4. Offset voltage adjustment mode	54
4-4-5. Balance control selection mode	55
4-4-6. Maintenance detection level selection mode	56
4-4-7. Key-lock setting mode	57
4-4-8. Ion generation stop mode	58
4-5. Alarm function (IZT40/41/42)	59
4-5-1. Alarms for IZT40	59
4-5-2. Alarms for IZT41 and IZT42	60
4-5-3. Details of the alarms	61
5. Performance	63
5-1. Installation distance and Discharge time (Discharge time of 1000V→100V)	63
5-2. Potential amplitude	65
5-3. Static neutralization range	66
5-4. Flow - Pressure characteristics	69
6. Dimensions	70
7. Specifications	79
8. Troubleshooting	81
9. Maintenance	82



Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

*1) ISO 4414: Pneumatic fluid power -- General rules relating to systems.
ISO 4413: Hydraulic fluid power -- General rules relating to systems.
IEC 60204-1: Safety of machinery -- Electrical equipment of machines .(Part 1: General requirements)
ISO 10218: Manipulating industrial robots -Safety.
etc.

	Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
	Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
	Danger	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results.

The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product.

This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly.

The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.

2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.

2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.

3. An application which could have negative effects on people, property, or animals requiring special safety analysis.

4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.



Safety Instructions

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2)

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.

This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

***2) Vacuum pads are excluded from this 1 year warranty.**

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction(WMD) or any other weapon is strictly prohibited.

2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulation of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Selection

Warning

- 1) This product is intended for use in general factory automation equipment.**
 - If considering using the product for other applications (especially those indicated in (4) on page 3), please consult SMC beforehand.
- 2) Use within the specified voltage and temperature range.**
 - Operation with a voltage other than that specified can cause malfunction, damage to the product, electric shock or fire.
- 3) Use clean compressed air as fluid. (Air quality Class 2.4.3, 2.5.3, 2.6.3 or higher according to ISO 8573-1: 2012 is recommended.)**
 - Never use flammable gas or an explosive gas as a fluid and never use this product in the presence of such gases.
 - This may lead to fire or explosion. Please contact SMC if using for fluids other than compressed air.
- 4) This product is not designed to be explosion proof.**
 - Never use in an atmosphere of potentially explosive dust, flammable gas or explosive gas. Fire or an explosion can result.

Caution

- 1) Clean room specification is not available.**
 - When using in a clean room environment, confirm the required cleanliness before use.
 - Fine particles are generated due to wear of emitters and motor sliding during operation.

Mounting

Warning

- 1) Reserve an enough space for maintenance, piping and wiring.**
 - Please take into consideration that the one-touch fittings for supplying air, need enough space for the air tubing to be easily attached/detached.
 - To avoid unreasonable stress applied to the connector and one-touch fitting mounting parts, bending of the cable or air tubing should be more than the minimum bending radius.
 - If the cable is bent in an acute angle or load is applied to the cable repeatedly, it may cause malfunction, wire damage or fire.
 - Minimum bending radius: Power supply cable (IZT40/41/42) : 40mm
 - Power supply cable (IZT41-L/42-L) : 48mm
 - Communication cable (IZT41-L/42-L) : 40mm
 - Separate cable (optional) : 40mm
 - High voltage cable : 30mm

NOTE: This is an allowable bend radius at 20°C. Bend radius should be larger at lower than 20°C. Regarding the minimum bending radius of the air tubing, refer to the operation manual or catalog for tubing.
- 2) Wiring high voltage cable**
 - Use specified cable holder (IZT40-E1 or IZT40-E2) for installing high voltage cables.
 - Follow the items below when installing high voltage cables. If items below are not followed, insulation performance of high voltage cable decreases, causing the failure of this product, leading to electrical shock or fire.
 - a. Do not cut the cable.
 - b. Keep the minimum bend radius of the cable.
 - c. Do not tighten the cable too much by tying band. Do not deform the cable by placing object on the cable.
 - d. Avoid the factor of cable runaway such as cable duct.
 - e. Do not twist or damage to the cable. If the cable is damaged, the bar should be replaced.

3) Fix the high voltage cable connector using 2 screws included in accessory.

- Fix the connector using 2 cross recessed pan head screws (M4 x10L) referring to Table 1. Reference of tightening torque.

4) Mount to the flat surface and do not apply impact load or excessive external force.

- Mounting on an uneven surface will apply excessive force to the housing and bracket, which may lead to damage or failure.
- Do not drop or apply excessive shock. Otherwise, damage or an accident may occur.

5) Install the product so that the bar does not have an excessive deflection.

- For a bar length of 820mm or longer, support the bar at both ends and in the middle by using brackets (IZS40-BM1 or IZT40-BM2). If the bar is held only at the both ends, self-weight of the bar causes deflection, resulting in damage or deformation to the bar.

6) Avoid using in a place where noise (electromagnetic wave and surge) is generated.

- If the product is used in an environment where noise is generated, it may lead to malfunction or deterioration or damage of the internal elements.
- When the presence of noise is suspected, take preventive measures against noise and avoid the crossing wires such as power line and high voltage line.

7) Tighten the screws to the specified torque.

- If the screws are tightened in excess of the specified torque range, it may damage the mounting screws or mounted areas.
- If the tightening torque is insufficient, the mounting screws and brackets may become loose.

Table 1. Reference of tightening torque

Parts	Product No.	Connection	Screw(Accessory)	Tightening torque	Note
End bracket	IZT40-BE□	Bar end bracket	M4x8L 2pcs.	0.51 to 0.55Nm	Installation of bracket for bar
		Bracket (for angle adjustment)	M4x8L 2pcs.	0.72 to 0.76Nm	Mounting angle adjustment
M4x16L 2pcs.	0.72 to 0.76Nm				
	0.47 to 0.49Nm				
Intermediate bracket 1	IZT40-BM1	High voltage power supply module	M4x30L 2pcs.	0.22 to 0.24Nm	Direct connection
Intermediate bracket 2	IZT40-BM2		Controller	2pcs.	0.25 to 0.35Nm
Separate cable	IZT40-CF□	High voltage power supply module	2pcs.	0.25 to 0.35Nm	
		Spacer for separate cable	D-sub connector(plug)	2pcs.	0.40 to 0.60Nm
DIN rail mounting bracket	IZT40-B□	Controller	M4x6L 2pcs.	1.30 to 1.50Nm	DIN rail mounting bracket
		High voltage power supply module	M4x6L IZT40-B2: 4pcs. IZT42-B3: 8pcs.	1.30 to 1.50Nm	
		DIN rail	M4x6L 2pcs.	1.30 to 1.50Nm	Install to DIN rail
Bar (High voltage cable with onnector)	IZTB4□-□□□□□-□-□	High voltage power supply module	M4x10L 2pcs.	0.49 to 0.53Nm	Mounting of high voltage cable
Cable holder	IZT40-E□	Location	M4x8L (Recommended) 2pcs.	0.19 to 0.21Nm	Wiring high voltage cable


8) Do not directly touch the emitters.

- Do not directly touch the emitter with your finger. If the needle sticks to your finger, or electrical shock makes an instantaneous rapid body motion to escape from the shock, causing injury.
- If emitter or cartridge is damaged by tools, etc., it may interfere with the specified function and performance, and may also cause operation failure and accident.



High voltage caution

The emitter carries high voltage. If foreign matter is inserted or human body touches the emitter, electrical shock or instantaneous reaction of body to escape from the shock, causing injury.

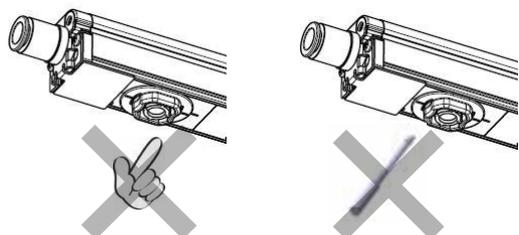

9) Do not affix any tape or labels to the controller, high voltage power supply module or bar.

- If the tape or label contains any conductive adhesive or reflective paint, a dielectric phenomenon may occur due to ions arising from such substances, resulting in electrostatic charging or electric leakage, causing malfunction, breakage, electric shock or fire.

10) Be sure to remove power supply and air supply to the controller, high voltage power supply module and bar before starting the product installation.

- If installation or adjustment is performed being supplied with power or air, electric shock, failure or injury can result.

11) High voltage power supply module uses a fan. 20mm or more space from the exhaust port is necessary for ventilation.


- Or install the product in a ventilated location so peripheral device are not affected.

12) Do not damage the cable or apply a heavy object or pinch the cable. Avoid repeatedly bending or stretching the cable.

- It may cause an electric shock, fire, or breaking of wire.

13) Do not carry this product by holding its cables.


- It may cause an injury or damage to the product.

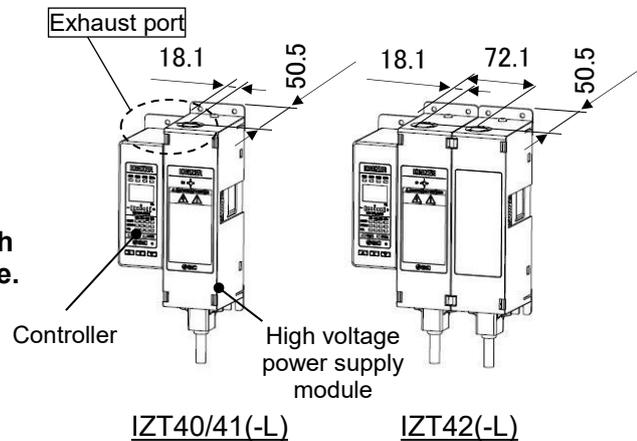

! Caution

1) When this product is installed, keep space below from structures or components.

- If there are electrically conductive objects such as walls or structures close to the bar, generated ions may not reach the target object effectively or product failure or electric shock can result due to dielectric or short-circuit.

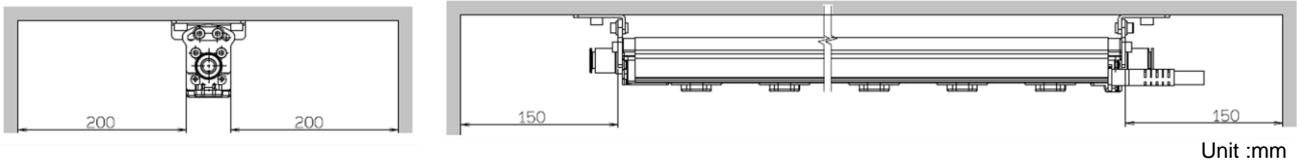


2) After installation, verify the performance of this product.

- The performance of the product varies depending on the surrounding installation and operating conditions. After installation, verify the performance of this product.


3) When installing ionizers which operate in DC mode (one polarity, positive or negative) with IZT41(-L) or IZT42(-L) close together, they should be positioned at least two meters away from each other.

- When IZT41(-L) or IZT42(-L) which operates in AC close to the ionizer which operates in DC mode, separate them by at least two meters. The offset voltage (ion balance) may not be adjusted by the built-in sensor due to the ions discharged from the ionizer which operates in DC mode.

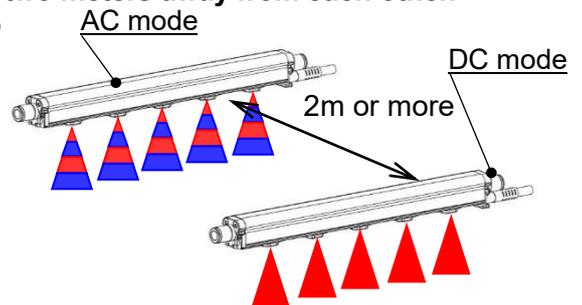

4) Use specified end bracket.

- If use a bracket other than specified bracket, the functions of this product may not operate normally.

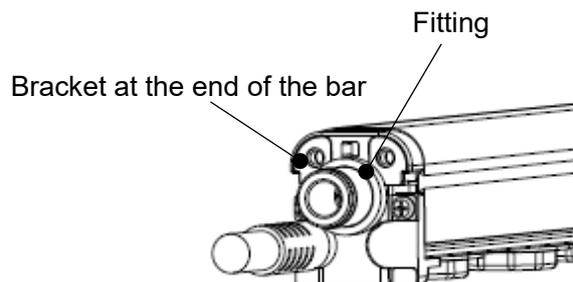

In case of IZTB40

Wiring and Piping

Warning

- 1) Before wiring, ensure that the power supply capacity meets the specification and that the voltage is within the specification. Product damage or malfunction can result.
- 2) To maintain product performance, the power supply should be UL Class 2 certified by National Electric Code (NEC) or evaluated as a limited power source according to UL60950.
- 3) To maintain the product performance, ground the product with an earth ground cable with a resistance of 100 Ω or less. If the product is not grounded, it is not possible to secure the performance and may lead to product failure or malfunction.
- 4) Wiring (including insertion and removal of the power supply connector) should never be carried out with the power supply ON. Otherwise, an electrical shock or accident may occur.
- 5) Use specified cable for connecting the controller for this product, high voltage power supply module and bar. Do not disassemble or retrofit them. Disassembling or modifying the product may cause product, electric shock or fire. The product will not be guaranteed if it is disassembled and/or modified.
- 6) Ensure the safety of wiring and surrounding conditions before supplying power.
- 7) Do not connect or disconnect the connectors (including power source) while the power is supplied. Failure to follow this procedure may cause product malfunction.
- 8) If the power and high voltage cables are routed together, the product may malfunction due to noise. Route the Ionizer wires separately.
- 9) Confirm that the wiring is correct before operation. Incorrect wiring will lead to product damage or malfunction.
- 10) Flush the piping before connecting. Before piping this product, exercise caution to prevent particles, water drops, or oil contents from entering the piping.

Operating / Storage Environment

Warning

- 1) Operate the product in the specified fluid temperature range and ambient temperature range.
 - Operating fluid temp. and ambient temp. range: Controller 0 to 40°C, high voltage power supply module 0 to 40°C, bar 0 to 50°C, AC adapter 0 to 40°C.
 - Do not use the product in locations where the temperature may change suddenly even if the ambient temperature range is within the specified limits, resulting in condensation.
- 2) Do not use this product in an enclosed space.
 - This product utilizes the corona discharge phenomenon. Do not use the product in an enclosed space as ozone and nitrogen oxides exist, even though in marginal quantities.
- 3) Environments to avoid
 - Never use or store under the following conditions. These may cause an electric shock, fire, etc.
 - a. Use in the environment which ambient temperature is out of the product specification.
 - b. Use in the environment which ambient humidity is out of the product specification.
 - c. Environment where abrupt temperature changes may cause condensation.
 - d. Environment where corrosive gas, flammable gas or other volatile flammable substances are stored.
 - e. Environment where the product may be exposed to conductive powder such as iron powder or dust, oil mist, salt, organic solvent, machining chips, particles or cutting oil (including water and any liquids), etc.
 - f. Paths of direct air flow, such as air conditioners.
 - g. Enclosed or poorly ventilated environment
 - h. Locations which are exposed to direct sunlight or heat radiation.
 - i. Areas where strong electromagnetic noise is generated, such as strong electrical and magnetic fields or supply voltage spikes.
 - j. Environment where static electricity is generated to the product.
 - k. Locations where strong high frequency is generated.
 - l. Locations which are subject to potential lightning strikes.
 - m. In an area where the product may receive direct impact or vibration.
 - n. Areas where the product may be subjected to forces or weight that could cause physical deformation.

4) Do not use air containing mist and/or dust.

- Air containing mist and/or dust may cause performance deterioration, and reduce the maintenance cycle.
- Install a dryer (IDF series), air filter (AF/AFF series), and/or mist separator (AFM/AM series) to obtain clean compressed air (air quality of Class 2.4.3, 2.5.3, 2.6.3 or higher according to ISO 8573-1: 2010 (JIS B8392-1:2012) is recommended for operation.

5) Controller, high voltage power supply module, bar and AC adapter are not resistant to lightning surge.

Maintenance / Check

Warning

1) Perform maintenance regularly and clean the emitters.

- Check regularly that the product is not operating with undetected failures.
- The maintenance must be carried out by an operator who has sufficient knowledge and experience.
- If the product is used for an extended period with dust present on the emitters, the product performance will be reduced.
- Maintenance detection function is installed to IZT41(-L) and IZT42(-L). When the emitter contamination is detected, clean the emitter.
- In cases where the maintenance detection function is not used on the IZS41(-L) or IZS42(-L) or IZT40 is used, perform neutralizing performance test and set maintenance cycle for periodic cleaning.
- Emitter contamination level is different depending on the installation environment and supply pressure. Refer to section "9. Maintenance" for details.
- If the performance is not recovered after cleaning, it is possible that emitters are worn. Replace the emitter cartridge.




High voltage caution

- This product contains a high voltage generation circuit. When performing maintenance inspection, be sure to confirm that the power supply to the ionizer is turned off.
- Never disassemble or modify the product, as this can cause loss of product functionality, and there is also a risk of electric shock and earth leakage.


2) Be sure to remove power supply and air supply to the controller, high voltage power supply module and bar before cleaning the emitter or replacing the emitter cartridge.

- Never touch the emitter with the power supplied to the controller, high voltage power supply module or bar. Electric shock may cause injury.
- If the emitter cartridge is removed while air is supplied, the emitter cartridge jumps out by compressed air. Replace the emitter cartridge after discharging the supply air.
- If emitter cartridges are not securely mounted to the bar, they may eject or release when air is supplied to the product.
- Securely mount or remove the emitter cartridges referencing the instructions shown below.
- Securely mount or remove the emitter cartridges with hands and do not use tools.
(Tightening torque: 0.2 to 0.3 Nm)

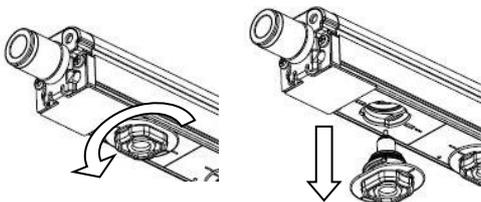

- (1) Rotate the cartridge 90 degrees in the counter-clockwise direction. (2) Pull to remove.

Removal of the emitter cartridge

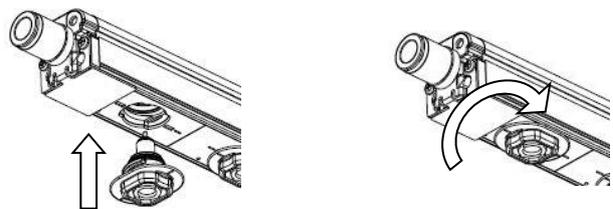

- (1) Insert the cartridge into the bar so that the longer side of the cartridge is mounted at a right angle to the bar.

- (2) Rotate the emitter cartridge for 90 degrees in the clockwise direction, and match the markings on the bar and on the cartridge to fix.



Mounting of the emitter cartridge

3) Do not disassemble or modify the product.

- Disassembling or modifying the product may cause product, electric shock or fire. The product will not be guaranteed if it is disassembled and/or modified.


4) Do not operate the product with wet hands.

- Never operate the product with wet hands. It may cause electric shock or other accidents.

Handling

Caution

- 1) **Do not apply excessive external force or shock (100m/s² or more) to the product**
 - Even if there are no problems with the appearance of the controller, high voltage power supply module or bar, the damage of the internal components may cause malfunction.
- 2) **When the bar length exceeds 820mm, hold the both ends and the middle of the bar so that moment load is not applied.**
 - Handling the product by holding either end of the bar may cause deformation or damage to the product.
- 3) **Power cable must be connected and disconnected by hand.**
 - Open and close too much may damage the drain cock.
 - Hold the connector by hand and straightly pull it out.
 - If the connector has lock mechanism, release the lock and then pull out the connector.
- 4) **If smoking, fire or smell occurs in the product, immediately shut off the power supply.**
- 5) **Do not touch the A part of the high voltage connector by hand. Be careful so that moisture or foreign matter does not adhere to the connector.**
 - Do not touch the A part of the high voltage connector by hand while handling.
 - Keep the high voltage connector free from contamination. Adhesion of oil or foreign matter on the A part may cause high voltage electric leakage.
 - If moisture, oil, or foreign matter adheres to the A part, clean it with ethanol.

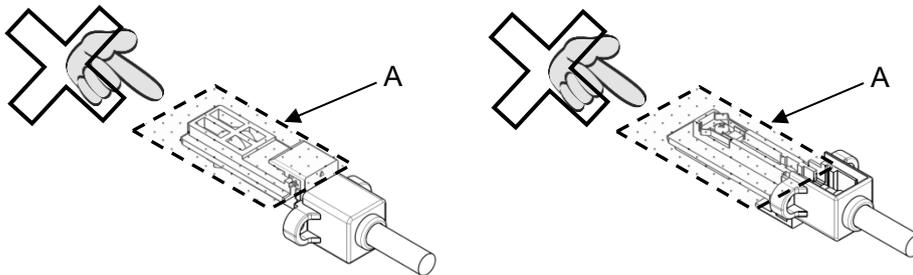

High voltage connector

1. How to Order

1-1. System construction

- IZT4□(-L) series consists of the bar (ion generator), high voltage power supply module, and controller. It is necessary to combine each equipment.
- Refer to IZT4□(-L) Table of combination below for combining equipment. Combinations other than those in the Table are not possible.
- The controller and high voltage power supply module can be directly connected or installed separately.
- When multiple products are installed, up to 4 high voltage power supply modules can be connected to one controller. Please refer to ①, ② and ③ below for the type of high voltage power supply module depending on the controller.

- ① For IZTC40 (controller), only IZTP40 is applicable.
- ② For IZTC41 (controller), IZTP41 and IZTP42 are applicable.
IZTP41 and IZTP42 can be mixed.
- ③ For IZTC41-L (controller), IZTP41-L and IZTP42-L are applicable.
IZTP41-L and IZTP42-L can be mixed.
Transistor input/output type and IO-Link type cannot be mixed.


Table2. IZT4□-L Table of combination (Representative model that can be connected)

Series	Input/Output type	Controller	High voltage power supply module	Ion generator (Bar)
IZT40	-	IZTC40	IZTP40	IZTB40
IZT41	Transistor	IZTC41	IZTP41	
IZT42			IZTP42	IZTB42
IZT41-L	IO-Link	IZTC41-L	IZTP41-L	IZTB40
IZT42-L			IZTP42-L	IZTB42


Controller (IZTC40, IZTC41, IZTC41-L)



IZTC40-□
(Controller for IZT40)




IZTC41-□□
(Controller for IZT41/IZT42)




IZTC41-L□□
(Controller for IZT41-L/IZT42-L)


High voltage power supply module (IZTP40, IZTP41(-L), IZTP42(-L))



IZTP40
(High voltage power supply module for IZT40)



IZTP41(-L)
(High voltage power supply module for IZT41(-L))

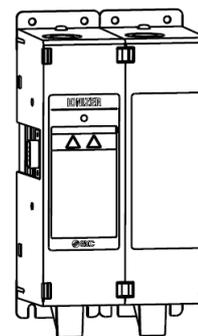

IZTP42(-L)
(High voltage power supply module for IZT42(-L))

Bar (ion generating part) (IZTB40、IZTB42)




IZTB40-□□□□□-□-□
(Bar for IZT40/IZT41(-L))




IZTB42-□□□□□-□-□
(Bar for IZT42(-L))


Direct connection

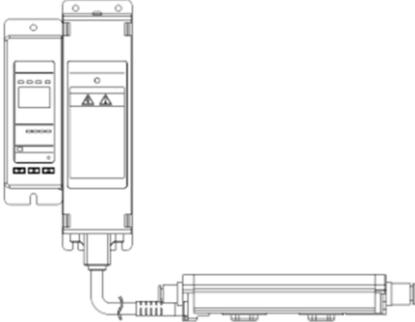


Example of connecting IZTC40,
IZTP40 and IZTB40 (IZT40)

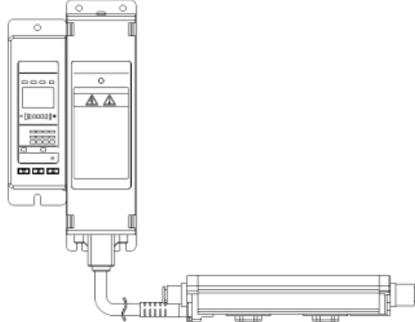


Example of connecting IZTC41(-L),
IZTP41(-L) and IZTB40 (IZT41(-L))

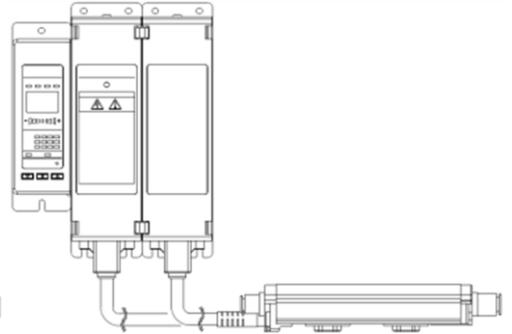


Example of connecting IZTC41(-L),
IZTP42(-L) and IZTB42 (IZT42(-L))

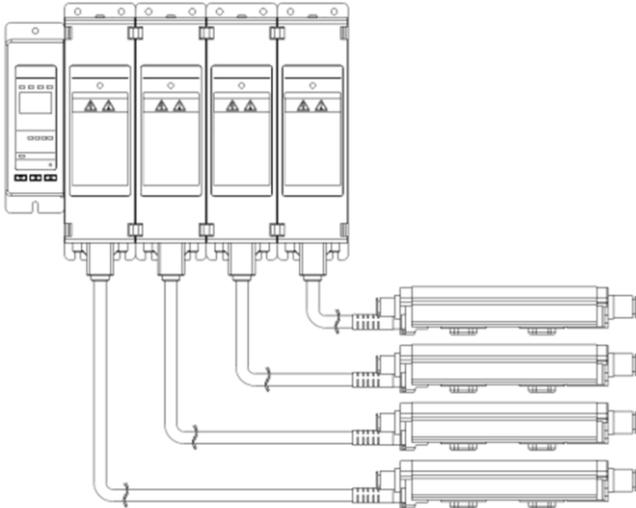

Example of connecting IZTC40, IZTP40
and IZTB40 (4pcs.)

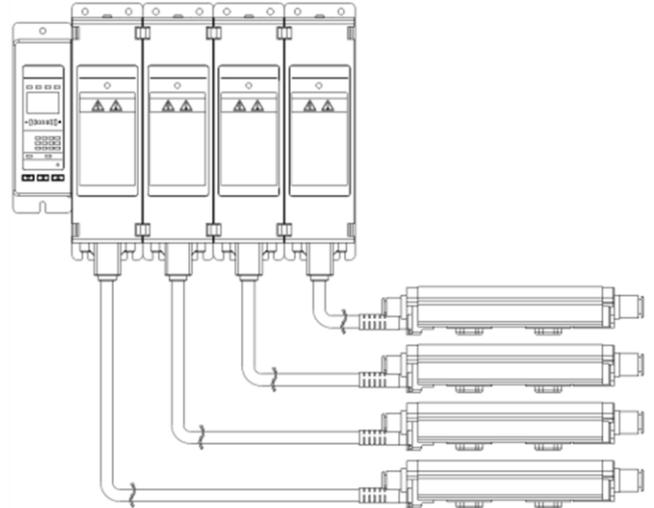


Example of connecting IZTC41(-L), IZTP41(-L)
and IZTB40 (4pcs.)

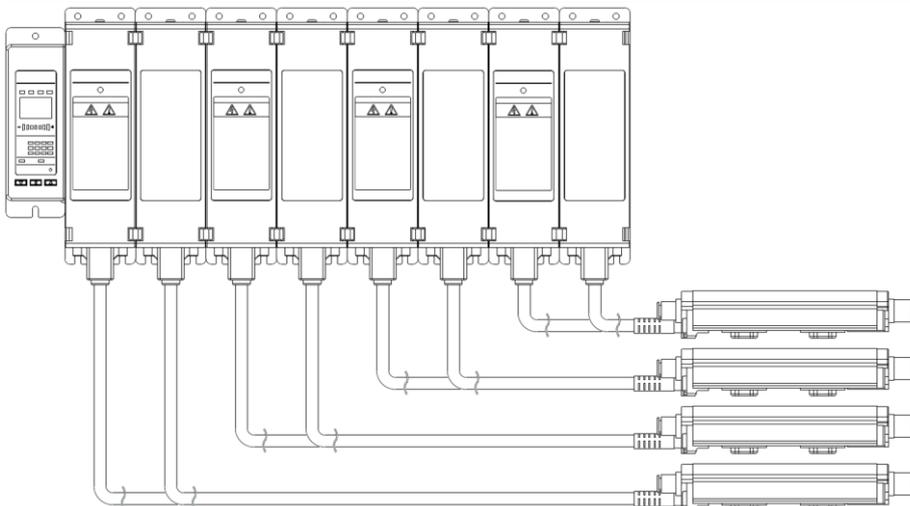

Example of connecting IZTC41(-L), IZTP42(-L) and IZTB42 (4pcs.)


Separate connection

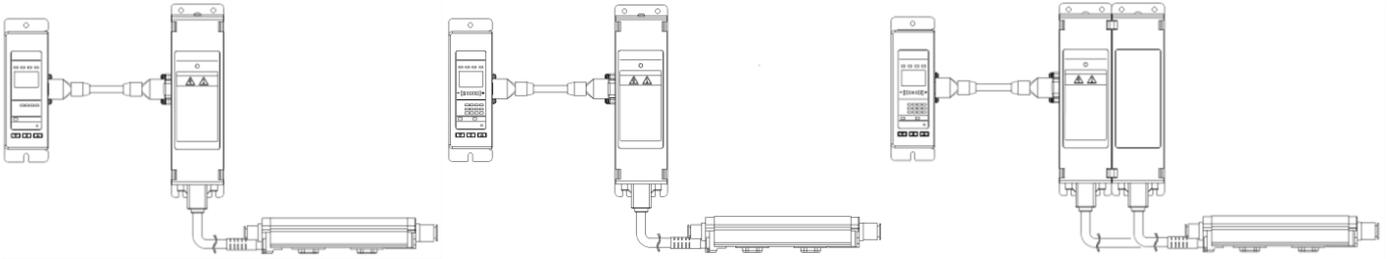


Example of connecting IZTC40, IZTP40 and IZTB40 (IZT40)

Example of connecting IZTC41(-L), IZTP41(-L) and IZTB40 (IZT41(-L))


Example of connecting IZTC41(-L), IZTP42(-L) and IZTB42 (IZT42(-L))

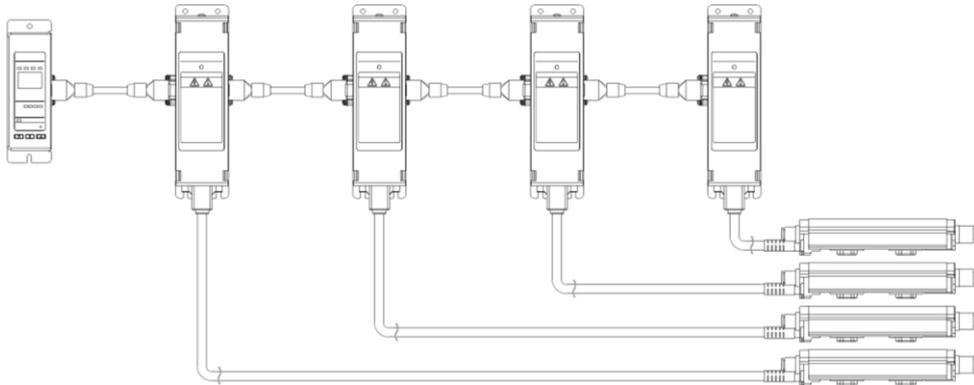

Example of connecting IZTC40, IZTP40 and IZTB40 (4pcs.)

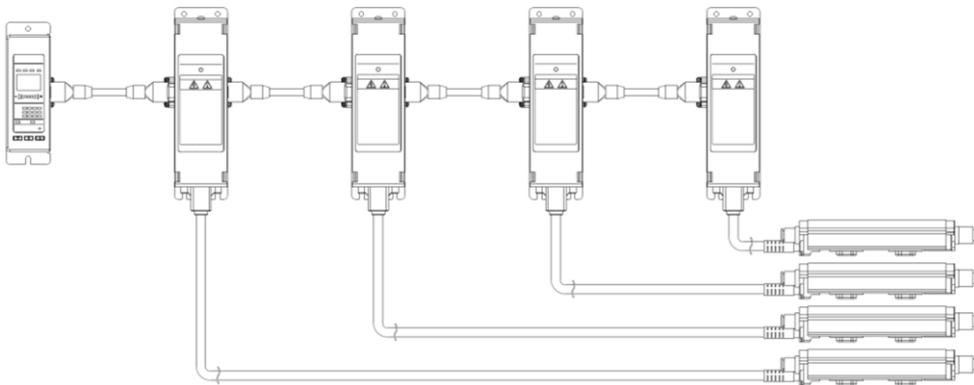

Example of connecting IZTC41(-L), IZTP41(-L) and IZTB40 (4pcs.)

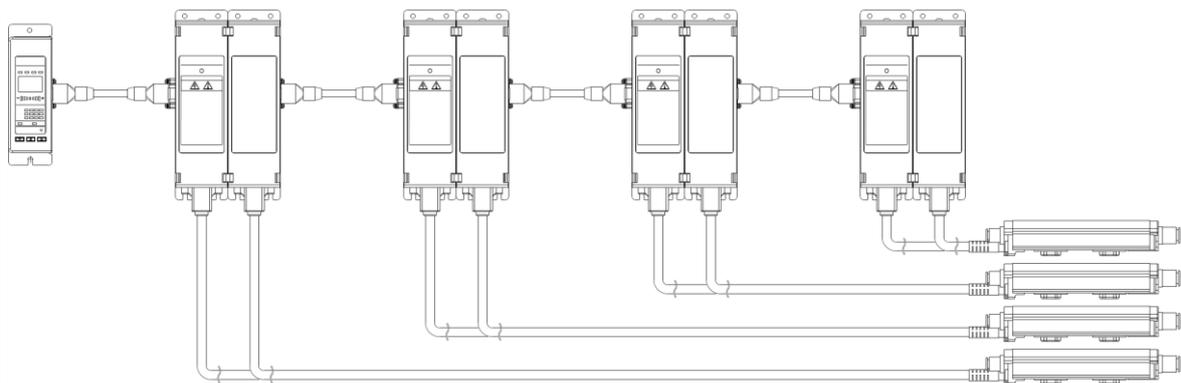


Example of connecting IZTC41(-L), IZTP42(-L) and IZTB42 (4pcs.)

1-2. How to Order

- The product number consists of the controller, high voltage power supply module and bar (1 of each).
- When multiple high voltage power supply modules and bars are added to one controller, choose the equipment according to the product number for a single unit.

Bar + High voltage power supply module + Controller

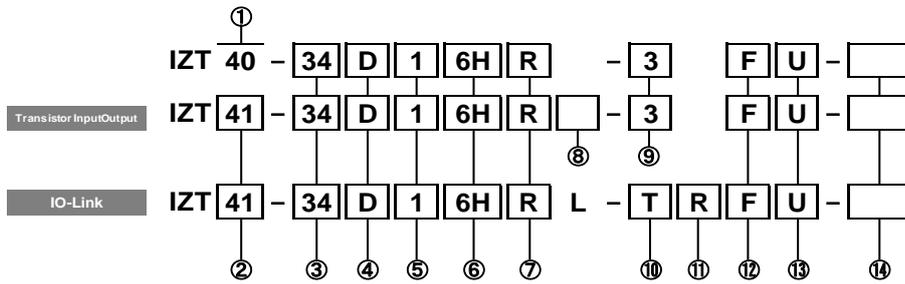

① Model

Symbol	Model
40	Standard type

② Model

Symbol	Model
41	AC type
42	Dual AC type

③ Bar length

Symbol	Length (mm)	Symbol	Length (mm)
16	160	82	820
22	220	112	1120
34	340	130	1300
40	400	160	1600
46	460	190	1900
58	580	232	2320
64	640	250	2500

④ Emitter cartridge type / Materials

Symbol	Type	Type
D	High speed static	Tungsten
E	neutralization cartridge	Silicon
L	Energy saving static	Tungsten
M	neutralization cartridge	Silicon
V	Energy saving high-efficiency cartridge	Tungsten
S		Silicon

⑤ High voltage cable length

Symbol	Length (mm)
1	1
2	2
3	3

※Number of included cable holder is different depending on the high voltage cable length (Table below).

Number of high voltage cable holder

Symbol	IZT40		IZT41		IZT42	
	Straight	Elbow	Straight	Elbow	Straight	Elbow
1	1	1	1	1	2	2
2	2	1	2	1	4	2
3	3	1	3	1	6	2

⑥ One-touch Fitting

Symbol	Metric size
4H	ø4 straight
6H	ø6 straight
8H	ø8 straight
AH	ø10 straight
4L	ø4 elbow
6L	ø6 elbow
8L	ø8 elbow
AL	ø10 elbow

Symbol	Inch size
5H	ø3/16" straight
7H	ø1/4" straight
9H	ø5/16" straight
BH	ø3/8" straight
5L	ø3/16" elbow
7L	ø1/4" elbow
9L	ø5/16" elbow
BL	ø3/8" elbow

※Refer to the bore size in the table below for selection of One-touch fittings.

⑦ Plug Location

Symbol	Plug location
Nil	Without plug
Q	High voltage cable side
R	Opposite side of the high voltage cable

⑧ Input/Output specifications

Symbol	Input/Output
Nil	NPN
P	PNP

※None of the Input/Output functions can be used when the AC adapter is being used.

⑨ Power supply cable length

Symbol	Length (m)
3	3
5	5
10	10
15	15
N	なし

※To use AC adapter, specify "N", and select AC adapter with the option number.

⑩ Power supply cable layout direction / Length

Symbol	Layout direction	Length (m)
N	None	
J	Straight	3
K		5
M		10
S		3
T	Angle	5
Z		10

⑪ Communication cable layout direction / Length

Symbol	Layout direction	Length (m)
N	Straight	None
E		0.5
G		1
H		2
J		3
K	Angle	5
M		10
P		0.5
Q		1
R		2
S		3
T		5
Z	10	

⑫ Bracket for bar

Symbol	Type
Nil	Without bracket
B	With bracket 1
F	With bracket 2

※Number of intermediate bracket depends on the bar length. (Refer to table below)

Number of bracket

Bar length (mm)	End bracket	Intermediate bracket
160~760	2	None
820~1,600		1
1,660~2,380		2
2,440~2,500		3

⑬ DIN rail bracket for controller, high voltage power supply module

Symbol	For controller	For high voltage power supply module
Nil	None	None
U	Included	Included
W	Included	None
Y	None	Included

⑭ Made to Order

Symbol	Description
-X10	None-standard bar length
-X14	With emitter cartridge drop prevention cover


1-2-1. Product number for single unit (to order separately)

Table for combination

	Bar / IZTB		High voltage power supply module / IZTP					Controller / IZTC		
	40	42	40	41	41-L	42	42-L	40	41	41-L
IZT40	●		●					●		
IZT41	●			●					●	
IZT41-L	●				●					●
IZT42		●				●			●	
IZT42-L		●					●			●

※ Transistor input/output type controller and high voltage power supply module and IO-Link type controller and high voltage power supply voltage cannot be mixed.

Bar

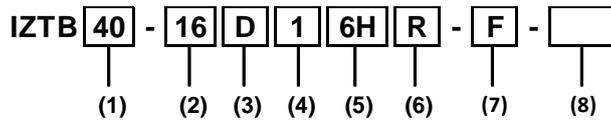

(1) Model

Symbol	Model
40	Standard, AC type
42	Dual AC type

(2) Bar length

Symbol	Bar length (mm)	Symbol	Bar length (mm)
16	160	82	820
22	220	112	1120
34	340	130	1300
40	400	160	1600
46	460	190	1900
58	580	232	2320
64	640	250	2500

(3) Emitter Cartridge Type/ Materials

Symbol	Type	Material
D	High speed static neutralization cartridge	Tungsten
E	Energy saving static neutralization cartridge	Silicon
L	Energy saving high-efficiency cartridge	Tungsten
M	Energy saving high-efficiency cartridge	Silicon
V	Energy saving high-efficiency cartridge	Tungsten
S	Energy saving high-efficiency cartridge	Silicon

(4) High voltage cable length

Symbol	High voltage cable length (m)
1	1
2	2
3	3

※ Number of included cable holder is different depending on the high voltage cable length (Table below).

Number of High Voltage Cable Holder

Symbol	IZT40		IZT41		IZT42	
	Straight	Elbow	Straight	Elbow	Straight	Elbow
1	1	1	1	1	2	2
2	2	1	2	1	4	2
3	3	1	3	1	6	2

(5) One-touch Fitting

Symbol	Metric size
4H	ø4 straight
6H	ø6 straight
8H	ø8 straight
AH	ø10 straight
4L	ø4 elbow
6L	ø6 elbow
8L	ø8 elbow
AL	ø10 elbow

Symbol	Inch size
5H	ø3/16" straight
7H	ø1/4" straight
9H	ø5/16" straight
BH	ø3/8" straight
5L	ø3/16" elbow
7L	ø1/4" elbow
9L	ø5/16" elbow
BL	ø3/8" elbow

※ Refer to the bore size in the table below for selection of One-touch fittings.

Recommended piping bore size

High speed static neutralization cartridge

One-touch fitting symbol	Bar length (mm)	
	Single end piping	Double ends piping
4H / 4L	160 to 220	160 to 460
6H / 6L	160 to 580	160 to 1120
8H / 8L	160 to 820	160 to 1900
AH / AL	160 to 1600	160 to 2500
5H / 5L	160 to 400	160 to 640
7H / 7L	160 to 640	160 to 1300
9H / 9L	160 to 820	160 to 1900
BH / BL	160 to 1600	160 to 2500

Energy saving static neutralization cartridge

One-touch fitting symbol	Bar length (mm)	
	Single end piping	Double ends piping
4H / 4L	160 to 460	160 to 820
6H / 6L	160 to 1120	160 to 2320
8H / 8L	160 to 1900	160 to 2500
AH / AL	160 to 2500	160 to 2500
5H / 5L	160 to 640	160 to 1300
7H / 7L	160 to 1300	160 to 2500
9H / 9L	160 to 1900	160 to 2500
BH / BL	160 to 2500	160 to 2500

Energy saving high-efficiency cartridge

One-touch fitting symbol	Bar length (mm)	
	Single end piping	Double ends piping
4H / 4L	160 to 1600	160 to 2500
6H / 6L	160 to 2500	160 to 2500
8H / 8L	160 to 2500	160 to 2500
AH / AL	160 to 2500	160 to 2500
5H / 5L	160 to 2500	160 to 2500
7H / 7L	160 to 2500	160 to 2500
9H / 9L	160 to 2500	160 to 2500
BH / BL	160 to 2500	160 to 2500

(6) Plug location

Symbol	Plug location
Nil	Without plug
Q	High voltage cable side
R	The opposite side of the high voltage cable

(7) Bracket for bar

Symbol	Type
Nil	without Bracket
B	With bracket 1
F	With bracket 2


※ Number of intermediate bracket depends on the bar length. (See table below)

No of bracket

Bar length mm	End bracket	Intermediate bracket
160 to 760	2	None
820 to 1,600		1
1,660 to 2,380		2
2,440 to 2,500		3

(8) Made to Order

High voltage power supply module

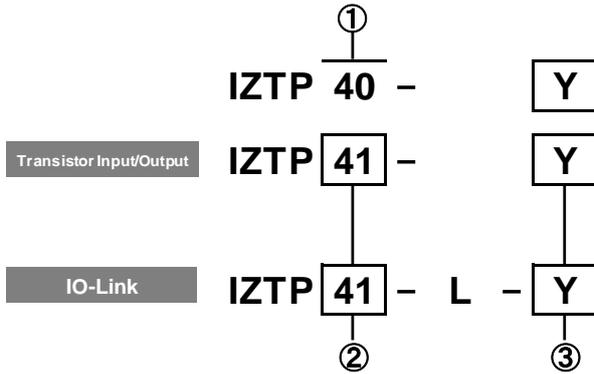

① Model

Symbol	Model
40	Standard type


② Model

Symbol	Model
41	AC type
42	Dual AC type

③ DIN rail bracket

Symbol	Type
Nil	None
Y	Include

Controller

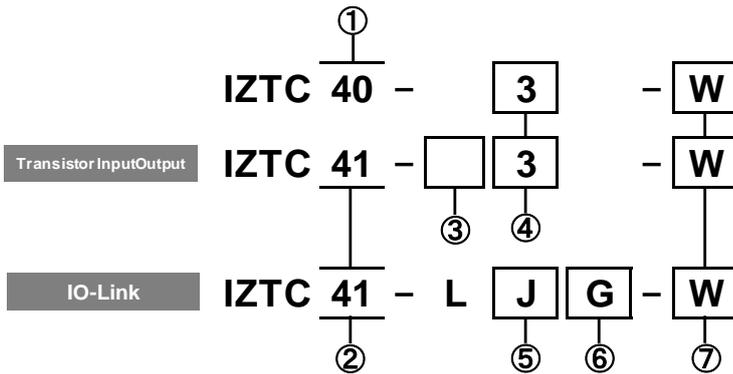

① Model

Symbol	Model
40	Standard type

② Model

Symbol	Model
41	AC type, Dual AC type

③ Input/Output specifications

Symbol	Input/Output
Nil	NPN
P	PNP

④ Power supply cable

Symbol	Length (m)
3	3
5	5
10	10
15	15
N	None

※To use AC adapter with transistor Input/Output, specify "N", and static AC adapter option number.

⑤ Power supply cable layout direction / Length

Symbol	Layout direction	Length (m)
N	None	
J	Straight	3
K		5
M		10
S	Angle	3
T		5
Z		10

⑦ DIN rail bracket

Symbol	Type
Nil	None
W	Include


⑥ Communication cable layout direction / Length

Symbol	Layout direction	Length (m)
N	None	
E	Straight	0.5
G		1
H		2
J		3
K		5
M		10
P	Angle	0.5
Q		1
R		2
S		3
T		5
Z		10

1-2-2. Made to Order

Symbol	Description	Specifications
-X10	Non-standard bar length	Manufacturable bar length (Symbol) : 10+6×n (n is an integer from 1 to 39) (Use standard product when n is 1, 2, 4, 5, 6, 8, 9, 12, 17, 20, 25, 30, 37)


Bar + High voltage power supply module + Controller

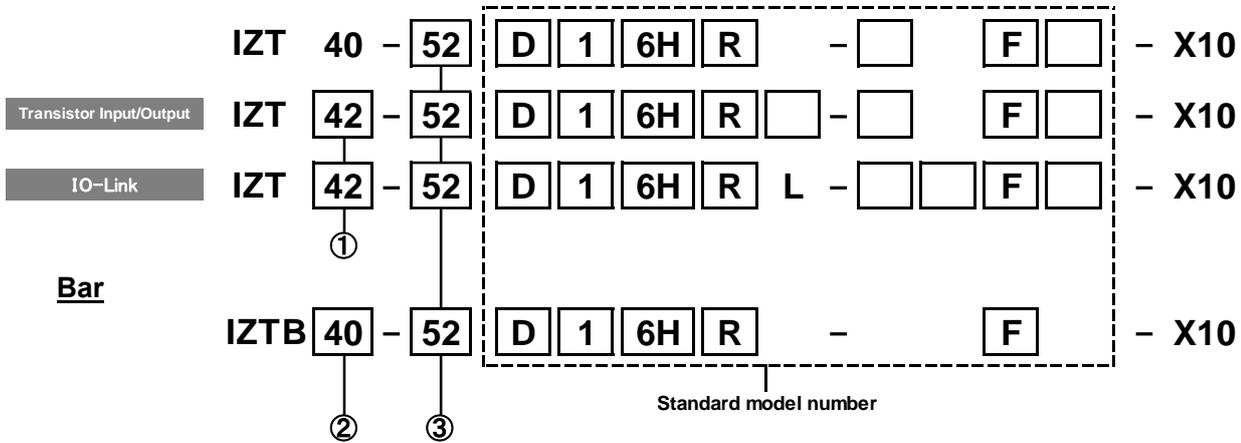

① Model		② Model		③ Bar length		③ Bar length		③ Bar length	
41	42	40	42	Symbol	Length (mm)	Symbol	Length (mm)	Symbol	Length (mm)
				28	280	124	1240	196	1960
				52	520	136	1360	202	2020
				70	700	142	1420	208	2080
				76	760	148	1480	214	2140
				88	880	154	1540	220	2200
				94	940	166	1660	226	2260
				100	1000	172	1720	238	2380
				106	1060	178	1780	244	2440
				118	1180	184	1840		

Symbol	Description	Specifications
-X14	With emitter cartridge drop prevention cover	An optional drop prevention cover is mounted to the ionizer as default.

Bar + High voltage power supply module + Controller

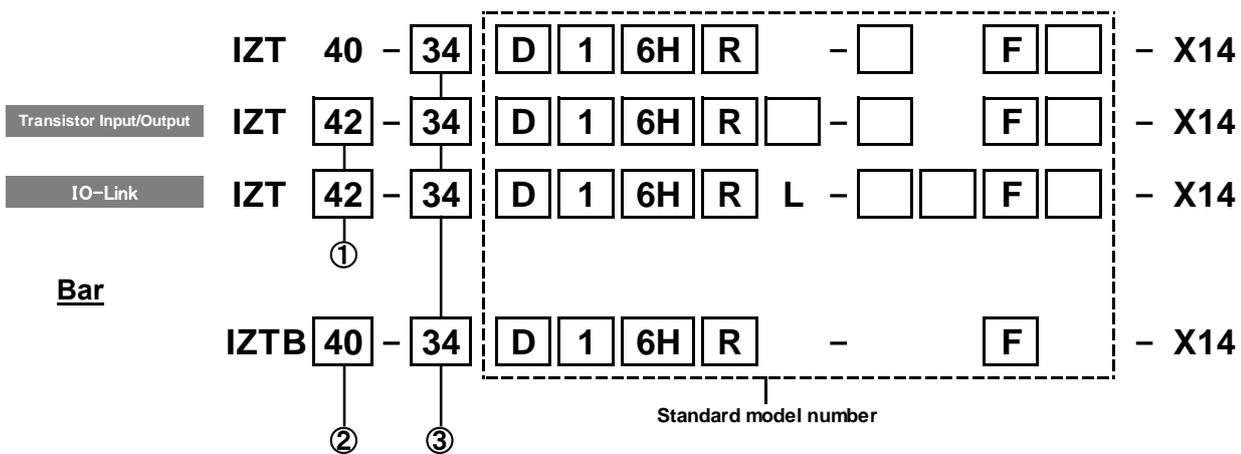

① Model		② Model		③ Bar length															
41	42	40	42	Standard	Symbol	16	22	34	40	46	58	64	82	112	130	160	190	232	250
					Length(mm)	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
				Non-standard	The bar of non-standard length is available. Refer to the how to order above.														


1-2-3. Accessories (ordered separately)

Emitter Cartridge

IZT40 - N D

● **Emitter Cartridge Type/ Materials**

Symbol	Type	Material
D	High speed static	Tungsten
E	neutralization cartridge	Silicon
L	Energy saving static	Tungsten
M	neutralization cartridge	Silicon

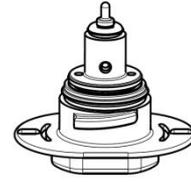

IZS40 - N V

● **Emitter Cartridge Type/ Materials**

Symbol	Type	Material
V	Energy saving high-efficiency cartridge	Tungsten
S		Silicon


Cartridge color	Emitter material
White	Tungsten
Gray	Silicon

Power supply cable (IZT40/41/42)

IZT40 - CP 3

● **Power supply cable length**

Symbol	Length (m)
3	3
5	5
10	10
15	15

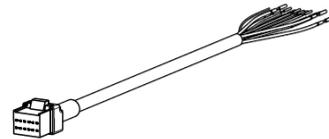


Power supply cable (IZT41-L/42-L)

IZT41 - CP J

● **Power supply cable layout direction / Length**

Symbol	Layout direction	Length (m)
J	Straight	3
K		5
M		10
S	Angle	3
T		5
Z		10

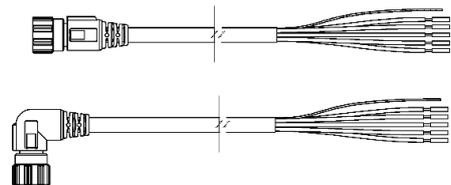


Communication cable (IZT41-L/42-L)

IZT41 - CE **G**

● **Communication cable layout direction / Length**

Symbol	Layout direction	Length (m)
E	Straight	0.5
G		1
H		2
J		3
K		5
M		10
P	Angle	0.5
Q		1
R		2
S		3
T		5
Z		10

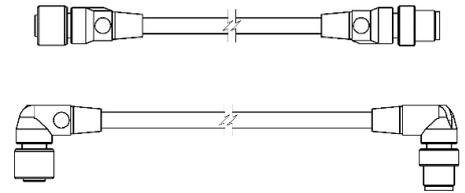


Bracket for bar

IZT40 - B **E1**

● **Bracket for bar**


Symbol	Type
E1	End bracket 1
E2	End bracket 2
M1	Intermediate bracket 1
M2	Intermediate bracket 2

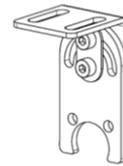

IZT40-BE1
End Bracket 1



IZT40-BE2
End Bracket 2

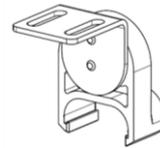

IZT40-BM1
Intermediate bracket 1



IZT40-BM2
Intermediate Bracket 2

※Select bracket referring to the combination in the table below.

Table3. Bracket combination

	Intermediate bracket 1	Intermediate bracket 2
End bracket 1	O(angle adjustment +/-90°)	×
End bracket 2	×	O(angle adjustment +/-15°)

O : Possible to combine x : Not possible to combine

※The following table lists the number of bracket required for intermediate support based on the bar length.
2 end brackets are necessary regardless of the bar length.

Table4. No of bracket


Bar length mm	End bracket	Intermediate bracket
160 to 760	2	None
820 to 1,600		1
1,660 to 2,380		2
2,440 to 2,500		3

DIN rail mounting bracket for controller and high voltage power supply module


IZT40 - B 1

● **DIN rail mounting bracket**


Symbol	Type
1	For controller
2	High voltage power supply module for IZT40/IZT41(-L)
3	High voltage power supply module for IZT42(-L)

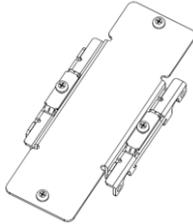

IZT40-B1
Controller DIN rail
bracket

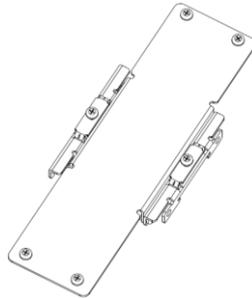

IZT40-B2
High voltage power supply module
DIN rail mounting bracket
for IZTP40/IZTP41(-L)

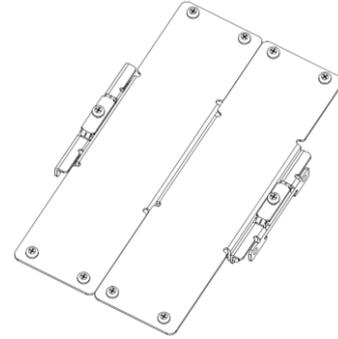


IZT40-B3
High voltage power supply module
DIN rail mounting bracket
for IZTP42(-L)

High voltage cable holder


IZT40 - E 1

● **High voltage cable holder**

Symbol	Type
1	Straight
2	Elbow

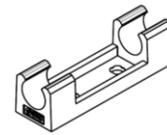

IZT40-E1
High voltage cable holder (straight)

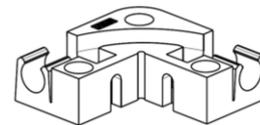

IZT40-E2
High voltage cable holder (elbow)


1-2-4. Sold separately

AC adapter (IZT40/41/42)

IZT40 - CG 1

● **Select AC cord**

Symbol	Type
1	With AC cord
2	Without AC cord

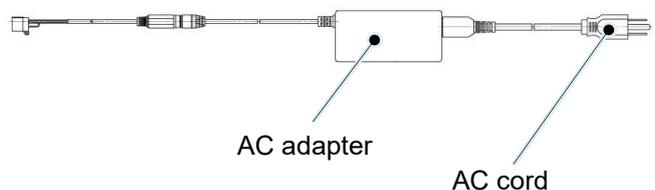


Drop prevention cover

IZS40 - E 2

● **No. of emitter cartridge to be fixed**

Symbol	Type
2	For 2pcs.
3	For 3pcs.
4	For 4pcs.
5	For 5pcs.

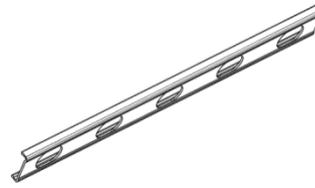

IZS40-E5
Drop prevention cover 5pcs.

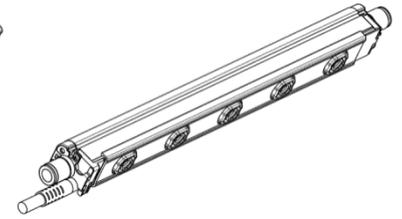


Image of the cover mounted to the unit

Table6. Non-standard bar length


Symbol for bar	No. of drop prevention cover needed			Symbol for bar	No. of drop prevention cover needed		
	IZS40-E3	IZS40-E4	IZS40-E5		IZS40-E3	IZS40-E4	IZS40-E5
28	-	1	-	154	-	-	5
52	1	-	1	166	1	1	4
70	2	-	1	172	1	-	5
76	1	1	1	178	-	1	5
88	-	1	2	184	-	-	6
94	-	-	3	196	1	1	5
100	2	-	2	202	1	-	6
106	1	1	2	208	-	1	6
118	-	1	3	214	-	-	7
124	-	-	4	220	2	-	6
136	1	1	3	226	1	1	6
142	1	-	4	238	-	1	7
148	-	1	4	244	-	-	8

Separate cable

IZT40 - CF 1

● **Separate cable length**

Symbol	Length (m)
1	1
2	2
3	3

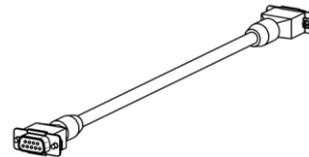

Emitter cleaning kit


IZS30 - M2

(Provided together with 1 felt pad grindstone, 1 rubber grindstone, and 2 replacement felt pads)




IZS30 - A0201

(Provided together with 10 replacement felt pads)

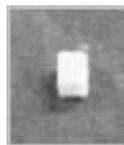


IZS30 - A0202

(Provided together with 1 replacement rubber grindstone)

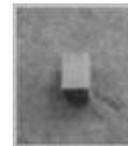

2. Procedures to Operation

2-1. Flow chart to operation

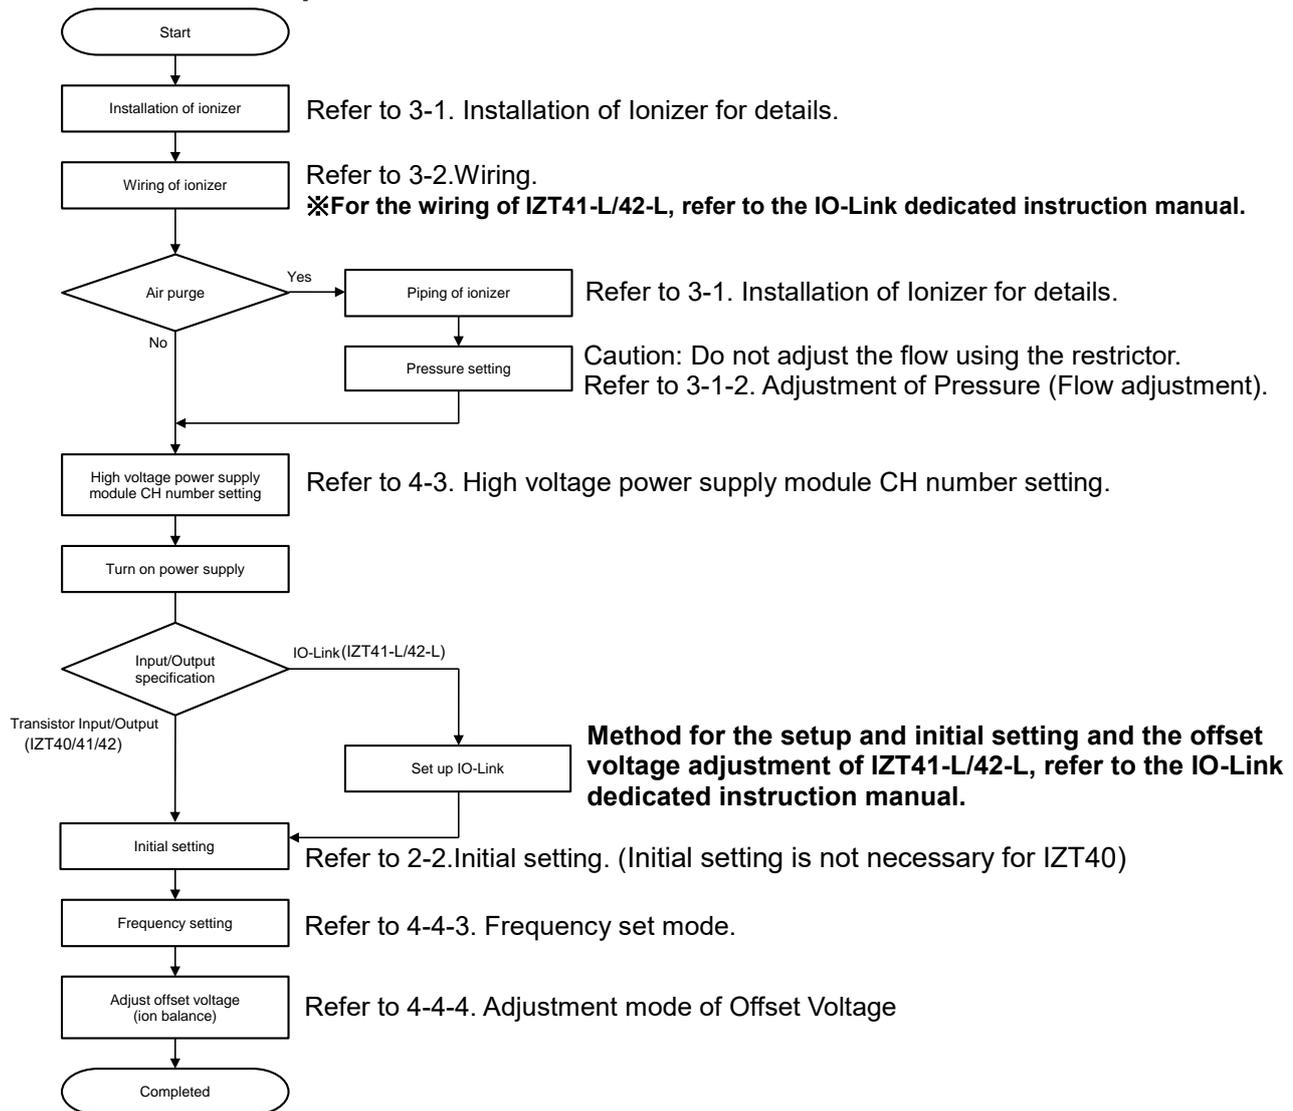

2-2. Initial setting (IZT41/42) ※Initial setting is not necessary for IZT40


For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

- This product has a function which constantly monitors the emitter contamination. When emitter contamination is detected, it is indicated by a signal output and LED. Initial setting is necessary for maintenance detection.
- In the default setting "no" is displayed for the frequency display.
- The Initial setting is started by pressing the S button for 3 seconds or longer while "no" is displayed. To revert to the default setting press the reset button during use.
- Connect and install the ionizer bar to be used before setting.
- When multiple bars are connected, assign the channel for which initial setting is necessary. Refer to 4-4-2. Channel selection mode for channel setting.
- Do not disconnect the power supply during setting. (Initial setting is completed within 60 seconds.)

[Initial setting is necessary in following cases]

- ① When "no" is displayed in the frequency display.
- ② Bar is replaced.
- ③ Installation environment is changed.

※For ②③, perform initial setting after pressing the reset button and make sure that "no" is displayed in the frequency display. It is recommended to start the initial setting for ③ after replacing the emitter cartridge. If initial setting is performed while the emitter cartridge is not clean or is worn out, maintenance detection may not work properly.

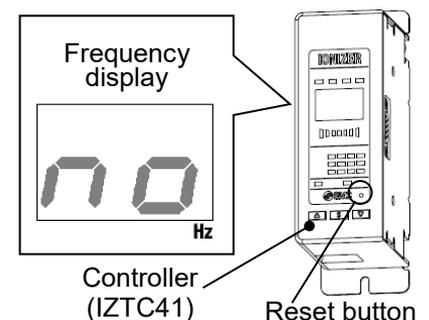

3. Installation and wiring

- The performance of the product varies depending on the surrounding installation and operating conditions. It is recommended to investigate in advance any processes and parts where static electricity disturbances occur. Verify that the required conditions have been met in order to effectively remove static electricity before installation.
- After installation, verify the performance of this product.


3-1. Installation of Ionizer

3-1-1. Precautions for Installation

- Be sure to stop power supply and air supply to the product before starting the product installation.
- Do not affix any tape or labels to the bar. Dielectric phenomenon may occur due to ions arising from such substances, resulting in electrostatic charging or electric leakage.

3-1-2. Adjustment of Pressure (Flow adjustment)

- When air is supplied to the bar, adjust the flow using a regulator which should be connected immediately before the bar. If a flow adjustment valve is used between the bar and regulator, the speed of the flow from the nozzle decreases due to the pressure decrease, decreasing the neutralizing performance.
- Check the pressure around the bar air supply port. A pressure difference may be generated between the regulator pressure and the pressure at the bar air supply port due to the supply piping length and piping diameter. If a pressure gauge with regulator is used for checking the pressure, use a large capacity regulator, keep the piping as short as possible or make the piping diameter larger.
- When installing a flow meter to the air circuit, refer to "5-4. Flow - Pressure characteristics" to choose the product type so that the flow of the bar does not exceed the flow meter rated flow range. If the bar's flow consumption is larger than the rated flow of the selected flow meter, the flow supplied to the bar is limited, thus deteriorating neutralization performance.

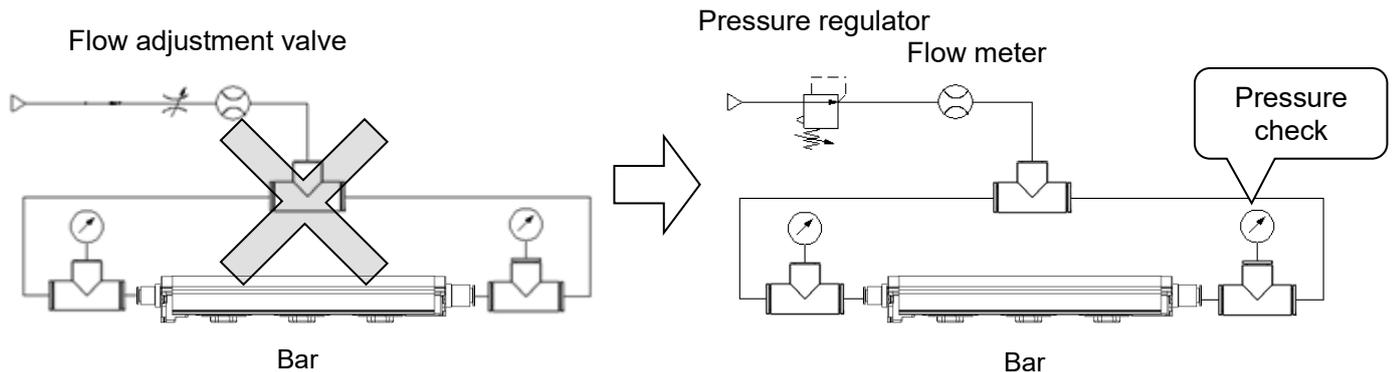

3-1-3. Selection of piping port size

- When air is supplied, choose the ionizer piping fitting referring to the table7 [Recommended piping port size].
- Connect piping for air supply through the One-touch fitting(s) either to one end or both ends depending on the bar length.
- If a tube is used which is thicker than the recommended tube, neutralization performance will be deteriorated due to a shortage of air flow.

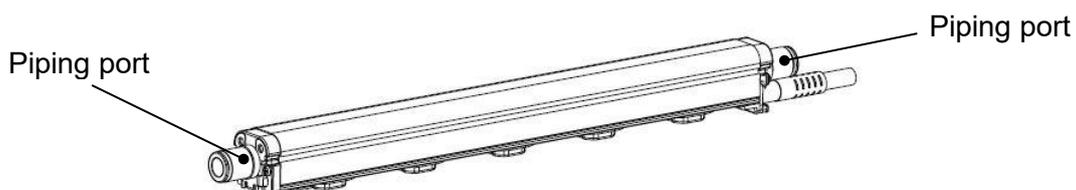


Table7. Recommended piping port size

High speed static neutralization cartridge

One-touch fitting symbol	Bar length [mm]	
	single end piping	Double ends piping
4H / 4L	160 to 220	160 to 460
6H / 6L	160 to 580	160 to 1120
8H / 8L	160 to 820	160 to 1900
AH / AL	160 to 1600	160 to 2500
5H / 5L	160 to 400	160 to 640
7H / 7L	160 to 640	160 to 1300
9H / 9L	160 to 820	160 to 1900
BH / BL	160 to 1600	160 to 2500

Energy saving static neutralization cartridge

One-touch fitting symbol	Bar length [mm]	
	single end piping	Double ends piping
4H / 4L	160 to 460	160 to 820
6H / 6L	160 to 1120	160 to 2320
8H / 8L	160 to 1900	160 to 2500
AH / AL	160 to 2500	160 to 2500
5H / 5L	160 to 640	160 to 1300
7H / 7L	160 to 1300	160 to 2500
9H / 9L	160 to 1900	160 to 2500
BH / BL	160 to 2500	160 to 2500

Energy saving high-efficiency cartridge

One-touch fitting symbol	Bar length [mm]	
	single end piping	Double ends piping
4H / 4L	160 to 1600	160 to 2500
6H / 6L	160 to 2500	160 to 2500
8H / 8L	160 to 2500	160 to 2500
AH / AL	160 to 2500	160 to 2500
5H / 5L	160 to 2500	160 to 2500
7H / 7L	160 to 2500	160 to 2500
9H / 9L	160 to 2500	160 to 2500
BH / BL	160 to 2500	160 to 2500

3-1-4. Distance for installation

- Refer to the table below for the recommended distance between the ionizer and object to be neutralized.

Table8. Ion generating frequency and distance for installation

Ion generating frequency [Hz]	Distance from the ionizer to the de-ionized workpiece [mm]							
	IZT40, IZT41				IZT42			
	Without air purge	With air purge			Without air purge	With air purge		
		Energy saving high-efficiency	Energy saving static neutralization	High speed static neutralization cartridge		Energy saving high-efficiency	Energy saving static neutralization	High speed static neutralization cartridge
0.1	-	-	-	-	100 to 175	50 to 1300	50 to 2000	50 to 2000
0.5	-	-	-	-	100 to 175	50 to 1300	50 to 2000	50 to 2000
1	300 to 500	300 to 1500	400 to 2000	600 to 2000	100 to 175	50 to 1300	50 to 2000	50 to 2000
3	300 to 400	300 to 1500	350 to 2000	500 to 2000	75 to 150	50 to 1200	50 to 2000	50 to 2000
5	300 to 400	300 to 1500	300 to 2000	400 to 2000	75 to 150	50 to 1200	50 to 2000	50 to 2000
8	300 to 350	300 to 1400	250 to 2000	300 to 2000	75 to 150	50 to 1200	50 to 2000	50 to 2000
10	200 to 300	200 to 1400	200 to 2000	200 to 2000	75 to 150	50 to 1200	50 to 2000	50 to 2000
15	200 to 300	200 to 1400	150 to 2000	100 to 2000	50 to 125	50 to 1100	50 to 2000	50 to 2000
20	150 to 250	150 to 1300	100 to 2000	50 to 2000	50 to 125	50 to 1100	50 to 2000	50 to 2000
30	50 to 200	50 to 1300	50 to 2000	50 to 2000	50 to 125	50 to 1100	50 to 2000	50 to 2000

※The above mentioned distances are guidelines for installation of the ionizer. Confirm the static neutralization effect before installing.


3-1-5. Installation of bracket for bar

- 2 types of end bracket and intermediate bracket are available.
- When end bracket 1 is used, use intermediate bracket 1.
- For end bracket 2, use intermediate bracket 2.


1) End bracket

- Use specified end bracket.
- For mounting, fix the end bracket at both ends of the bar using M4 screws with the specified tightening torque.


Tightening torque: 0.51 to 0.55 Nm

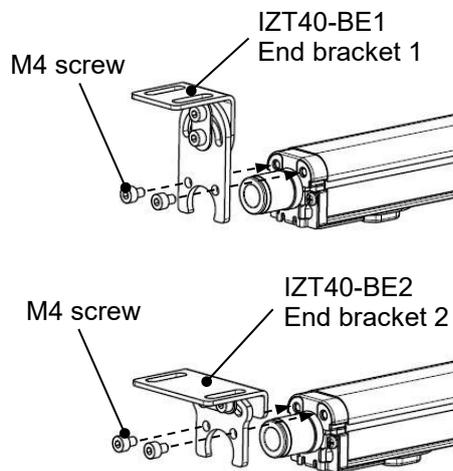

- 2) Intermediate bracket (for bar lengths of 820mm or more)
- Match the groove of the bar and protrusion of the intermediate bracket, and slide the bracket from the end of the bar.
 - Intermediate brackets should be mounted at the same intervals.

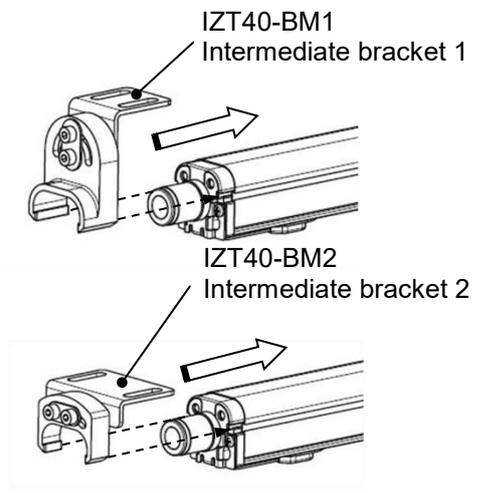


- 3) Installation of the bar
- Fix the bracket to the specified position using M5 screws.
 - Refer to "6. Dimensions" section for details.
- (The screws should be prepared by the user. Fixed part thickness 1.5mm, Recommended mounting screw is M5x8)

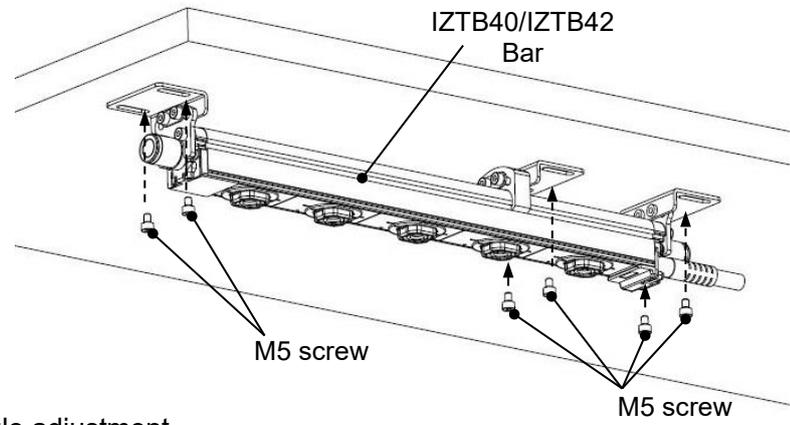

- 4) Mounting angle adjustment
- Adjust the mounting angle of the bar for effective neutralization, and fix the product with the rotating set screw (M4) at each bracket.

Tightening Torque

- IZT40-BE1 (End bracket 1) : 0.72 to 0.76Nm
- IZT40-BE2 (End bracket 2) : 0.72 to 0.76Nm
- IZT40-BM1 (Intermediate bracket 1) : 0.72 to 0.76Nm
- IZT40-BM2 (Intermediate bracket 2) : 0.47 to 0.49Nm

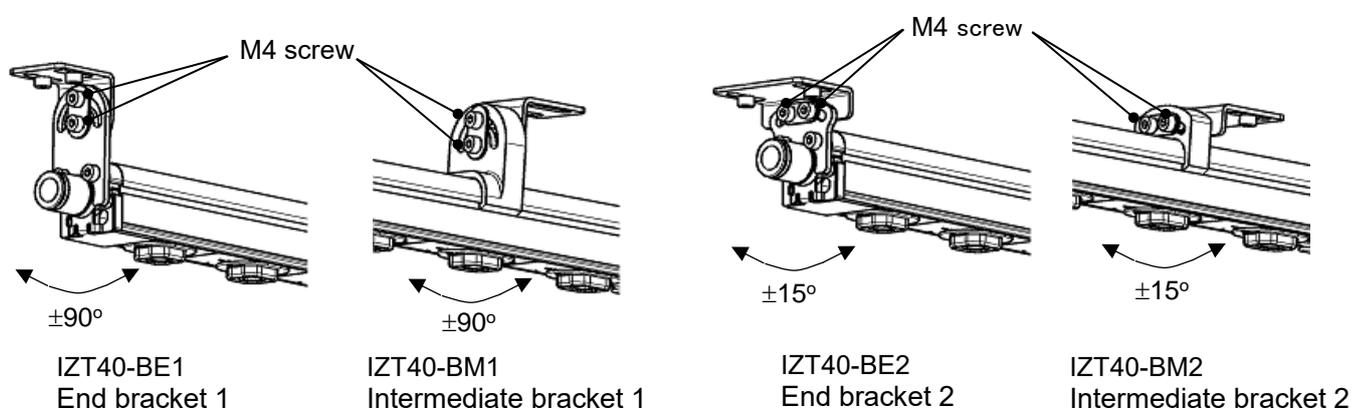


- 3-1-6. Connecting the controller and high voltage power supply module
- Remove the protection film on the controller before use. IZTC41-L has no protection film.
 - The product is used by connecting the controller and high voltage power supply module. They can be connected either directly or separately. For separate connection, an optional separate cable is required.
 - Mount a dust cover on the D-sub connector when not using the directly mounted high voltage power supply module.

1) Direct connection

- Fix the controller and high voltage power supply module using cross recessed pan head screw (M4x30).

Tightening Torque: 0.22 to 0.24Nm

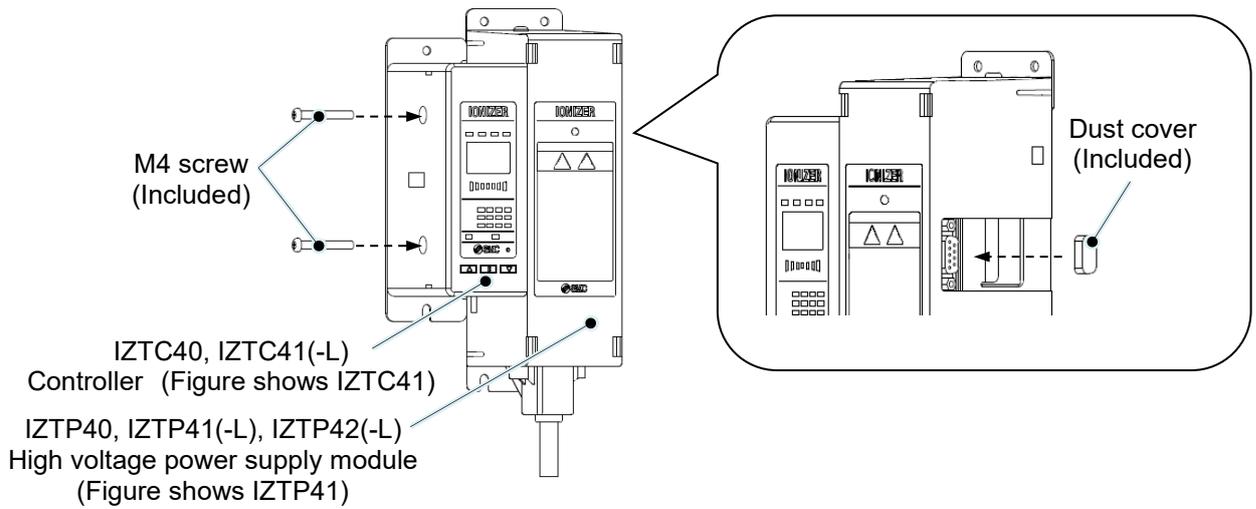


2) Separate connection

- For separate connection, an optional separate cable is required.
- Mount the spacers (included) to fix the separate cable to the high voltage power supply module. Fix the spacers (2 pcs.) to the plug (male side) of the D-sub connector on the high voltage power supply module.
- Connect the controller and high voltage power supply module after mounting the spacers and fix them using 2 pan head combination screws (M2.6).


Spacer tightening torque: 0.4 to 0.6 Nm

Separate cable tightening torque: 0.25 to 0.35 Nm

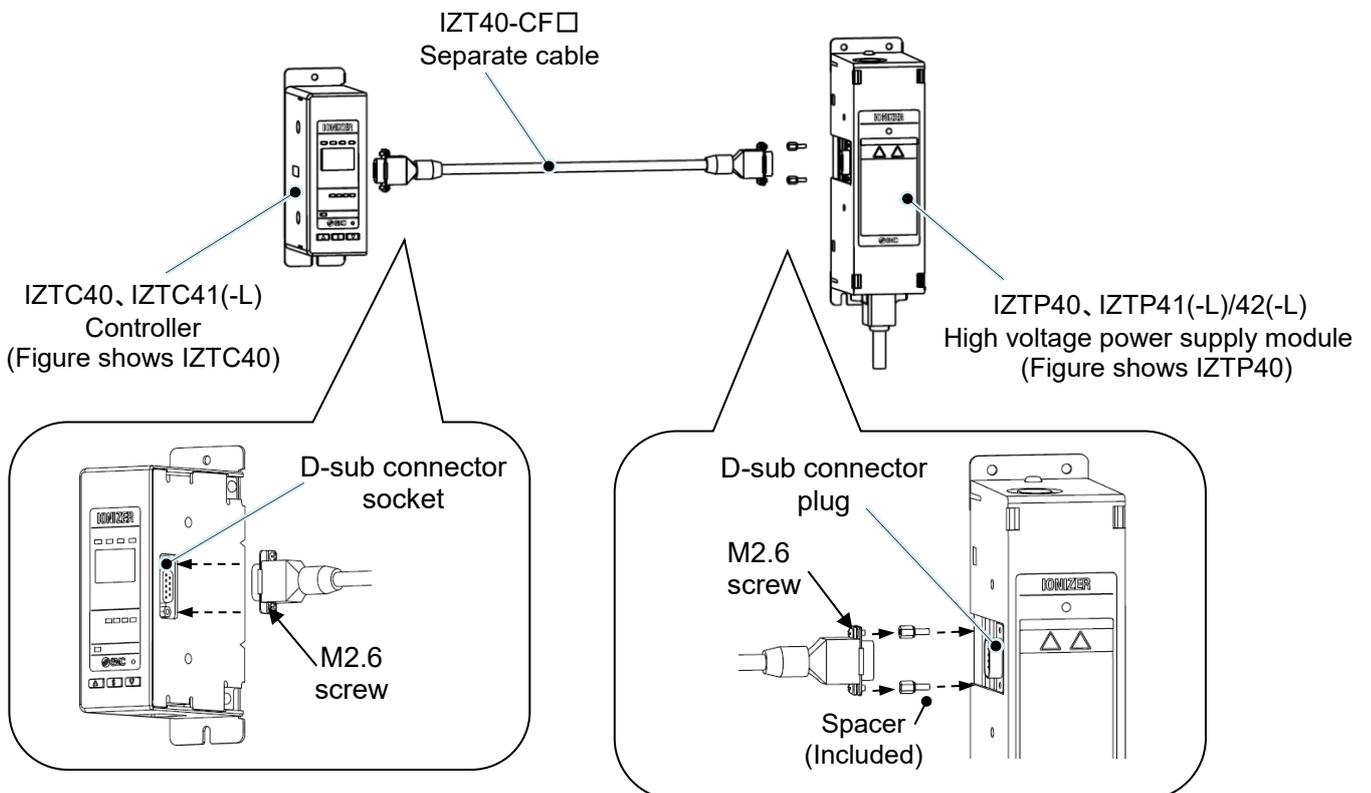


3) Connecting multiple units.

- Up to 4 controllers and high voltage power supply modules can be connected together.
- Controller IZTC40 can be connected to IZTP40 only.
- Controller IZTC41 can be connected when IZTP41 and IZTP42 are used together, but IZTP40 cannot be connected. Transistor input/output type and IO-Link type cannot be mixed.
- When multiple controllers are connected, make sure that the displayed content and the number of connected controller is consistent after power is supplied.
(Connected CH turns on or flashes)

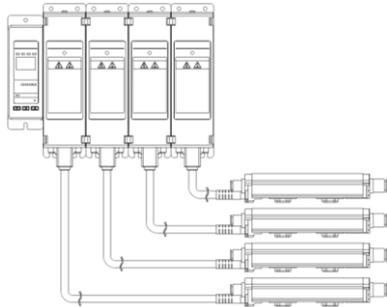

Direct connection
Example of connecting IZTC40,
IZTP40 and IZTB40 (4pcs.)

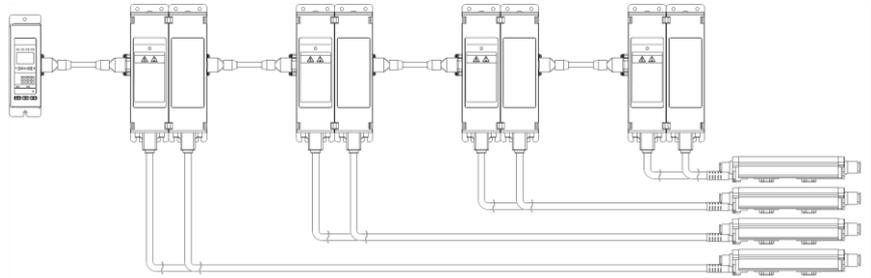

Separate connection
Example of connecting IZTC41(-L), IZTP42(-L) and IZTB42 (4pcs.)


3-1-7. Installing the controller and high voltage power supply module

- Install the controller and high voltage power supply module to DIN rail using screws or DIN rail mounting brackets.


- 1) Mounting with screws (The screws should be prepared by the user. Fixed part thickness 1.5mm, Recommended mounting screw is M4x6)
 - Fix the controller (IZTC40 and IZTC41(-L)) using 2x M4 screws.
 - Fix the high voltage power supply module controller (IZTP40 and IZTP41(-L)) using 4x M4 screws.
 - Fix the high voltage power supply module controller (IZTP42(-L)) using 8x M4 screws.
 - The number of screws to connect multiple high voltage power supply modules =
Number of connected modules x screws necessary for fixing a module.

I . When the controller and high voltage power supply module are directly connected

- Install the directly connected controller and high voltage power supply module at location B using M4 screws.
- Refer to 6. Dimensions for details.

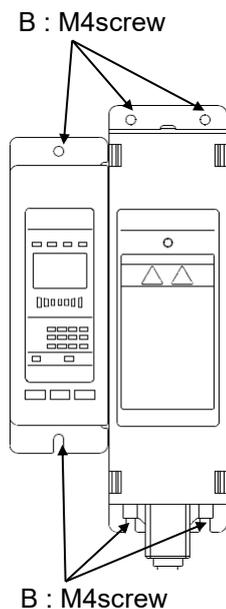


When IZTC41(-L) and IZTP41(-L) are
directly connected.

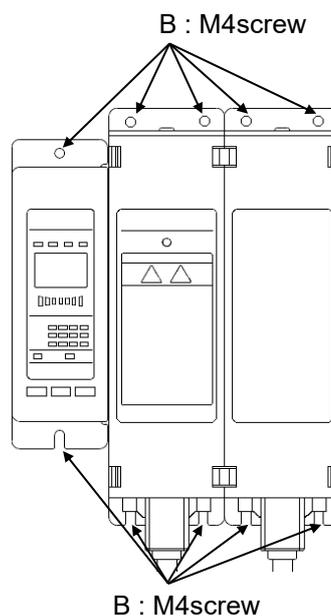

When IZTC41(-L) and IZTP42(-L) are
directly connected.

II . When the controller and high voltage power supply module are connected separately

- Mount the spacers to the high voltage power supply module.
Refer to 3-1-6. Connect the controller and high voltage power supply Module.
- Install the separately connected controller and high voltage power supply module by at location B using M4 screw (x 6).
- Refer to 6. Dimensions for details.

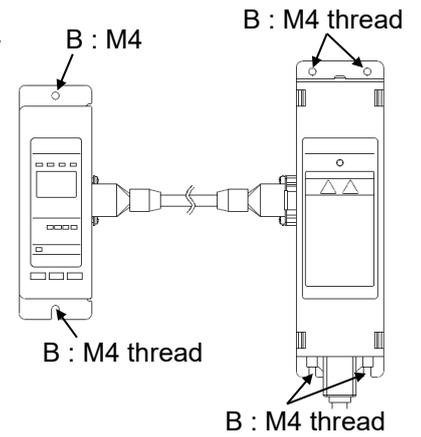

III. Adding a high voltage power supply module

- a. High voltage power supply module to be added should be
- Connected by D-sub connector at location C.
 - Controller IZTC40 can be connected to IZTP40 only. Controller IZTC41 can be connected when IZTP41 and IZTP42 are used together, but IZTP40 cannot be connected. Transistor input/output type and IO-Link type cannot be mixed.

b. Mounting bracket


- Mount the brackets to location D.

c. Install the controller and high voltage power supply module


- Fix the controller and high voltage power supply module at location B using M4 screw.
- Refer to "6. Dimensions" section for details.

d. High voltage power supply module CH number setting


- Set the CH number so that it does not duplicate the set number of other channels.
Refer to 4-3. High voltage power supply module CH number setting.
If duplicated, it will be verified as an error.
Refer to "4-5. Alarms" for further details.

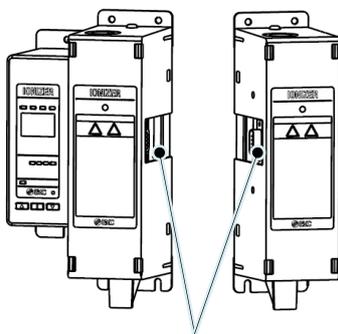

C : D-sub connector

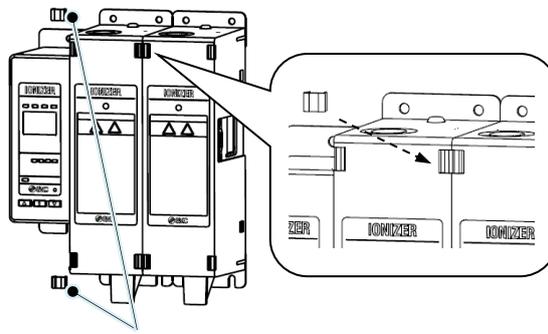

D : Brackets(accessories)

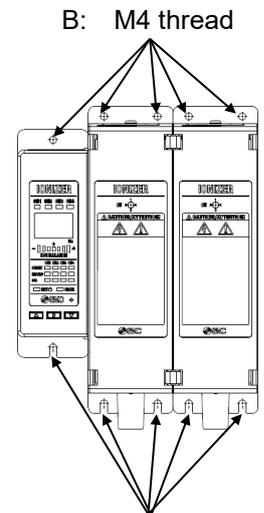

B : M4 thread

2) Installation of DIN rail

- Use an optional DIN rail mounting bracket.
- DIN rail mounting brackets are required for mounting the controller and high voltage power supply module.
- Tighten the fixing brackets that are installed and shipping with specified torque before installation.

I . When the controller and high voltage power supply module are directly connected

a. Removal of the fixing bracket

- Remove the fixing bracket from the DIN rail mounting bracket at the adjoining faces indicated at location E.

b. DIN rail mounting bracket


- Fix the controller and high voltage power supply module to the DIN rail mounting bracket using M4 screws.

Tightening Torque: 1.30 to 1.50 Nm

c. Install to the DIN rail.

- After installing the DIN rail mounting bracket, fix the controller and high voltage power supply module to the DIN rail using M4 screws.

Tightening Torque: 1.30 to 1.50 Nm

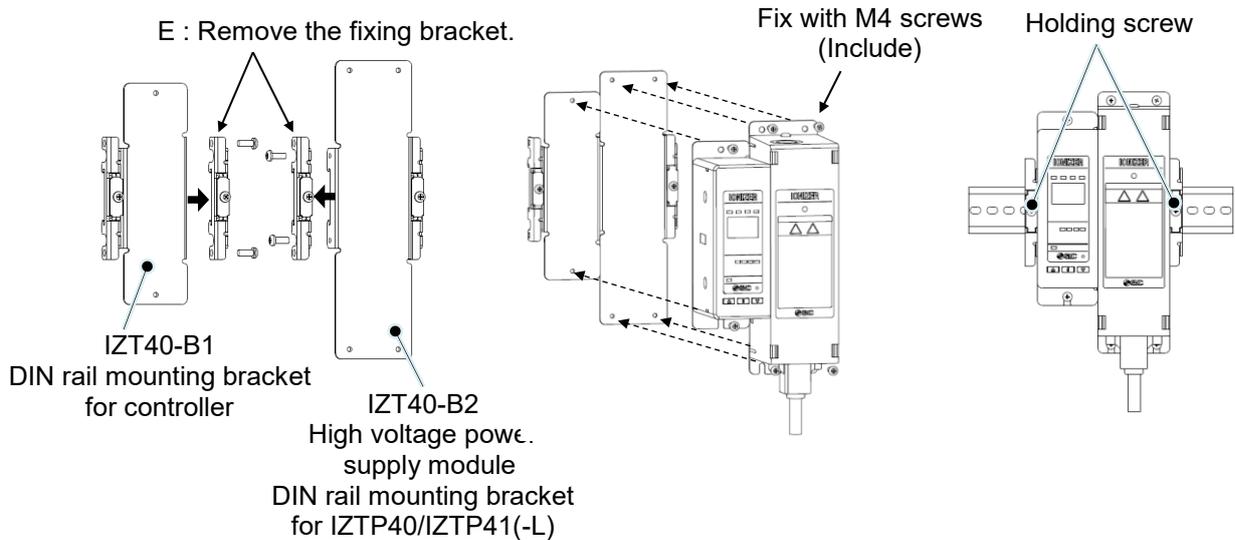

II . When the controller and high voltage power supply module are connected by separate cable

- Mount the spacers to the high voltage power supply module connector. Refer to 3-1-6. Connect the controller and high voltage power supply module.

a. DIN rail mounting bracket


- Fix the DIN rail mounting bracket to the controller and high voltage power supply module using M4 screws.

Tightening Torque: 1.30 to 1.50 Nm

b. Install to the DIN rail.

- After installing the DIN rail mounting bracket, fix the controller and high voltage power supply module to the DIN rail using M4 screws.

Tightening Torque: 1.30 to 1.50 Nm


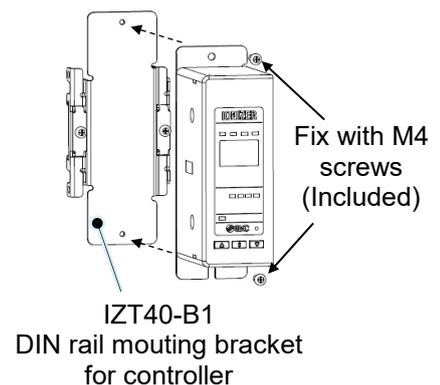


c. Connection of separate cable

- Mount the spacers (included) to fix the separate cable to the high voltage power supply module.
- Fix the spacers (2pcs.) to the plug (male side) of the D-sub connector with high voltage power supply module.
- Connect the controller and high voltage power supply module after mounting the spacers and fix them using M2.6 screws. Refer to 3-1-6. Connect the controller and high voltage power supply module.

Spacer tightening torque: 0.4 to 0.6 Nm


Separate cable tightening torque: 0.25~0.35 Nm

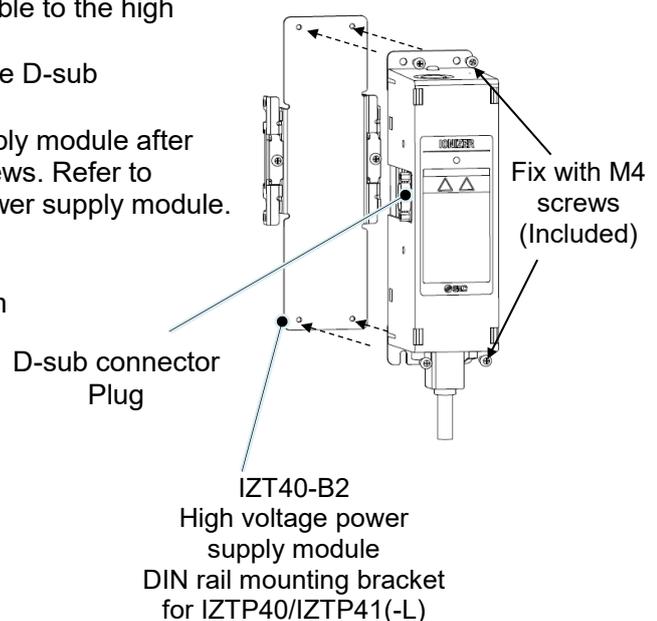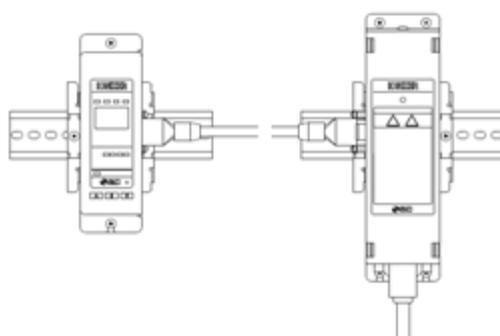

III. When the high voltage power supply module is added directly

a. Removal of the fixing bracket


- Remove the fixing bracket from the DIN rail mounting bracket at the adjoining faces indicated at location E.

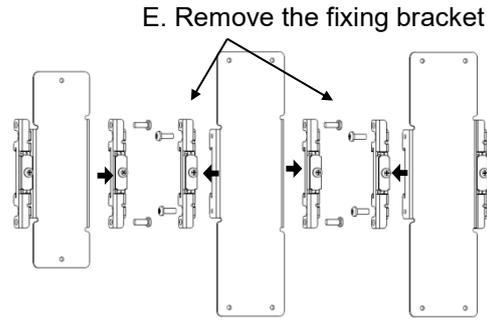

b. Mounting of DIN rail mounting bracket

- Fix the controller and high voltage power supply module to the DIN rail mounting bracket using M4 screws.


Tightening Torque: 1.30 to 1.50 Nm

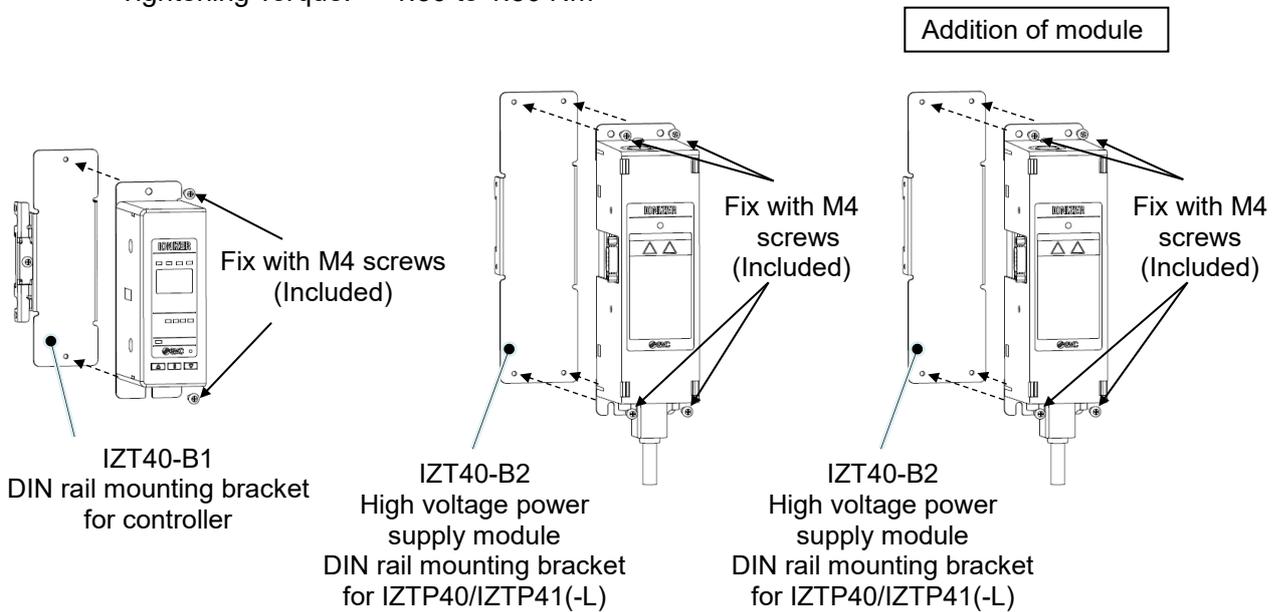

c. Connect the controller and high voltage power supply module


- Connect the D-sub connector in location C and fix the controller and high voltage module together using M4x30 screws (2 pcs. included as an accessory).

Tightening Torque: 0.22 to 0.24 Nm

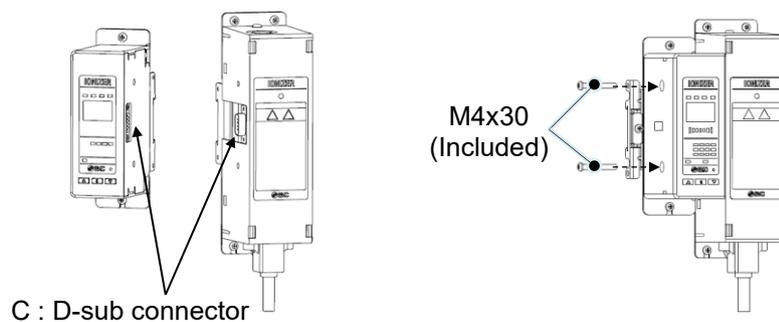


d. Install to DIN rail

- Mount them on to the DIN rail and connect the additional high voltage power supply module D-sub connector.

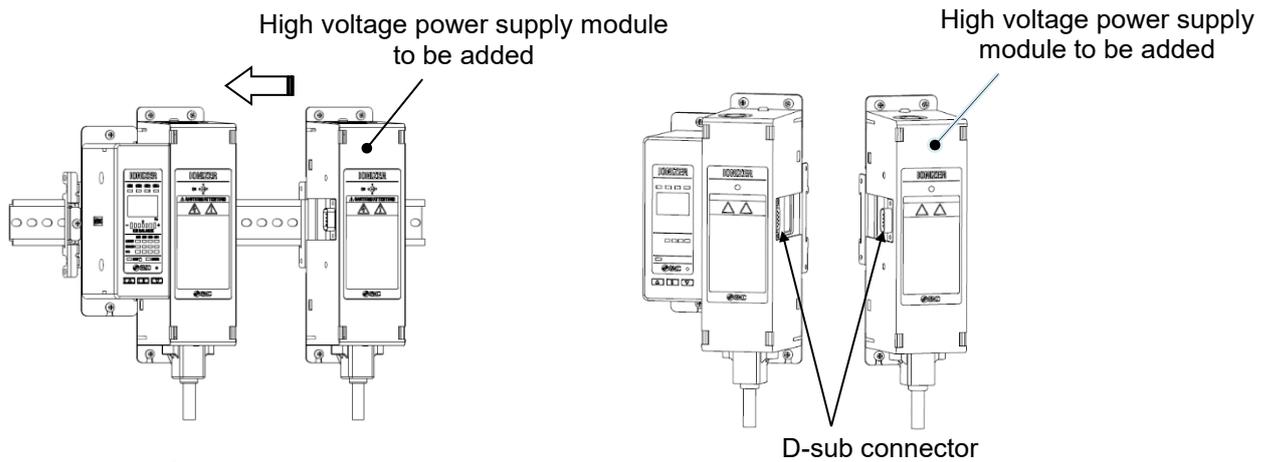

e. Mount the fixing bracket

- Mount the fixing brackets (included as an accessory) in location D.

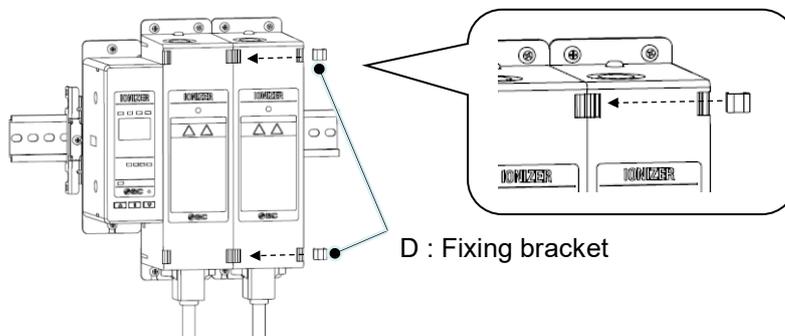

f. Fix to DIN rail

- After installing to the DIN rail, fix the controller and high voltage power supply module using set screws.

Tightening Torque: 1.30 to 1.50 Nm



g. High voltage power supply module CH number setting

- Set the CH number setting switch for all connected high voltage power supply modules.
- Set the CH number so that it does not duplicate the set number of other channels.

(Refer to 4-3. High voltage power supply module CH number setting.)

If duplicated, it will be verified as an error.

(Refer to 4-5. Alarms for details.)

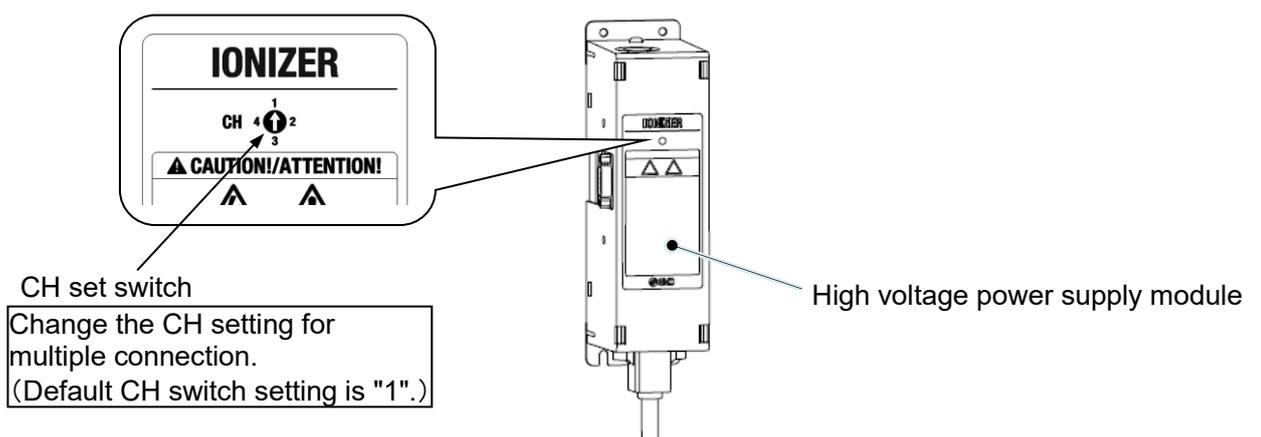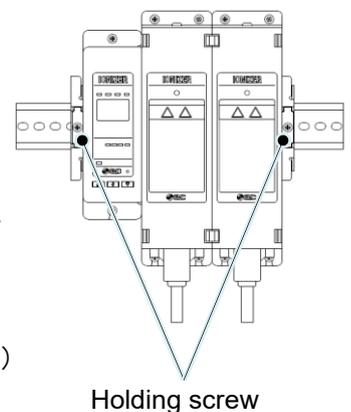

3-1-8. Routing of cables



- Do not apply excess stress to the mounting part of the connector.
- When the cable is bent, maintain the minimum bend radius.

Minimum bending radius: Power supply cable: 40 mm (IZT40/41/42)
Power supply cable: 48 mm (IZT41-L/42-L)
Communication cable: 40 mm (IZT41-L/42-L)
Separate cable: 40 mm
High voltage cable: 30 mm
 ※Separate cable is optional.

1) Power supply cable (IZT40/41/42)

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.


- This cable supplies power to this product and external equipment used to control this product. (IZT40 has no input/output functions.)
- When connecting the controller to the power supply cable, insert it until it makes a click sound.
- When removing the power supply cable, press the plug claw to release the lock and pull it out straight. If mounted or removed in an inappropriate direction, the connector may be damaged and cause operation failure.
- Fix the cable around the connecting part so that stress is not applied to the plug.
- Connect the lead wires according to the wiring diagram. Unused wires should be cut short, or insulated using insulation tape.
- To satisfy the current capacity, make sure to wire 2 brown cables in which a voltage of 24 VDC is supplied and 2 blue cables in which 0V is connected.

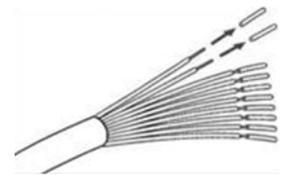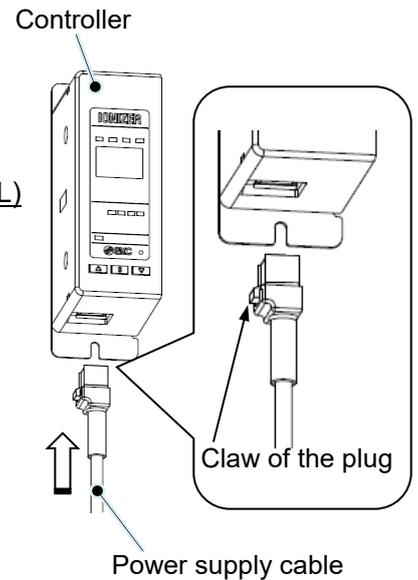

2) Separate cable (optional)

- Cable for connecting the controller and high voltage power supply module and connecting extension modules separately. This cable is not necessary when the modules are directly connected.
- Before connecting the cable, mount the spacers (included) in the male side of the D-sub connector plug on the high voltage power supply module. Refer to 3-1-6. Connect the controller and high voltage power supply module.
- It is not necessary to mount spacers to the controller D-sub connector and the D-sub connector (socket) of the high voltage power supply module because spacers are already mounted to them.
- When the separate cable is mounted or removed, pinch the connector with fingers and insert or take out the plug vertically. If mounted or removed in an inappropriate direction, the connector may be damaged and cause operation failure.
- After connecting the separate cable, fix screws of the connector. Mount the dust cover to any D-sub connector which is not used.

Spacer tightening torque: 0.4 to 0.6 Nm
 Separate cable tightening torque: 0.25 to 0.35 Nm


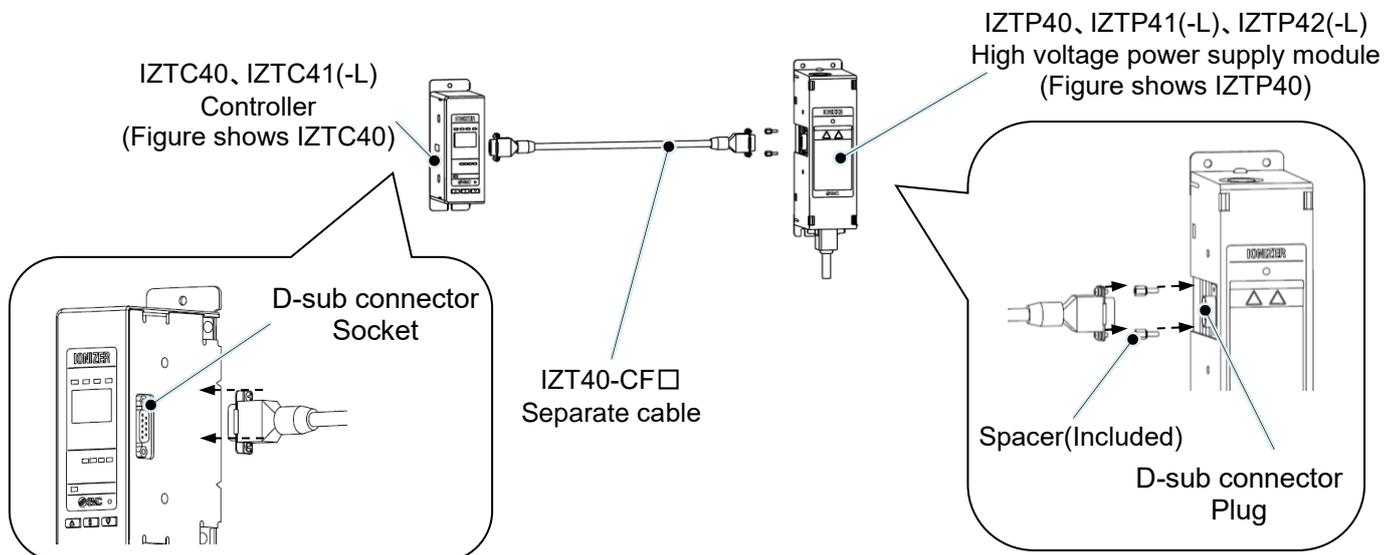


3) High voltage cable

I . High voltage cable connection

- Connect the high voltage cable at the bar end to the high voltage power supply module.
- When connecting and disconnecting the high voltage cable, hold the plugs together with the plug bodies, and insert or pull out straight. If mounted or removed in an inappropriate direction, the mounting part of the modular jack may be damaged and cause operation failure.
- Do not touch part A when handling the plug. Be careful so that moisture oil or foreign matter does not adhere to the plug. Adhesion of moisture, oil or foreign matter on part A may cause high voltage electric leakage. If moisture, oil, or foreign matter adheres to part A, clean it with ethanol.
- After connecting the high voltage cable to the high voltage power supply module, fix the cable using 2 cross recessed pan head screws (M4x10) included with the product.

Tightening Torque: 0.49 to 0.53 Nm

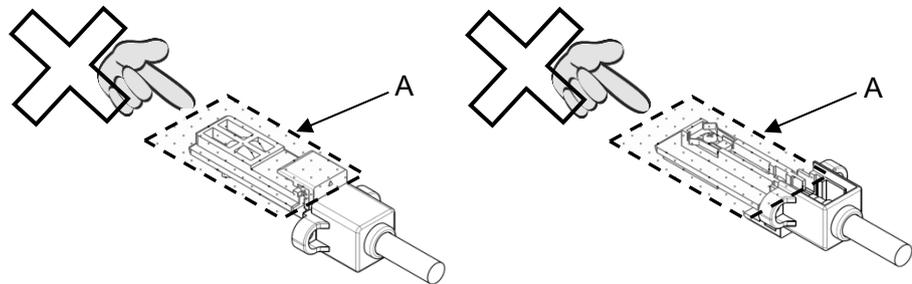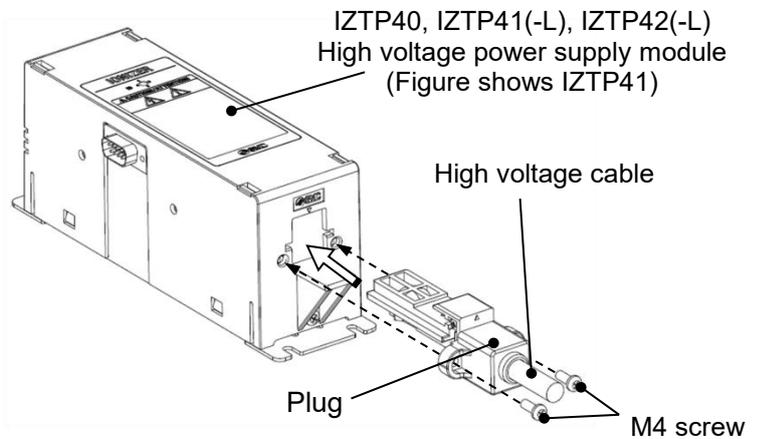

High voltage connector


II . Wiring high voltage cable

- When installing the high voltage cable, use the specified high voltage cable holder.
- Refer to "6. Dimensions" section for details.

a. High voltage cable holder (straight)

- Use 2 cross recessed pan head screws for installing the high voltage cable holder. (The screws should be prepared by the user. Fixed part thickness 1.6mm, Recommended mounting screw is cross recessed pan head screw M4x6)
- Press the cable positioning it into the holding position and install it.


Tightening torque: 0.19 to 0.21 Nm

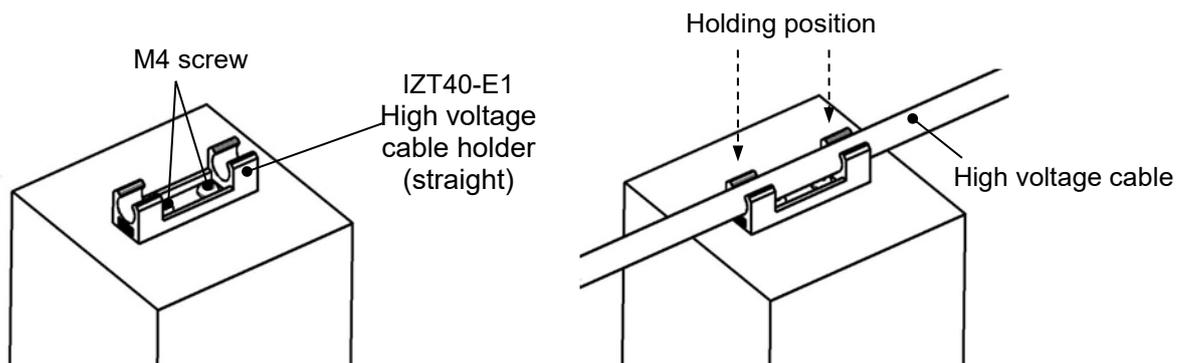


b. High voltage cable holder (elbow)

- Use the cable holder when bending the high voltage cable through 90 degree.
- Use 2 holders when installing high voltage cable for the IZT42.
- Use cross recessed pan head screws for fixing the high voltage cable holder. (The screws should be prepared by the user. Fixed part thickness 3.8mm, Recommended mounting screw is cross recessed pan head screw M4x8.)
- When they are used in layers, select the screw length considering the thickness of the high voltage cable holder (14.8 mm/holder).
- When holding the high voltage cable to the cable holder, align the cable in the holding position and mount it by pressing the cable.


Installation example 1

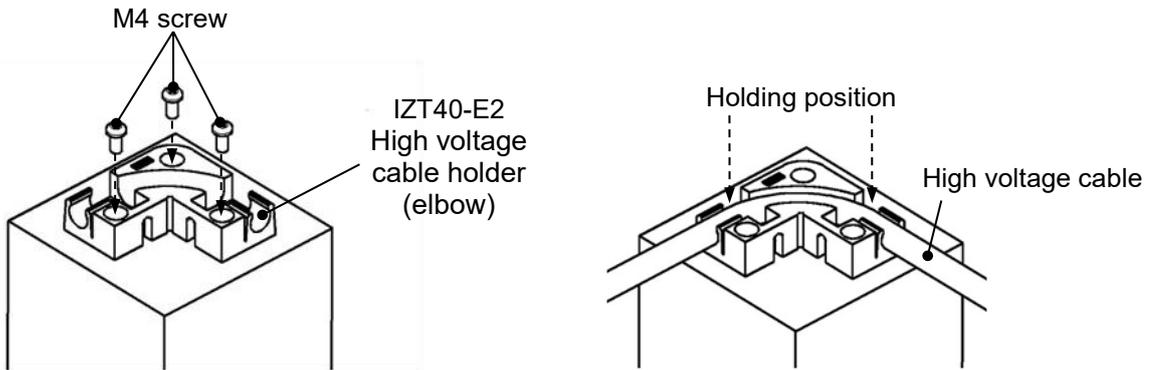

Installation example 2

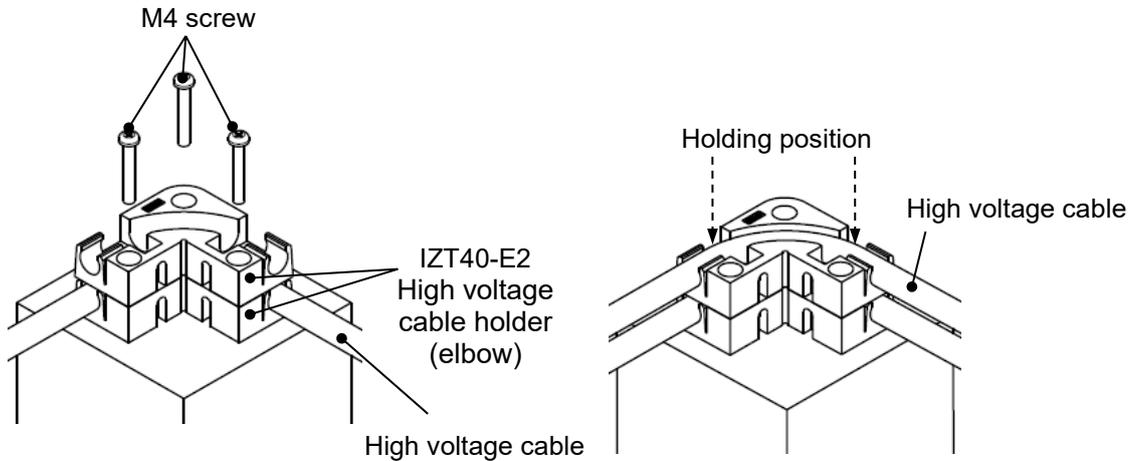

Installation example 3

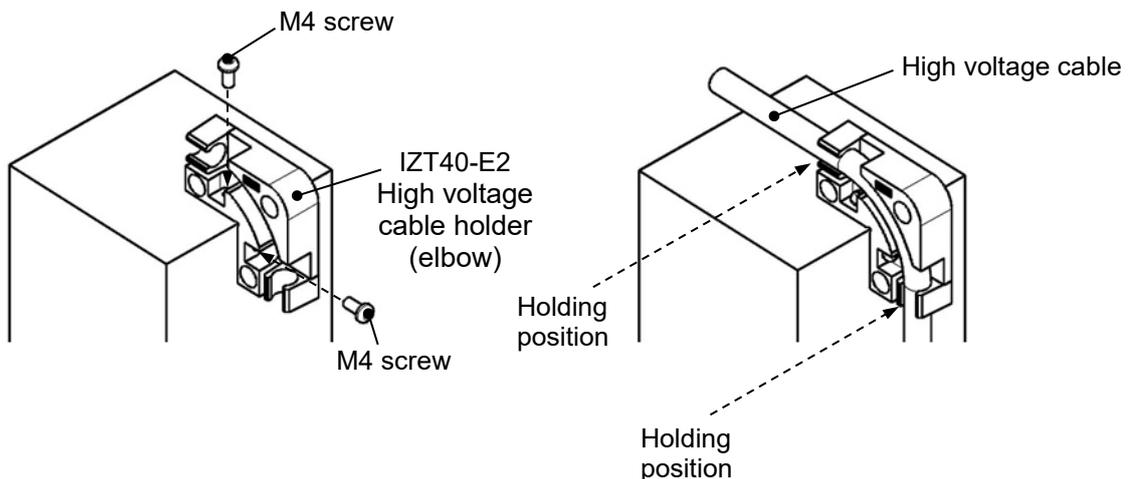

3-2. Wiring (IZT40/41/42)

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

- Wire power cables according to the connection circuit and wiring chart.

3-2-1. Ground the F.G. cable

- Make sure to ground the F.G. cable with a ground resistance of 100Ω or less.
- The F.G. cable is used as a reference electric potential for static neutralization. If the F.G. cable is not grounded, an optimal offset voltage (ion balance) cannot be obtained, and it may damage this product and power supply.

3-2-2. Connection Circuit

- Do not apply excess stress to the mounting part of the controller connector.
- When the power supply cable is bent, maintain the minimum bend radius.

[Minimum bend radius] : 40 mm


- Connect the lead wires according to the wiring diagram.
- Unused wires should be cut short, or insulated using insulation tape.
- To satisfy the current capacity, make sure to wire 2 brown cables in which a voltage of 24 VDC is supplied and 2 blue cables in which 0V is connected.

1)Wiring of IZTC40

Table9. Wiring

Cable color	Signal name	Signal direction	Description
Brown	DC(+)	IN	Connect power supply to operate the Ionizer.
Blue	DC (-)	IN	
Green	F.G.	-	Make sure to ground with a resistance of 100Ω or less to use it as a reference electric potential for Ionizer.
Pink	Unused	-	-
Gray	Unused	-	-
Yellow	Unused	-	-
Purple	Unused	-	-
White	Unused	-	-
Black	Unused	-	-
Orange	Unused	-	-

Controller (IZTC40)

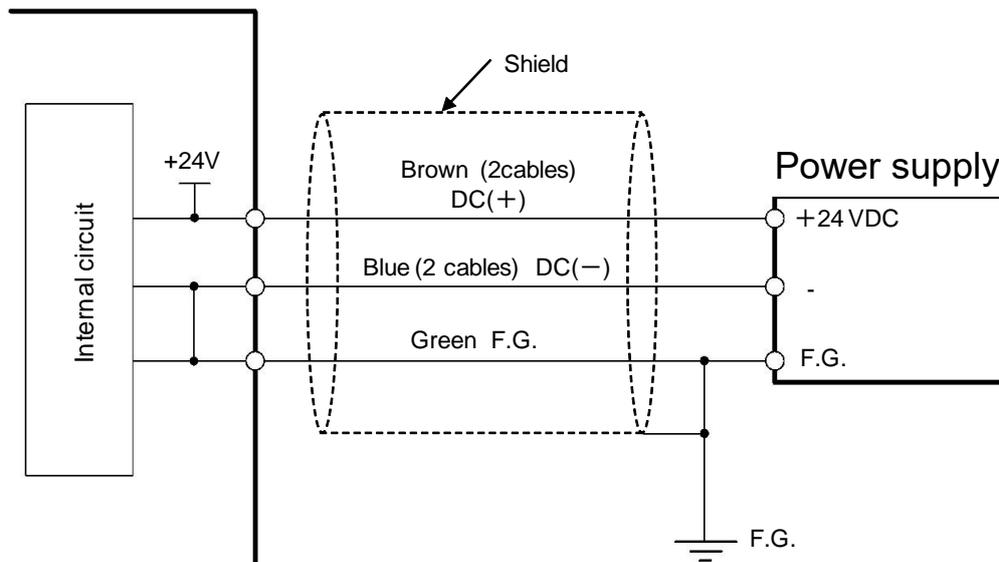

Make sure to ground the F.G. cable (green) with a resistance of 100 ohms or less. Without grounding, this products and/or power supply may be damage.


2) Wiring of IZTC41

For IZTC41-L, refer to the IO-Link dedicated instruction manual.

Table10. Wiring


Cable color	Signal name	Signal direction	Description
Brown	DC(+)	IN	Connect power supply to operate the Ionizer.
Blue	DC (-)	IN	
Green	F.G.	-	Make sure to ground with a resistance of 100Ω or less to use it as a reference electric potential for Ionizer.
Pink	Ion discharge stop signal CH1	IN	Signal input to turn ON/OFF ion generation of each bar (CH1 to 4).
Gray	Ion discharge stop signal CH2	IN	NPN specification: Ion generation is stopped by connecting to 0 V. (Ion generation starts by disconnecting)
Yellow	Ion discharge stop signal CH3	IN	
Purple	Ion discharge stop signal CH4	IN	PNP specification: Ion generation is stopped by connecting to 24 VDC. (Ion generation starts by disconnecting)
White	Maintenance detection signal	OUT (Contact point A)	Turns ON when emitter needs cleaning.
Black	Error signal	OUT (Contact point B)	Turns off in case of CPU failure, power supply failure, high voltage failure, communication failure, cooling fan motor failure, inconsistent module, duplication of CH, output signal over current, or high voltage power supply module is not connected. (The signal is ON when there is no problem.)
Orange	Unused	-	-

NPN type

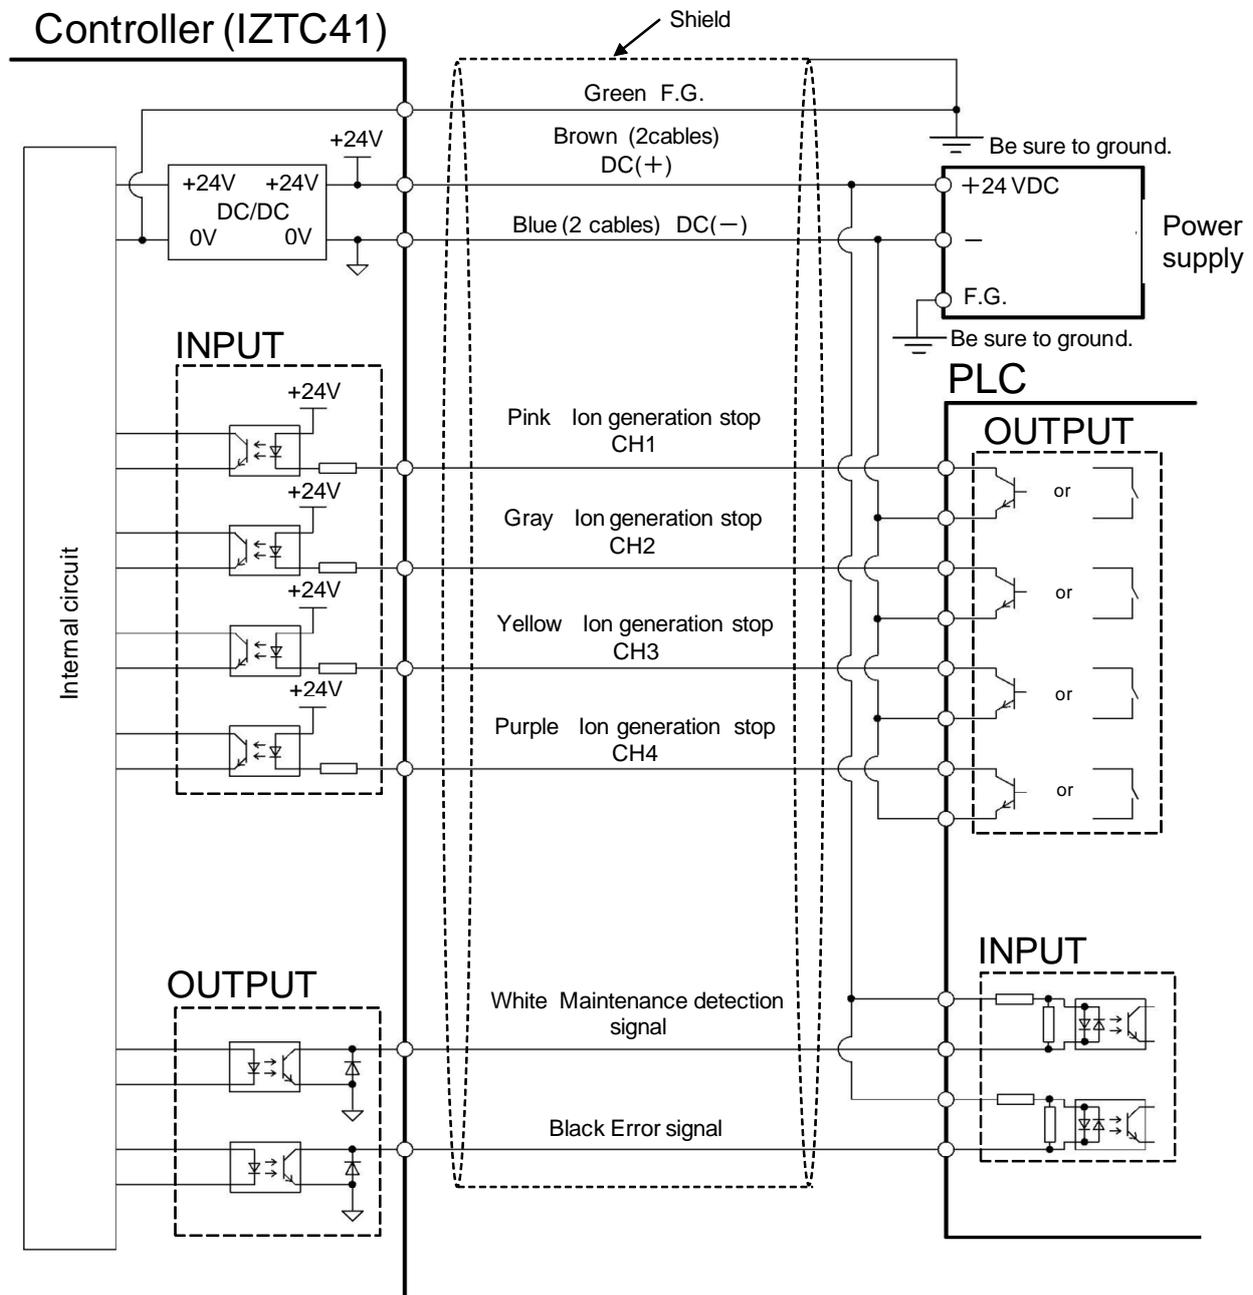

Make sure to ground the F.G. cable (green) with a resistance of 100 ohms or less. Without grounding, this products and/or power supply may be damaged.


PNP type
Controller / IZTC (IZTC41-P)

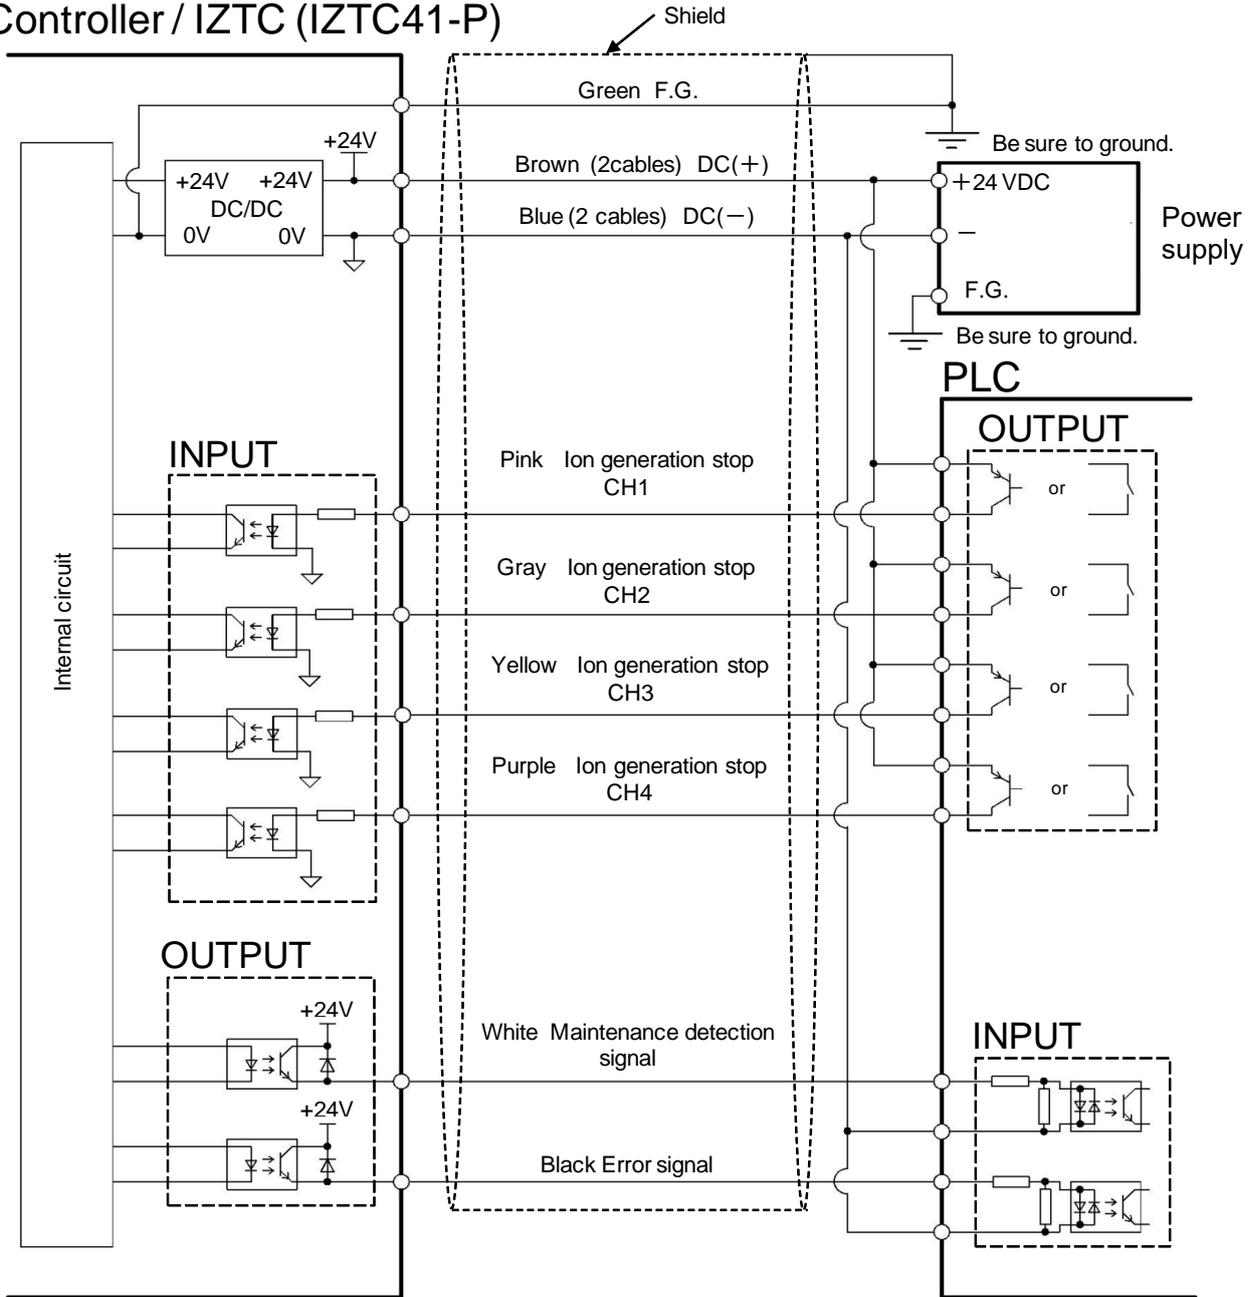

Make sure to ground the F.G. cable (green) with a resistance of 100 ohms or less. Without grounding, this products and/or power supply may be damaged.

3-2-3. Wiring of the AC adapter (IZT40/41/42)


- Perform F.G. connecting with the ground terminal (F.G.) of the AC cord when AC adapter is used. If the AC cord is plugged in, plug it into a grounded outlet. Use an AC cord with ground terminal, if it is prepared by the user.
- The ground terminal (F.G.) is used as a reference electric potential for static neutralization. If the ground terminal is not grounded, the Ionizer will not be able to achieve the optimal offset voltage (ion balance).
- When an AC adapter is used, the external input/output function cannot be used (Model: IZTC41, IZTC41-P).

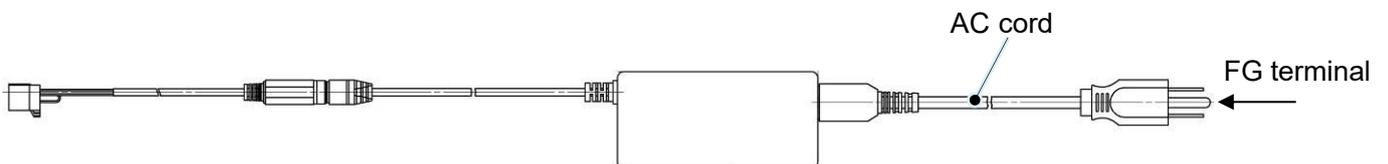

3-3. Timing chart (IZT40/41/42)



3-3-1. IZT40

1) During operation

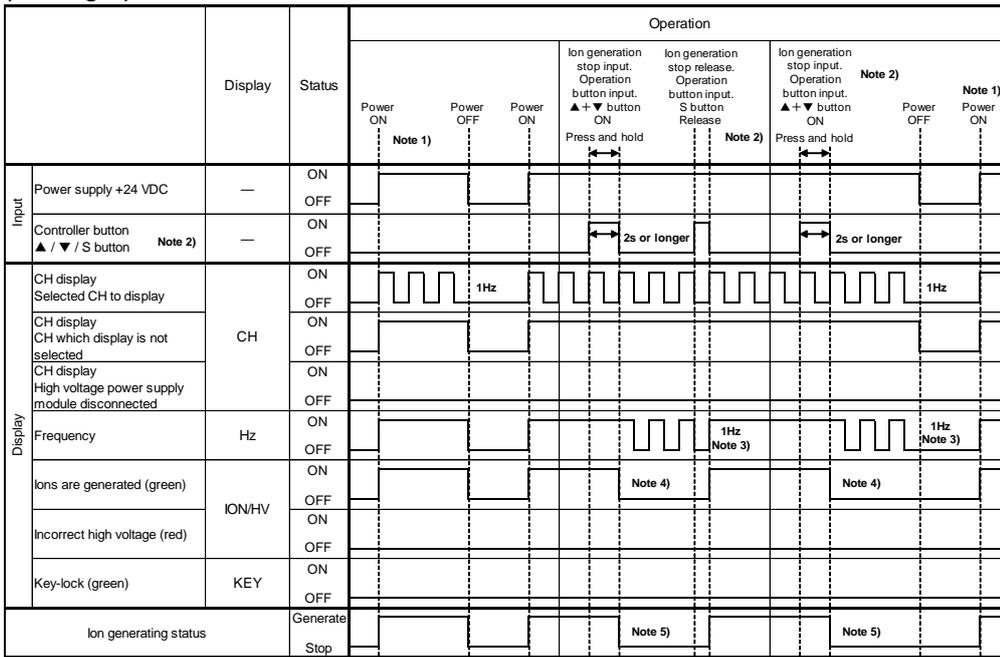

- Note 1) It takes 3 seconds to operate after the power is on.
- Note 2) Press the controller button for 2 seconds or longer to stop the ion generation.
To release, press the S button once or turn the power off and on again.
- Note 3) 5P flashes.
- Note 4) Selected bar (high voltage power supply module) ION/HV to display is turned off.
- Note 5) Selected bar (high voltage power supply module) stops ion generation.

2) Changing the setting mode

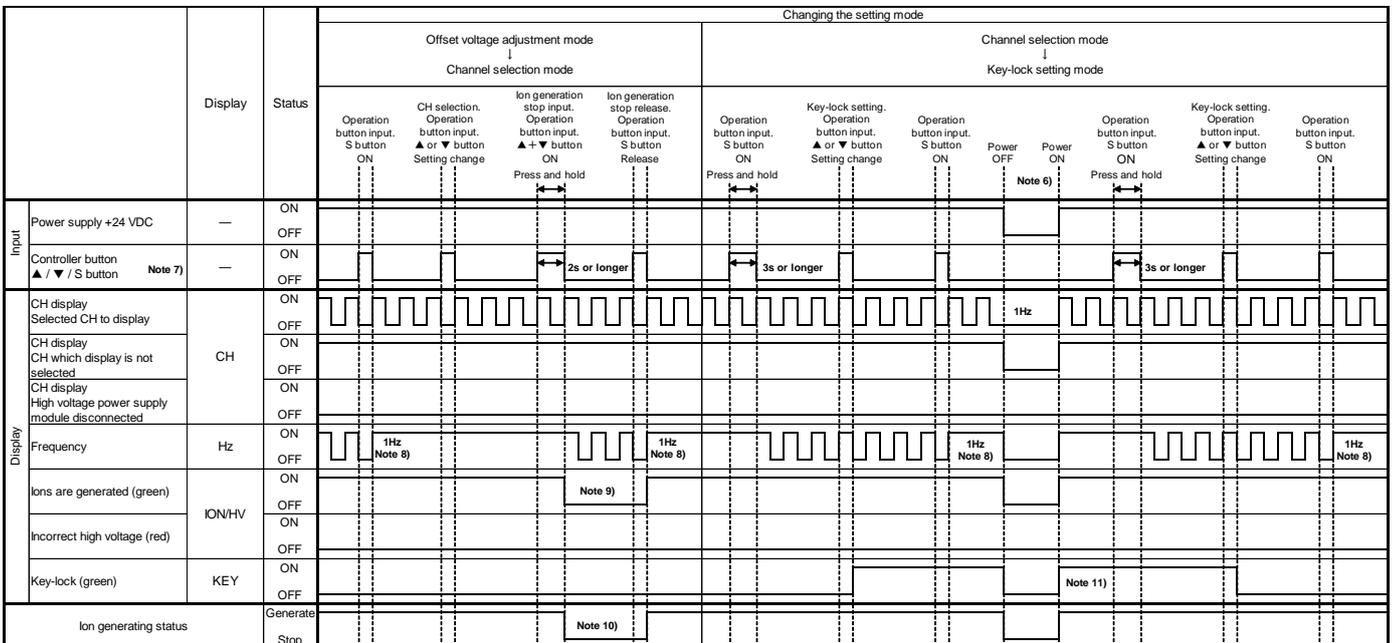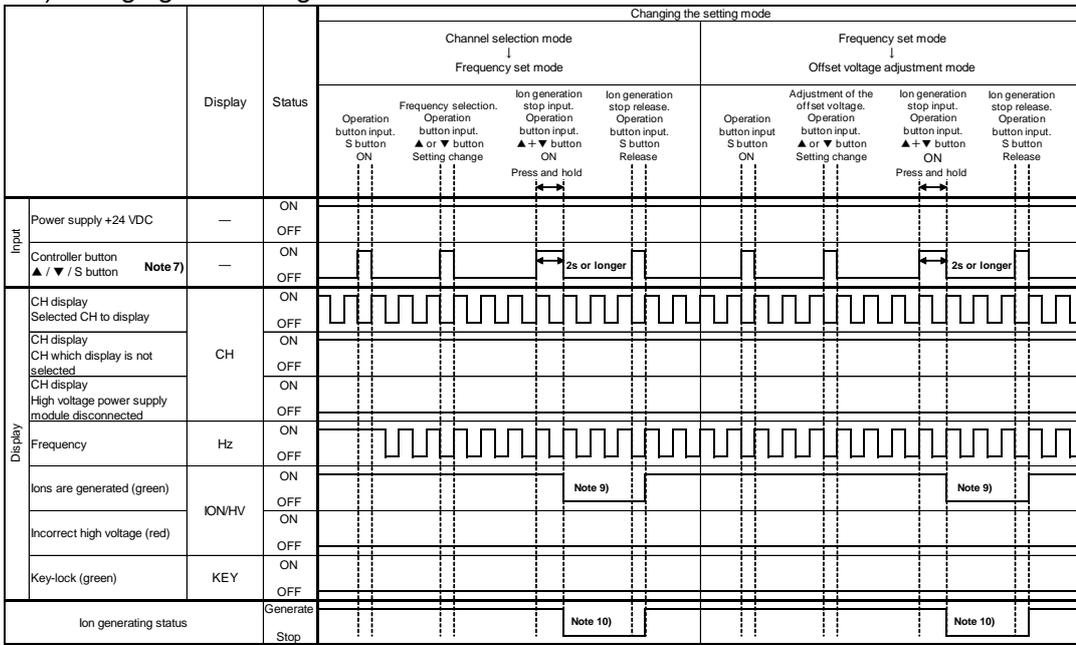

Note 6) It takes 3 seconds to operate after the power is on.

Note 7) Press the controller button once or for 2 seconds or longer to change/set the setting mode and stop the ion generation.

To release the ion generation, press the S button once or turn the power off and on again.

Note 8) Content of each setting mode is displayed by flashing. Refer to [4-4. Controller setting].

Note 9) Selected bar (high voltage power supply module) ION/HV to display is turned off.

Note 10) Selected bar (high voltage power supply module) stops ion generation.

Note 11) If ON is selected for key lock setting, the setting is held even if the power is turned off and on again.

3)When error occurs

		Display	Status	CPU failure (controller) Error code: E0	Power supply failure Error code: E1	CPU failure (High voltage power supply module) Error code: E2	Incorrect high voltage Error code: E3	Communication error Error code: E4	
				Note 12) Power OFF Power ON Error		Note 12) Power OFF Power ON Error		Note 12) Power OFF Power ON Error	
Input	Power supply +24 VDC	—	ON OFF						
	Controller button ▲ / ▼ / S button	—	ON OFF						
Display	CH display Selected CH to display	CH	ON OFF	1Hz	1Hz	1Hz	1Hz	1Hz	
	CH display CH which display is not selected		ON OFF						
	CH display High voltage power supply module disconnected		ON OFF						
	Frequency		Hz	ON OFF	1Hz Note 14)	1Hz Note 14)	1Hz Note 14)	1Hz Note 14)	1Hz Note 14)
	Ions are generated (green)	ION/HV	ON OFF						
	Incorrect high voltage (red)		ON OFF	1Hz Note 15)	1Hz Note 16)	1Hz Note 17)	Note 18)	1Hz Note 17)	
	Key-lock (green)	KEY	ON OFF	Note 19)	Note 19)	Note 19)	Note 19)	Note 19)	
	Ion generating status			Generate Stop	Note 20)	Note 20)	Note 21)	Note 21)	Note 19) Note 21)

		Display	Status	Fan motor failure Error code: E5	Inconsistent module Error code: E6	Duplication of CH Error code: E7	High voltage power supply module not connected Error code: - -	
				Note 12) Power OFF Power ON Error		Note 12) Power OFF Power ON Error		Note 12) Power OFF Power ON Error
Input	Power supply +24 VDC	—	ON OFF					
	Controller button ▲ / ▼ / S button	—	ON OFF					
Display	CH display Selected CH to display	CH	ON OFF	1Hz	1Hz	1Hz	1Hz	
	CH display CH which display is not selected		ON OFF					
	CH display High voltage power supply module disconnected		ON OFF					
	Frequency		Hz	ON OFF	1Hz Note 14)	1Hz Note 14)	1Hz Note 14)	1Hz Note 14)
	Ions are generated (green)	ION/HV	ON OFF					
	Incorrect high voltage (red)		ON OFF	1Hz Note 17)	1Hz Note 17)	1Hz Note 17)		
	Key-lock (green)	KEY	ON OFF	Note 19)	Note 19)	Note 19)	Note 19)	
	Ion generating status			Generate Stop	Note 21)	Note 21)	Note 21)	

Note 12) It takes 3 seconds to operate after the power is on.

Note 13) Abnormality can be released by the ion generation stop signal. Release the error after recovery.

Note 14) Frequency of the high voltage power supply module with a problem is displayed by flashing error code.

Refer to [4-5-1. Alarms for IZT40]. High voltage power supply module without problem indicates normal status.

Note 15) All ION/ HV of CH1 to 4 flash (red).

Note 16) All connected high voltage power supply module ION/HV flash (red).

Note 17) High voltage power supply module ION/HV with problem flashes (red).

Note 18) High voltage power supply module ION/HV with problem turns on (red).

Note 19) The status at the time of problem occurring holds the status before the problem.



Note 20) All the selected bars (high voltage power supply module) stop ion generation.

Note 21) Bar with a problem (high voltage power supply module) stops ion generation.

3-3-2. IZT41、IZT42

1) During operation

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

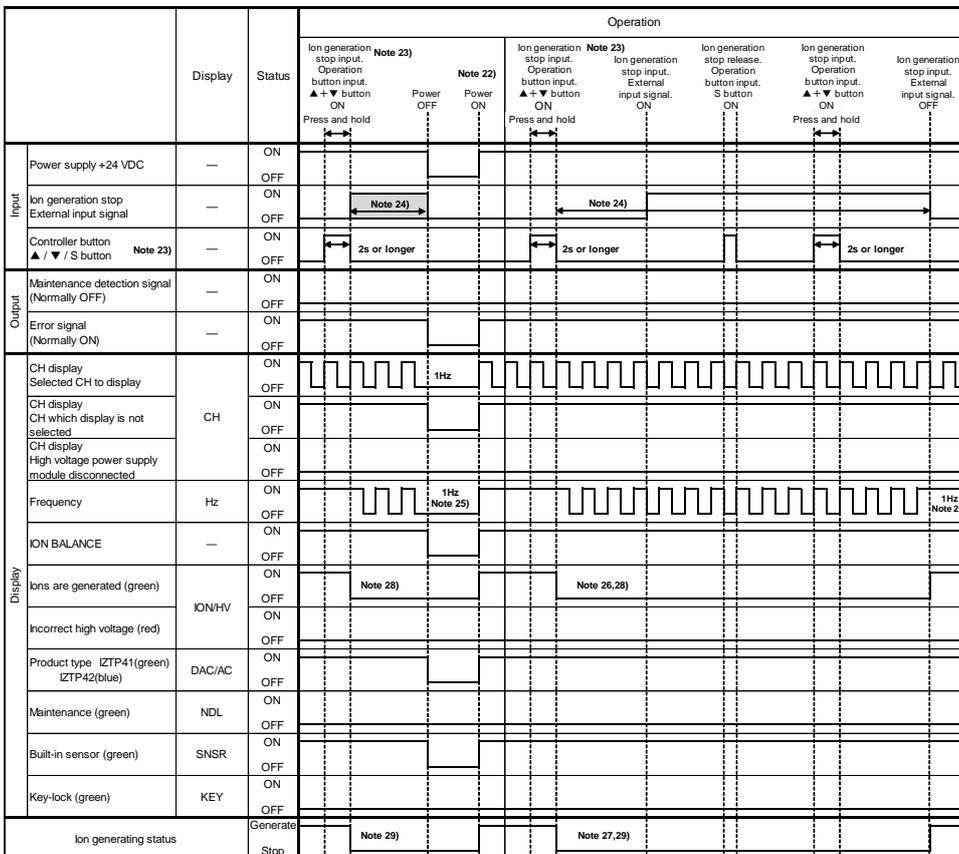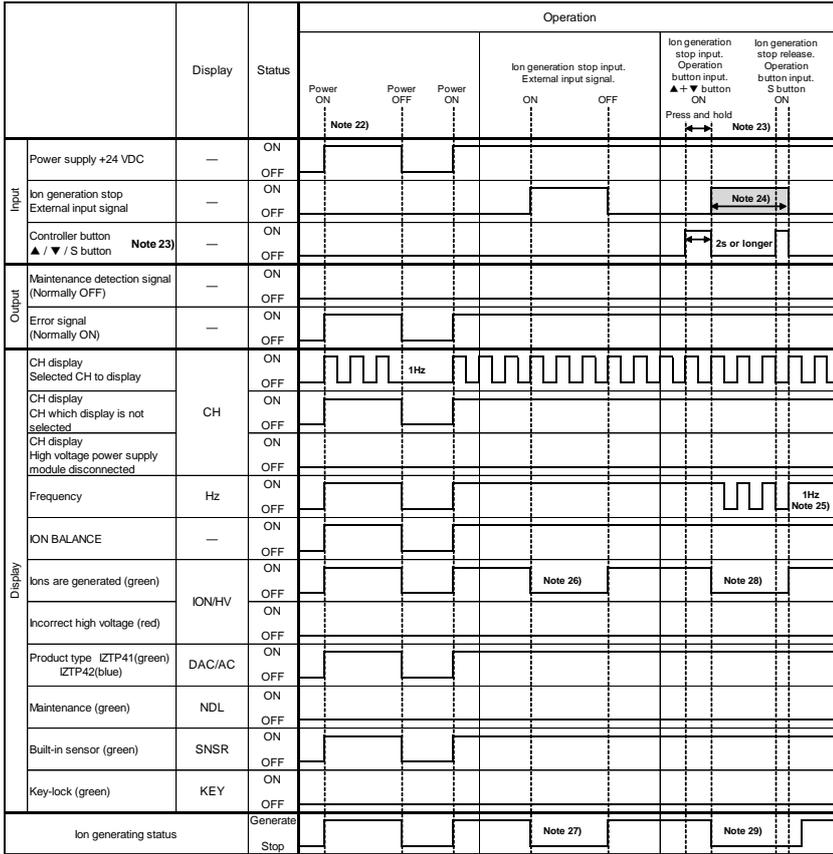

Note 22) It takes 3 seconds to operate after the power is on.

Note 23) Press the controller button for 2 seconds or longer to stop the ion generation. To release, press the S button once or turn the power off and on again.

Note 24) When the ion generation is stopped by the controller button, the signals input from the outside are disabled.

After the release of the button, externally input signal becomes effective. To release, press the S button once or turn the power off and on again.

Note 25) 5P flashes.

Note 26) ION/HV of the bar (high voltage power supply module) corresponding to the externally input signals turns off.

Note 27) The bar corresponding to externally input signals (high voltage power supply module) stops ion generation.

Note 28) Selected bar (high voltage power supply module) ION/HV to display is turned off.

Note 29) Selected bar (high voltage power supply module) stops the ion generation.

2) Changing to the setting mode

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

				Changing the setting mode									
				Channel selection mode				Frequency set mode					
				Frequency set mode				Offset voltage adjustment mode					
				Operation button input. S button ON	Frequency selection. Operation button input. ▲ or ▼ button Setting change	Ion generation stop input. Operation button input. ▲+▼ button ON	Ion generation stop release. Operation button input. S button Release	Operation button input. S button ON	Adjustment of the offset voltage. Operation button input. ▲ or ▼ button Setting change	Ion generation stop input. Operation button input. ▲+▼ button ON	Ion generation stop release. Operation button input. S button Release		
Input	Power supply +24 VDC	—	ON										
	Ion generation stop External input signal	—	OFF										
Output	Maintenance detection signal (Normally OFF)	—	ON										
	Error signal (Normally ON)	—	OFF										
Display	CH display Selected CH to display	CH	ON	[Flashing]									
	CH display CH which display is not selected		OFF	[Flashing]									
	CH display CH display High voltage power supply module disconnected		ON	[Flashing]									
	Frequency		Hz	ON	[Flashing]								
	ION BALANCE	—	ON	[Flashing]									
	Ions are generated (green)	ION/HV	ON	[Flashing]									
	Incorrect high voltage (red)		OFF	[Flashing]									
	Product type IZTP41(green) IZTP42(blue)	DAC/AC	ON	[Flashing]									
	Maintenance (green)	NDL	ON	[Flashing]									
	Built-in sensor (green)	SNSR	ON	[Flashing]									
	Key-lock (green)	KEY	ON	[Flashing]									
	Ion generating status			Generate	[Flashing]				Stop	[Flashing]			

				Changing the setting mode									
				Offset voltage adjustment mode				Channel selection mode					
				Channel selection mode				Balance control selection mode					
				Operation button input. S button ON	CH selection. Operation button input. ▲ or ▼ button Setting change	Ion generation stop input. Operation button input. ▲+▼ button ON	Ion generation stop release. Operation button input. S button Release	Operation button input. S button ON	Balance control selection. Operation button input. ▲ or ▼ button Release ON	Ion generation stop input. Operation button input. ▲+▼ button ON	Ion generation stop release. Operation button input. S button Release		
Input	Power supply +24 VDC	—	ON										
	Ion generation stop External input signal	—	OFF										
Output	Maintenance detection signal (Normally OFF)	—	ON										
	Error signal (Normally ON)	—	OFF										
Display	CH display Selected CH to display	CH	ON	[Flashing]									
	CH display CH which display is not selected		OFF	[Flashing]									
	CH display CH display High voltage power supply module disconnected		ON	[Flashing]									
	Frequency		Hz	ON	[Flashing]								
	ION BALANCE	—	ON	[Flashing]									
	Ions are generated (green)	ION/HV	ON	[Flashing]									
	Incorrect high voltage (red)		OFF	[Flashing]									
	Product type IZTP41(green) IZTP42(blue)	DAC/AC	ON	[Flashing]									
	Maintenance (green)	NDL	ON	[Flashing]									
	Built-in sensor (green)	SNSR	ON	[Flashing]									
	Key-lock (green)	KEY	ON	[Flashing]									
	Ion generating status			Generate	[Flashing]				Stop	[Flashing]			



Note 31) Press the controller button once or for 2 seconds or longer to change/set of the setting mode and stop/release the ion generation.

To release ion generation stop, press the S button once or turn the power off and on again.

Note 32) Content of each setting mode is displayed by flashing. Refer to [4-4. Controller setting].

Note 33) Bar (high voltage power supply module) ION/HV which is selected to display is turned off.

Note 34) Selected bar (high voltage power supply module) stops the ion generation.

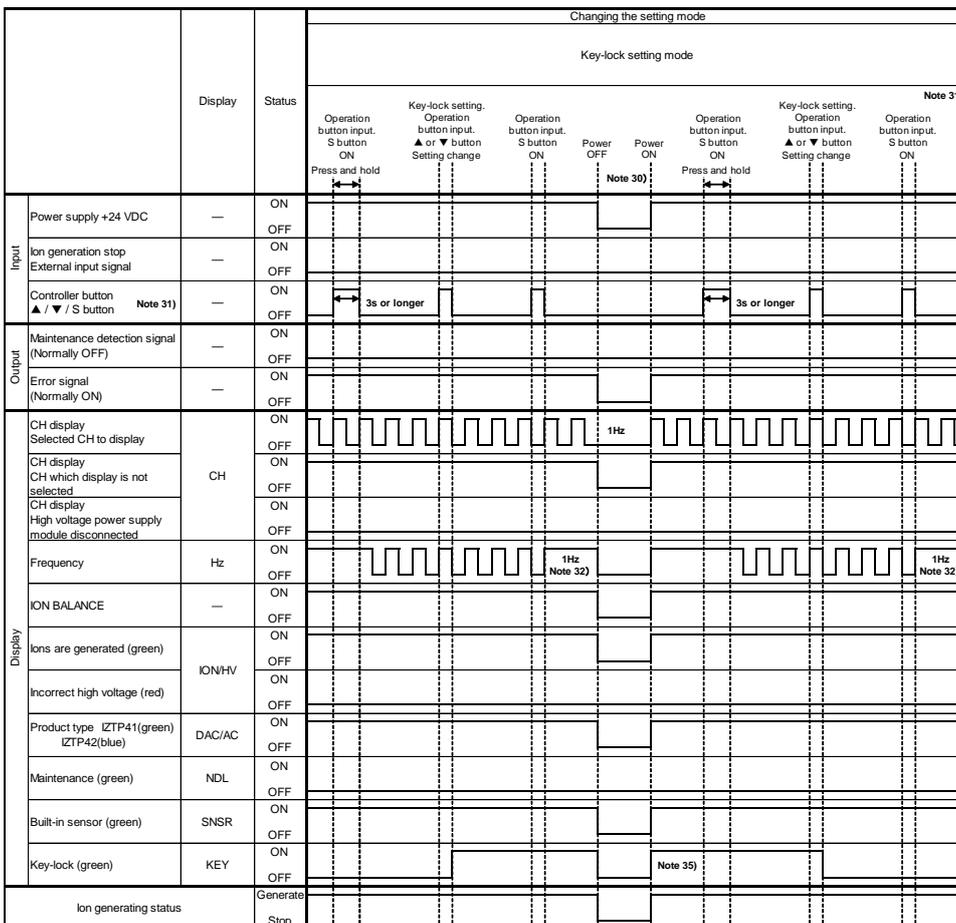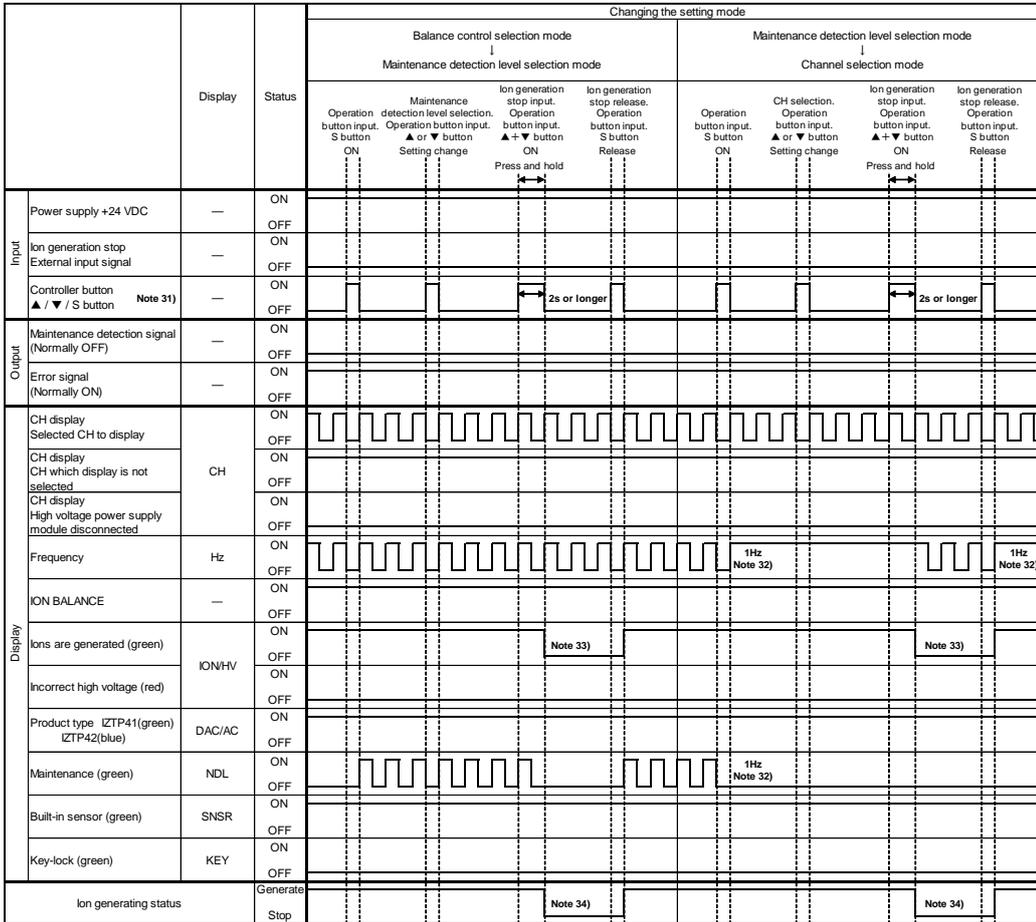

- Note 30) It takes 3 seconds to operate after the power is on.
- Note 31) Press the controller button once or for 2 seconds or longer to change/set of the setting mode and stop/release the ion generation. To release ion generation stop, press the S button once or turn the power off and on again.
- Note 32) Content of each setting mode is displayed by flashing. Refer to [4-4. Controller setting].
- Note 33) Bar (high voltage power supply module) ION/HV which is selected to display is turned off.
- Note 34) Selected bar (high voltage power supply module) stops the ion generation.
- Note 35) If ON is selected for key lock setting, the setting is held even if the power is turned off and on again.

3) Error, and maintenance warning

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

	Display	Status	CPU failure (controller) Error code: E0	Power supply failure Error code: E1	CPU failure (High voltage power supply module) Error code: E2	Incorrect high voltage Error code: E3	Communication error Error code: E4	Fan motor failure Error code: E5
			Note 36) Power OFF → Error → Power ON		Note 36) Power OFF → Error → Power ON		Note 36) Power OFF → Error → Power ON	
Input	Power supply +24 VDC	—	ON					
	Ion generation stop	—	OFF					
	External input signal	—	ON					
	Controller button ▲ / ▼ / S button	—	OFF					
Output	Maintenance detection signal (Normally OFF)	—	ON					
	Error signal (Normally ON)	—	OFF					
Display	CH display Selected CH to display	CH	ON	1Hz	1Hz	1Hz	1Hz	1Hz
	CH display CH which display is not selected		OFF					
	CH display High voltage power supply module disconnected		ON					
	Frequency		Hz	1Hz (Note 38)	1Hz (Note 38)	1Hz (Note 38)	1Hz (Note 38)	1Hz (Note 38)
	ION BALANCE	—	ON	Note 40)	Note 40)	Note 40)	Note 40)	
	Ions are generated (green)	ION/HV	OFF				Note 40)	
	Incorrect high voltage (red)		ON	1Hz (Note 42)	1Hz (Note 43)	1Hz (Note 44)	Note 45)	1Hz (Note 44)
	Product type IZTP41(green) IZTP42(blue)	DAC/AC	ON					
	Maintenance (green)	NDL	ON		Note 47)	Note 47)	Note 47)	Note 47)
	Built-in sensor (green)	SNSR	ON		Note 48)	Note 48)	Note 48)	Note 48)
	Key-lock (green)		OFF	Note 48)	Note 48)	Note 48)	Note 48)	Note 48)
	KEY	KEY	ON	Note 48)	Note 48)	Note 48)	Note 48)	Note 48)
	Ion generating status	Generate	ON	Note 49)	Note 49)	Note 50)	Note 50)	Note 48) Note 50)
	Stop	Stop	OFF					Note 50)

	Display	Status	Inconsistent module Error code: E6	Duplication of CH Error code: E7	Output signal over current Error code: E8 (Error signal) Error code: E9 (Maintenance signal)	High voltage power supply module not connected Error code: - -	Maintenance warning
			Note 36) Power OFF → Error → Power ON		Note 36) Power OFF → Error → Power ON		Note 36) Power OFF → Warning → Power ON
Input	Power supply +24 VDC	—	ON				
	Ion generation stop	—	OFF				
	External input signal	—	ON				
	Controller button ▲ / ▼ / S button	—	OFF				
Output	Maintenance detection signal (Normally OFF)	—	ON				
	Error signal (Normally ON)	—	OFF				
Display	CH display Selected CH to display	CH	ON	1Hz	1Hz	1Hz	1Hz
	CH display CH which display is not selected		OFF				
	CH display High voltage power supply module disconnected		ON				
	Frequency		Hz	1Hz (Note 39)	1Hz (Note 39)	1Hz (Note 38)	1Hz (Note 38)
	ION BALANCE	—	ON	Note 40)	Note 40)		
	Ions are generated (green)	ION/HV	OFF				1Hz (Note 41)
	Incorrect high voltage (red)		ON	1Hz (Note 44)	1Hz (Note 44)		
	Product type IZTP41(green) IZTP42(blue)	DAC/AC	ON	Note 46)	Note 46)		
	Maintenance (green)	NDL	ON	Note 47)	Note 47)	Note 48)	
	Built-in sensor (green)	SNSR	ON	Note 48)	Note 48)	Note 48)	Note 48)
	Key-lock (green)		OFF	Note 48)	Note 48)	Note 48)	Note 48)
	KEY	KEY	ON	Note 48)	Note 48)	Note 48)	Note 48)
	Ion generating status	Generate	ON	Note 50)	Note 50)		
	Stop	Stop	OFF				

Note 36) It takes 3 seconds to operate after the power is on.

Note 37) Abnormality can be released by the ion generation stop signal.

Release the error after recovery.

Note 38) Frequency with problem is displayed by flashing error code.

Refer to [4-5-2. Alarms for IZT41, IZT42].

Note 39) Frequency of the high voltage power supply module with a problem is

displayed by flashing error code. Refer to [4-5-2. Alarms for IZT41, IZT42].

High voltage power supply module without problem indicates normal status.

Note 40) Ion balance of the high voltage power supply module with problem turns off.

Refer to [4-5-2. Alarms for IZT41, IZT42].

High voltage power supply module without problem indicates normal status.

Note 41) All connected high voltage power supply module ION/HV flash (green).

Note 42) All ION/ HV of CH1 to 4 flash (red).

Note 43) All connected high voltage power supply module ION/HV flash (red).

Note 44) High voltage power supply module ION/HV with problem flashes (red).

Note 45) High voltage power supply module ION/HV with problem turns on (red).

Note 46) High voltage power supply module DAC/AC with problem turns off.

Note 47) High voltage power supply module NDL with problem turns off.

Note 48) The status at the time of problem holds the status before the problem.

Note 49) All the selected bars (high voltage power supply module) stop the ion generation.

Note 50) Bar with a problem (high voltage power supply module) stops the ion generation.

4. Function

4-1. Name of Parts

4-1-1. Controller

1) IZTC40

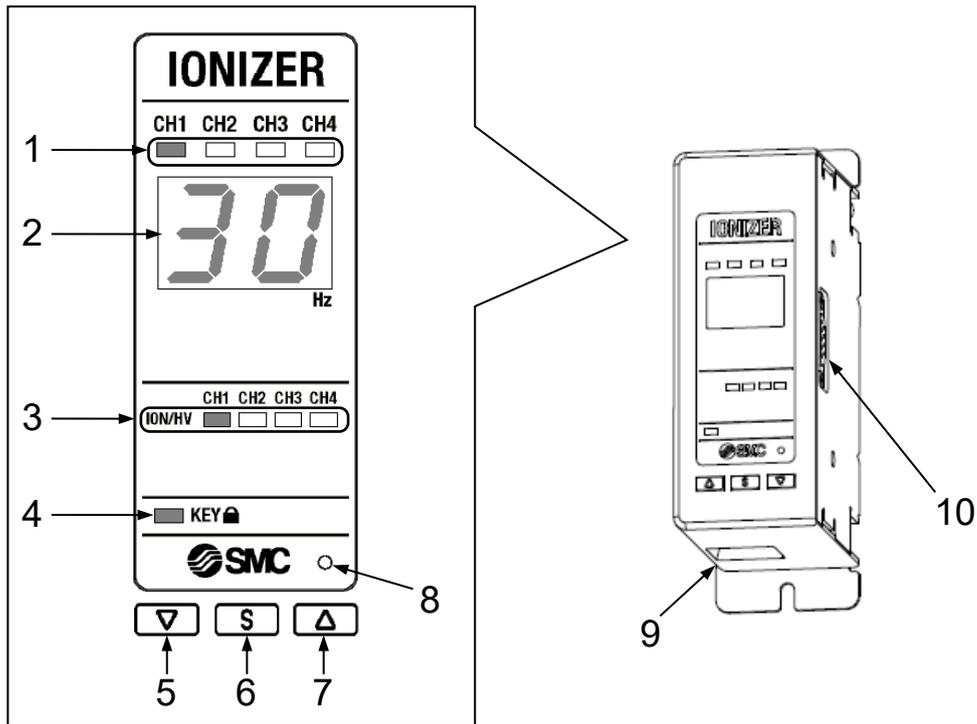


Table11. Name of parts

No.	Name	Panel indication	Type	Description
1	CH display	CH*	LED (Green)	High voltage power supply module connected to the controller is ON (green). Flashes (green) when selecting frequency or adjusting the offset voltage.
2	Frequency display	Hz	LED (Green)	Green LED is ON during operation. Green LED flashes during frequency selection, adjustment of the offset voltage and abnormality exists. Note 51)
3	Ion emission/ high voltage error display	ION/HV	LED (Green / Red)	Green LED is ON during static neutralization. Red LED is ON when high voltage abnormality exists. LED flashes (red) when CPU abnormality (controller/ high voltage power supply module), power supply abnormality, communication error, cooling fan motor failure, module inconsistency, or CH duplication exists. Turned off when the high voltage power supply module is not connected.
4	Key-lock display	KEY	LED (Green)	Key lock ON : ON (green) Key lock OFF : OFF
5	▼ button	-	Press button	Decrease the set value.
6	S button	-	Press button	Change the mode and set a set value.
7	▲ button	-	Press button	Increase the set value.
8	Reset button	-	Press button	Return the setting values of each mode to the default condition.
9	Power supply connector	-	Connector	Equipped with ionizer power supply and grounding.
10	High voltage power supply module connector	-	D-sub connector (socket)	Connect high voltage power supply module or separate cable.

Note51) Refer to [4-4. Controller setting] or [4-5-1. Alarm for IZT40] for details of frequency.

2) IZTC41 ※For IZT41C-L, refer to the IO-Link dedicated instruction manual.

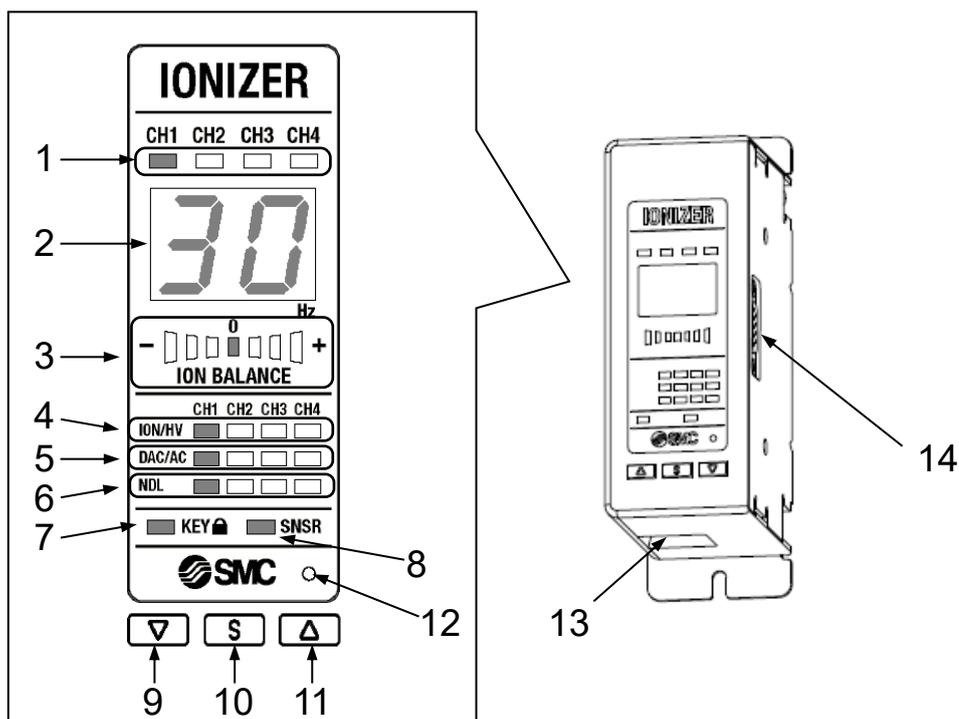


Table12. Name of parts

No.	Name	Panel indication	Type	Description
1	CH display	CH□	LED (Green)	LED of high voltage power supply module connected to the controller is ON (green), LED flashes (green) during frequency selection, offset voltage adjustment, balance control selection, maintenance detection level selection, Turned off when the high voltage power supply module is not connected.
2	Frequency display	Hz	LED (Green)	ON during operation, LED flashes (green) during frequency selection, offset voltage adjustment, balance control selection, maintenance detection level selection, key lock setting and each abnormality. Note 52)
3	Ion balance display	ION BALANCE	LED (Green/ Orange)	LED (green) is ON during operation or output signal over current. LED (green) flashes during offset voltage adjustment. LED is OFF flashes (red) when CPU abnormality (controller/ high voltage power supply module), power supply abnormality, communication error, cooling fan motor failure, module inconsistency, or CH duplication exists. LED (orange) flashes when ion balance is maximum or minimum during offset adjustment. Turned off when the high voltage power supply module is not connected
4	Ion emission/ high voltage error display	ION/HV	LED (Green / Red)	Green LED is ON during static neutralization. Red LED is ON when high voltage abnormality exists. LED flashes (red) when CPU abnormality (controller/ high voltage power supply module), power supply abnormality, communication error, cooling fan motor failure, module inconsistency, or CH duplication exists. Turned off when the high voltage power supply module is not connected
5	Indication of connected mode	DAC/AC	LED (Green /Blue)	LED is ON (green) when the high voltage power supply module IZTP41 is connected. LED is ON (blue) when the high voltage power supply module IZTP42 is connected. OFF when CPU abnormality (controller) or CH duplication exists, or high voltage power supply module is not connected.
6	Maintenance display	NDL	LED (Green)	LED (green) is ON when emitter contamination is detected. LED (green) flashes when the maintenance detection level is set. Turned off when the high voltage power supply module is not connected
7	Key-lock display	KEY	LED (Green)	Key lock ON : ON (green) Key lock OFF : OFF Turned off when the high voltage power supply module is not connected.
8	Sensor LED	SNSR	LED (Green)	Auto balance function ON : ON (green) Auto balance function OFF : OFF OFF when CPU abnormality (controller) exists or high voltage power supply module is not connected.
9	▼ button	—	Press button	Decrease the set value.
10	S button	—	Press button	Change the mode and set a set value.
11	▲ button	—	Press button	Increase the set value.
12	Reset button	—	Press button	Return the setting values of each mode to the default condition.
13	Power supply connector	—	Connector	Equipped with ionizer power supply and grounding.
14	High voltage power supply module connector	—	D-sub connector (socket)	Connect high voltage power supply module or separate cable.

Note 52) Refer to [4-4. Controller setting] or [4-5-2. Alarms for IZT41, IZT42] for details of frequency.

4-1-2. High voltage power supply module

1) IZTP40、IZTP41(-L)

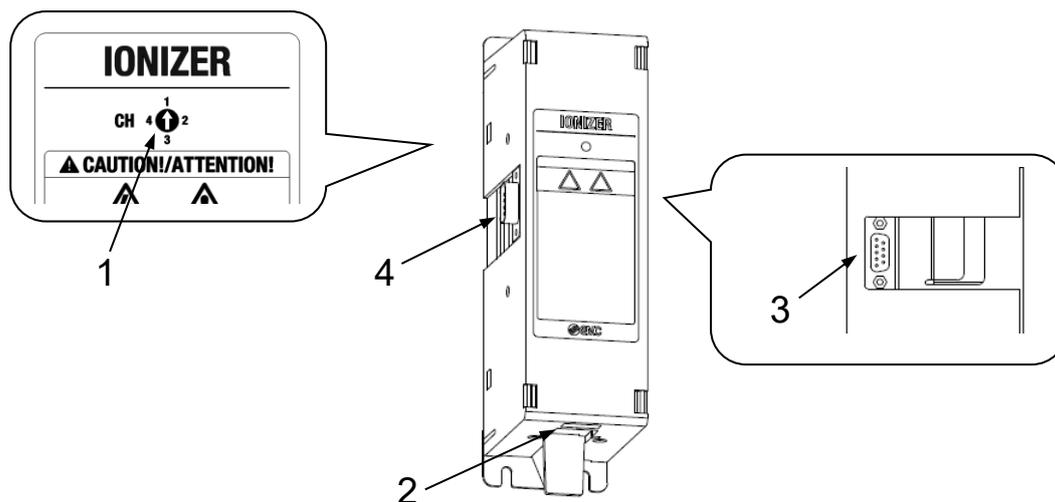


Table13. Name of parts

No.	Name	Panel indication	Type	Description
1	CH number set switch	CH	Rotary switch	High voltage power supply module CH number setting.
2	High voltage cable connector	-	Connector	Connect with the high voltage cable of the bar IZTB40
3	High voltage power supply module connector	-	D-sub connector (socket)	Connect high voltage power supply module or separate cable.
4	Controller/ high voltage power supply module connector	-	D-sub connector (plug)	Connect the controller, high voltage power supply module or separate cable.

2) IZTP42(-L)

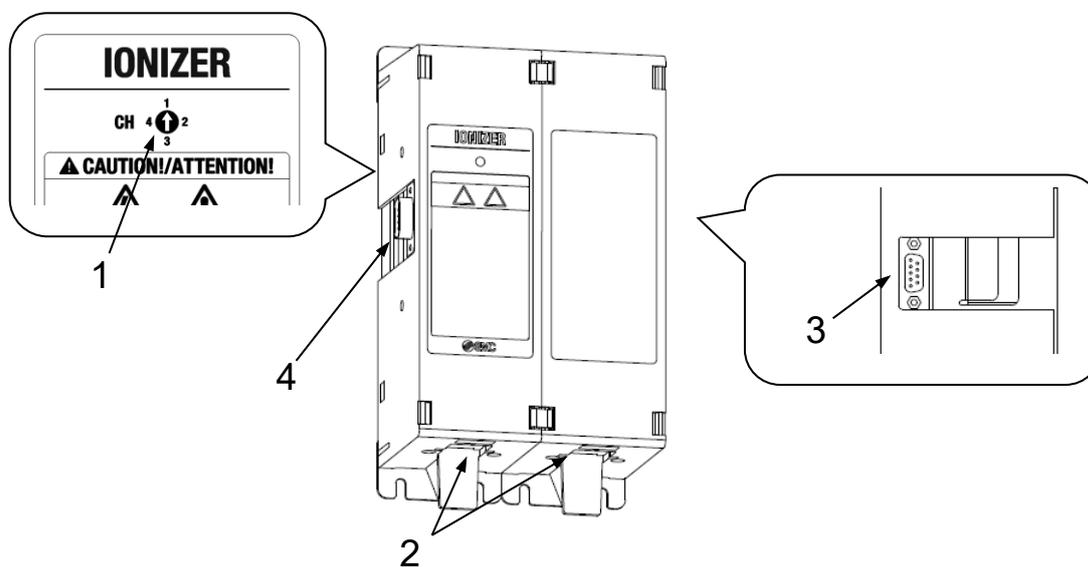



Table14. Name of parts

No.	Name	Panel indication	Type	Description
1	CH number set switch	CH	Rotary switch	High voltage power supply module CH number setting
2	High voltage cable connector	-	Connector	Connect with the high voltage cable of the bar IZTB42
3	High voltage power supply module connector	-	D-sub connector (socket)	Connect high voltage power supply module or separate cable.
4	Controller/ high voltage power supply module connector	-	D-sub connector (plug)	Connect the controller, high voltage power supply module or separate cable.

4-2. Operation modes

- The product has 3 operation modes. AC mode, dual AC mode and DC mode.
- The operation modes available varies depending on the model.


Ionizer operation modes

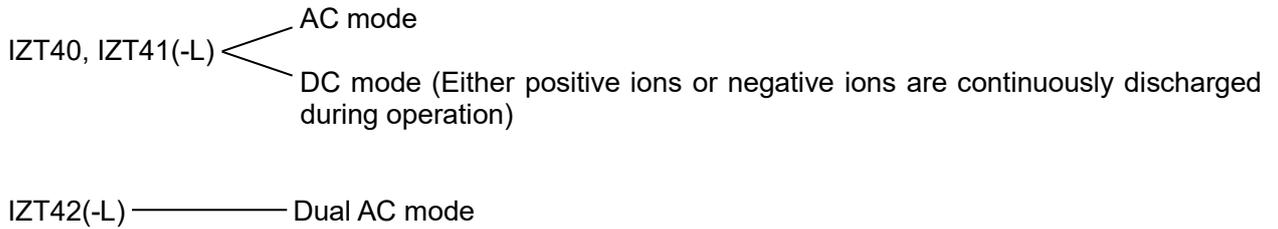

4-2-1. Operation modes of IZT40 and IZT41(-L)

1) AC mode

- Ions of different polarity are generated alternately according to the frequency set by the frequency set mode.
- If the offset voltage (ion balance) is displaced by the installation environment of the ionizer, adjust the offset voltage.
- Refer to [4-4-3. Frequency set mode] for frequency setting and [4-4-4. Offset voltage adjustment mode] for the adjustment of the offset voltage (ion balance).

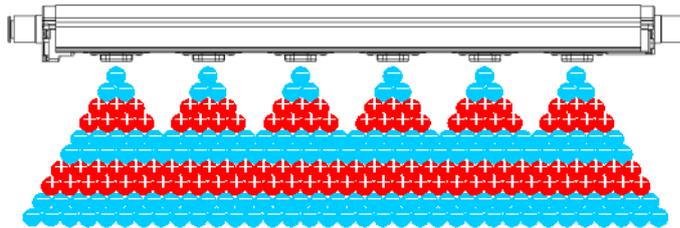


Ion generation image in AC mode

2) DC mode

- Positive ions are generated when "dp" is set for the frequency mode. Negative ions are generated by setting "dn".
- Refer to 4-4-3. Frequency set mode for further details.

4-2-2. Operation modes of IZT42(-L)


- In dual AC mode, ions of different polarity are generated alternately from electrodes positioned next to each other, and either "+" or "-" ions are generated according to the frequency set for the frequency set mode.
- Refer to 4-4-3. Frequency set mode for further details.
- In the dual AC mode, it is possible to reduce the potential amplitude applied to the workpiece compared with in the AC mode. (Refer to "6. Performance" for details)

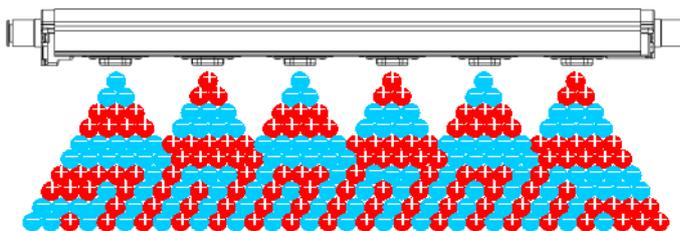

Ion generation image in AC mode

4-3. High voltage power supply module CH number setting

- When multiple high voltage power supply modules are connected to one controller, the CH number must be set for each high voltage power supply module to identify the information and set time.
- The CH number can be assigned from 1 to 4. (Up to 4 modules can be connected). Set the CH number using the rotary switch on the high voltage power supply module.

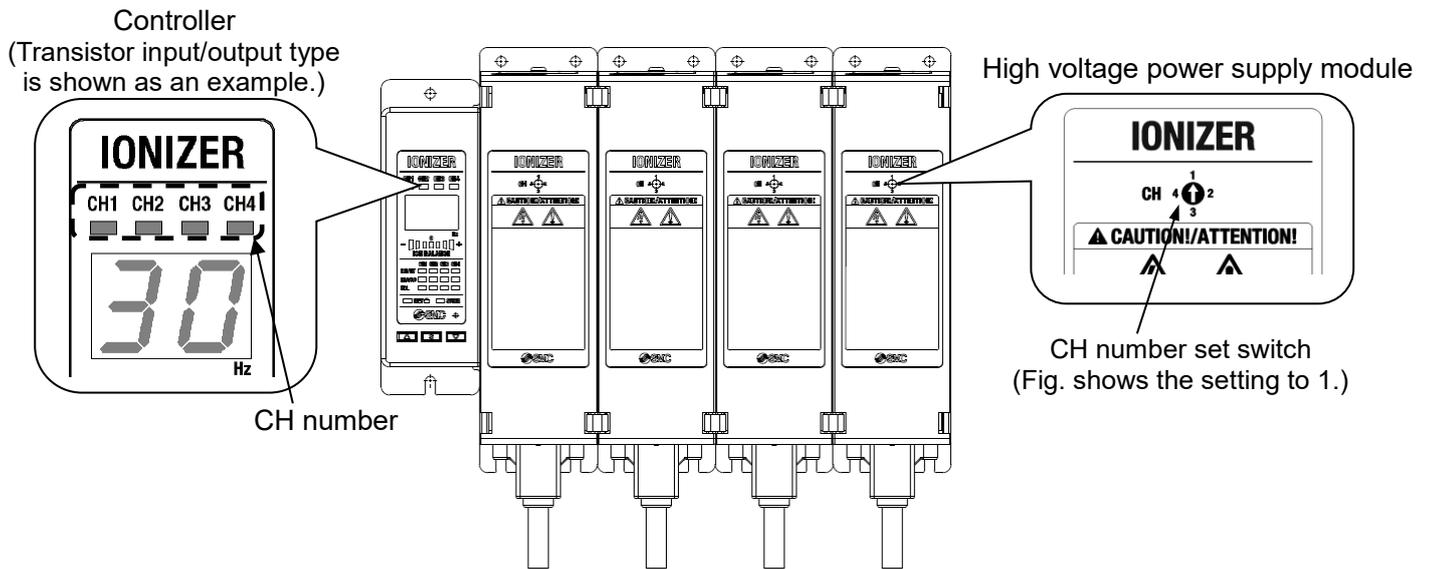

- The CH number set for the high voltage power supply module corresponds with the CH number displayed on the controller.
- When multiple high voltage power supply modules are used (max 4 pcs.), the CH number must not be duplicated. Duplication of the CH number will generate an error (error code: E7).

4-4. Controller setting

4-4-1. Operation overview

1) Setting IZT40

(Default condition)

Frequency setting : 30Hz

Key lock : OFF

Immediately after power is supplied



[Channel selection mode]

Select the CH number for setting and display. When multiple bars (high voltage power supply modules) are connected, switch the CH for setting and display. Refer to 4-4-2. Channel selection mode for details. Note 53)



Press S button once

[Frequency set mode]

Set the ion generation frequency of the bar selected by "Channel selection mode". Refer to 4-4-3. Frequency set mode for details. Note 53)



Press S button once

[Offset voltage adjustment mode]

Adjust the offset voltage of the bar selected by "CH selection mode". Refer to "4-4-4. Adjustment of Offset Voltage" for details. Note 53)



Press S button once



Press S button for 3 sec. or longer

[Key-lock setting mode]

Perform a key-lock setting. Refer to 4-4-7. Key-lock set mode for details.



Press S button once

[Channel selection mode]

Note 53) In Channel selection mode, frequency set mode, or offset voltage adjustment mode, the selected bar (high voltage power supply module) moves on to the ion generation stop mode by pressing ▼ and ▲ button simultaneously for 2 s or longer and stops the ion generation. (Operation is not possible while the key lock is ON). To release, press the S button once or turn the power off and on again. Refer to [4-4-8. ion generation stop mode] for further details

2) Setting IZT41 and IZT42

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

(Default condition)

Frequency setting : 30Hz
 Key lock : OFF
 Built-in sensor : ON
 Maintenance detection level : MIDDLE

Power is supplied.



[Channel selection mode]

Select the CH number for setting and display. When multiple high voltage power supply modules are connected, switch the CH for setting and display. Refer to 4-4-2. Channel selection mode for details.

Note 54)



Press S button once



Press S button for 3 sec. or longer



Press the □ button and S button at the same time for 2 seconds or longer.

[Frequency set mode]

Set the ion generation frequency of the bar selected by "Channel selection mode". Refer to 4-4-3. Frequency set mode for details.
 Note 54)

[Key-lock setting mode]

Perform a key-lock setting. Refer to 4-4-7. Key-lock set mode for details.

[Balance control selection mode]

Select ON/ OFF of the balance control by the sensor built in the high voltage power supply module selected in "Channel selection mode" Refer to 4-4-5. Balance control selection mode for



Press S button once



Press S button once

[Offset voltage adjustment mode]

Adjust the offset voltage of the bar selected by "CH selection mode". Refer to "4-4-4. Adjustment of Offset Voltage" for details.
 Note 54)

[Emitter contamination detection level selection mode]

Set the contamination detection level of the high voltage power supply module emitter selected by "Channel selection mode". Refer to 4-4-6. Emitter contamination detection level selection mode for details.
 Note 54)



Press S button once



Press S button once



Press S button once

[Channel selection mode]



Note 54) In Channel selection mode, frequency set mode, offset voltage adjustment mode, balance control selection mode or maintenance detection level selection mode, the selected bar (high voltage power supply module) moves on to the ion generation stop mode by pressing ▼ and ▲ button simultaneously for 2 s or longer and stops the ion generation. (Operation is not possible while the key lock is ON or externally input signal is ON) To release, press the S button once or turn the power off and on again. Refer to [4-4-8. ion generation stop mode] for further details.

4-4-2. Channel selection mode


Applicable models: IZT40, IZT41, IZT42

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

- When power is supplied to the controller, the CH LED (green) of the connected bar (high voltage power supply module) turns on or flashes. A flashing CH LED indicates the selected CH.
- The LED for frequency, ION BALANCE and SNSR display the information of the selected CH.
- The LED for ION/HV, DAC/AC and NDL display all the information of the connected bar (high voltage power supply module). (For IZT40, ION BALANCE, SNSR, DAC/AC, and NDL are not displayed)
- The controller CH1 to CH4 LED's correspond to CH no. 1 to 4 set for the high voltage power supply modules.
- The maximum number of bars (high voltage power supply modules) for one controller is 4 pcs.
- Duplication of CH setting will be recognized as an error.

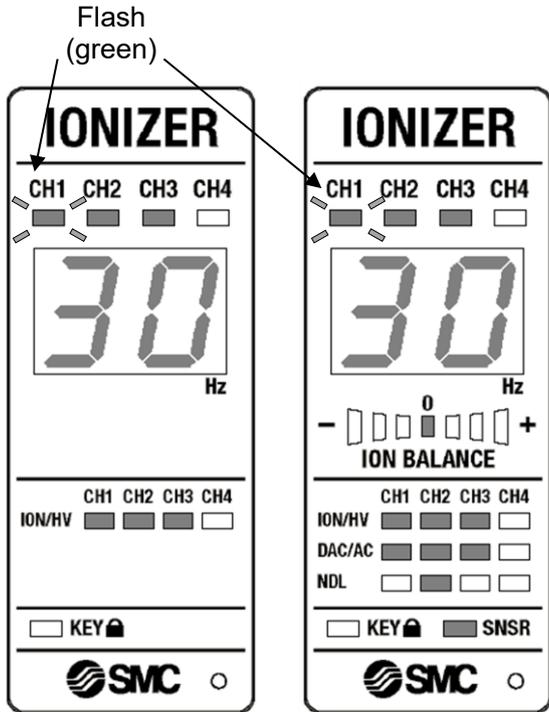

Display example of IZTC40



Display example of IZTC41


[Selection of the channel]

- The selected CH will flash.
- Press the ▼ or ▲ button while the CH LED flashes to select the bar (high voltage power supply module) to display or set.
- When the number of bars is zero, the CH LED does not change even by pressing the ▼ or ▲ button.

[Change to the next mode]


- To change to the next mode and store the selected CH setting press the **S** button once, the ▲ and **S** button simultaneously for 2 s or longer, or the **S** button for 3 s or longer. (for the IZTC40, the mode does not change by pressing ▲ button and **S** button for 2 s or longer.)
- The selected bar (high voltage power supply module) moves on to the ion generation stop mode by pressing ▼ and ▲ button simultaneously for 2 s or longer and stops the ion generation. To release, press the **S** button once or turn the power off and on again. Refer to [4-4-8. Ion generation stop mode].

Example shows CH1 is selected.

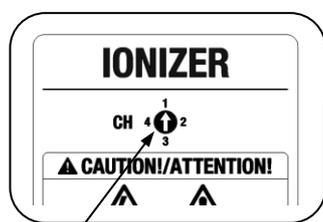

CH set switch

Change the CH setting for multiple modules. (Default CH switch setting is "1".)

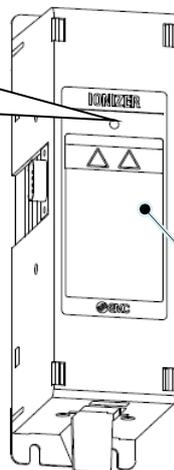


High voltage power supply module

4-4-3. Frequency set mode

Applicable models: IZT40, IZT41, IZT42

For IZT41-L/42-L refer to the IO-Link dedicated instruction manual.

- Set the ion generation frequency of the bar (high voltage power supply module) selected by "Channel selection mode".

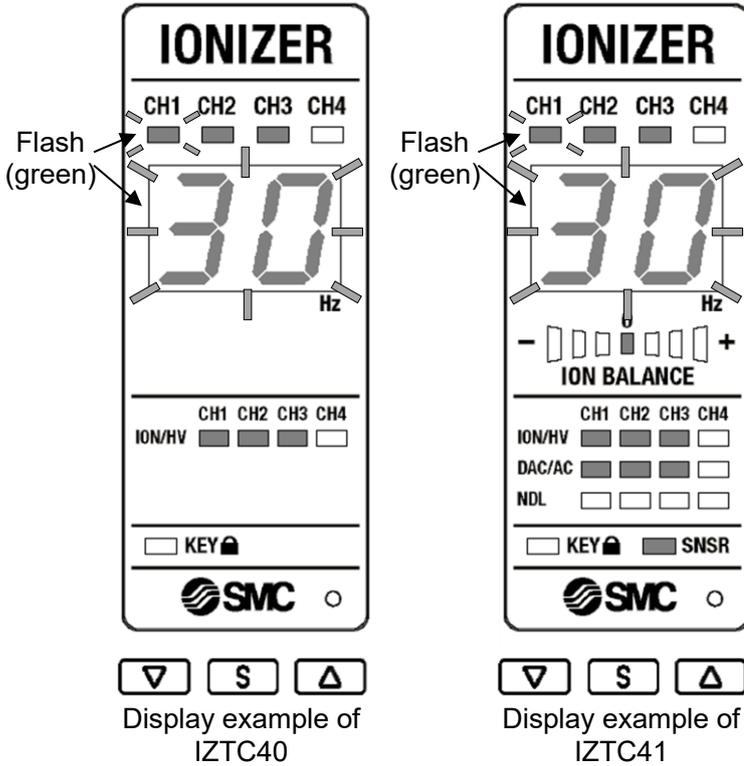

Example of frequency setting mode for CH1.
Frequency 30 Hz.

[Ion generating frequency setting]

- Select the CH in the selection mode and press the S button once. The frequency will flash and the setting of the ion generation frequency of the selected bar becomes possible.
- The Ion generation frequency is set by pressing the ▼ or ▲ button.
- The Frequency display is different depending on the model. Refer to the display of frequency example below.

[Change to the next mode]


- Press the S button once to change to the next mode and store the frequency setting.
- When the power is supplied the saved setting will be displayed.
- The selected bar (high voltage power supply module) moves on to the ion generation stop mode by pressing ▼ and ▲ button simultaneously for 2 s or longer and stops the ion generation. To release, press the S button once or turn the power off and on again. Refer to [4-4-8. Ion generation stop mode].

※Caution


If the mode is changed to ion generation stop mode during the frequency setting or the ion generation is stopped by turning off the power supply, the setting during change is not stored. Change the setting again.

Display of frequency

●IZT40/IZT41

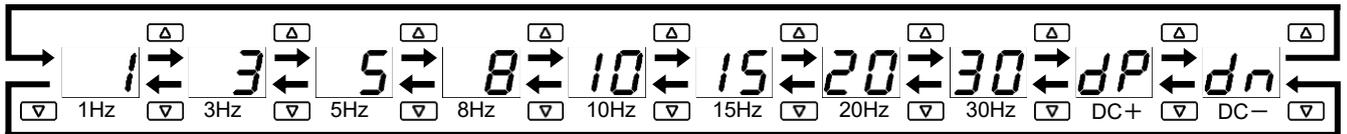



●IZT42

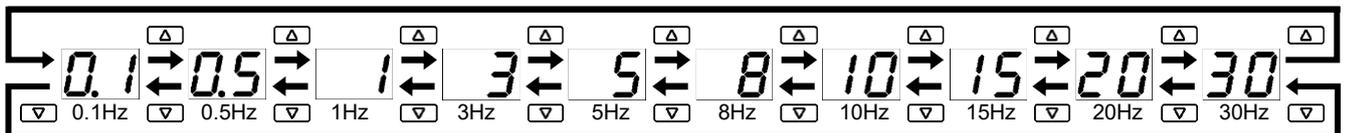

Default frequency setting is "30 Hz".
Set the optimum frequency depending on the operating environment and installed distance.

4-4-4. Offset voltage adjustment mode

- Offset voltage is adjusted before shipment. However, readjustment of the offset voltage is possible where it is required depending on the installation environment. (The same applies when the ionizer is moved and installed in a different location.)
- When there are ionizers installed near the ionizer whose offset voltage is to be adjusted, stop the ionizers which are not adjusted for the offset voltage before starting adjustment.

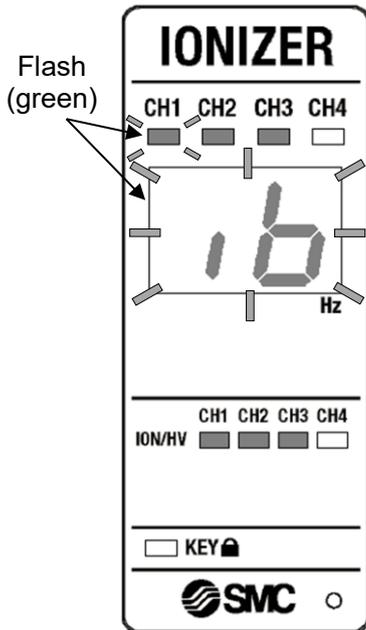

Display example of IZTC40



Example shows the offset voltage adjustment mode of CH1.

1) Adjustment of IZT40 offset voltage

- Select the CH to be set in CH selection mode and press the S button twice. The frequency display "Ib" will flash and the adjustment of the offset voltage is now possible.
- IZT40 does not have a built in sensor. Adjust the offset voltage by monitoring the ion generated with a charge plate monitor etc.
- Press ▼ or ▲ button for adjustment.
 - Press the ▲ button once to increase + ion, press and hold to continuously increase.
 - Press the ▼ button once to increase - ion, press and hold to continuously increase.

[Change to the next mode]

- Press the S button once to change to the next mode and store the offset voltage adjustment setting.
- When power is supplied, the saved setting will be displayed.

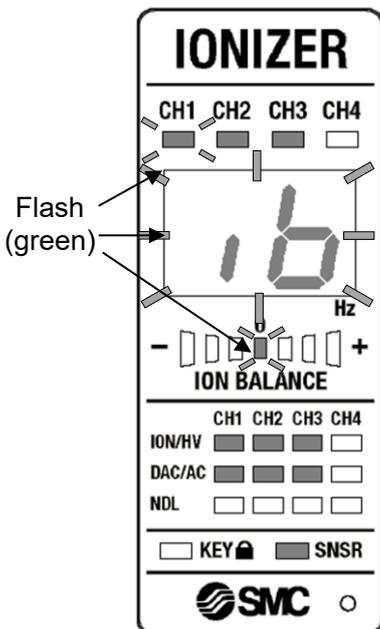

Display example of IZTC41

Example shows the offset voltage adjustment mode of CH1.

2) Adjustment of IZT41 and IZT42 offset voltage

For IZT41-L/42-L, refer to IO-Link dedicated instruction manual.

- Select the CH to be set in CH selection mode and press the S button twice. The frequency display "Ib" and ion balance display will flash, and the adjustment of the offset voltage is now possible.
- The Ion balance display shows the ion balance detected by the built-in sensor. Adjust so that the flashing LED becomes central.
- The LED turns on when it approaches the centre, and flashes as it moves away from it. At the positive ion adjustment limit, the LED at the end of the positive side (right end of the display) flashes (orange). At the negative ion adjustment limit, the LED at the end of the negative side (left end of the display) flashes (orange).
- For highly precise offset voltage adjustment, adjust the ions generated by the ionizer by monitoring with a charge plate monitor.
- Press ▼ or ▲ button for adjustment.
 - Press the ▲ button once to increase + ion, press and hold to continuously increase.
 - Press the ▼ button once to increase - ion, press and hold to continuously increase.


[Change to the next mode]

- Press the S button once to change to the next mode and store the offset voltage adjustment setting.
- When power is supplied, the saved setting will be displayed.

- The selected bar (high voltage power supply module) moves on to the ion generation stop mode by pressing ▼ and ▲ button simultaneously for 2 s or longer and stops ion generation. To release, press the S button once or turn the power off and on again. Refer to [4-4-8. ion generation stop mode].

※Caution

If the mode is changed to ion generation stop mode during offset voltage adjustment or the power supply is turned off, the change to the setting will not be stored. Change the setting again.

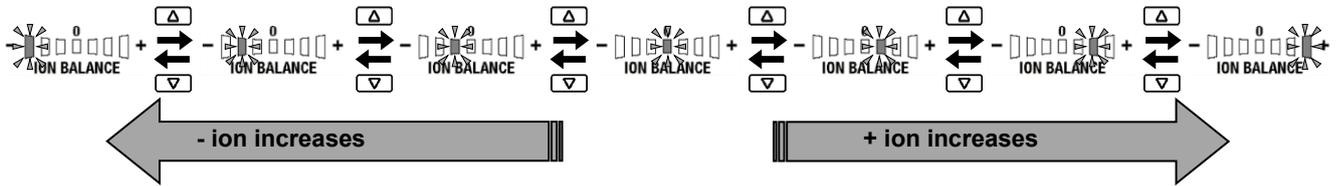


4-4-5. Balance control selection mode

Applicable models: IZT41, IZT42

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

- IZT41 and IZT42 have a built in sensor to balance the ions generated.
- Balance control selection mode turns the balance control by the built-in sensor on and off. (the IZT40 does not have this function).

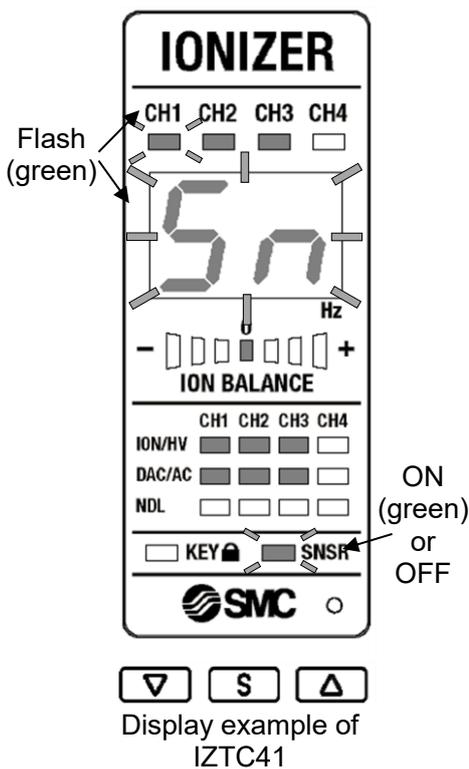

Display example of IZTC41

Example shows the ON status of CH1 balance control.

Default balance control setting is ON.

[Selection of balance control]

- Select the CH to be set in CH selection mode and press the S button and ▲ button simultaneously for 2 s or longer. The frequency display indicates "5n" flashing, and the switching of ON and OFF of balance control is now possible.
- The Sensor display (SNSR) LED (green) alternates ON and OFF each time the ▼ or ▲ button is pressed.
Balance control ON: Sensor display (SNSR) LED is ON
Balance control OFF: Sensor display (SNSR) LED is OFF

[Change to the next mode]

- Press the S button once to change to the next mode and store the balance control selection setting.
- When power is supplied the saved setting will be displayed.
- The selected bar (high voltage power supply module) moves on to the ion generation stop mode by pressing ▼ and ▲ button simultaneously for 2 s or longer and stops ion generation. To release, press the S button once or turn the power off and on again. Refer to [4-4-8. ion generation stop mode].

※Caution

If the mode is changed to ion generation stop mode during balance control selection or if the power supply is turned off, the change to the setting will not be stored. Change the setting again.

4-4-6. Maintenance detection level selection mode



Applicable models: IZT41, IZT42

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

- If this product is used for an extended period of time, contamination such as dust will stick to the emitters, reducing the static neutralization performance.
- It is recommended to clean the emitters when the maintenance alarm is generated.
- The cleaning frequency varies depending on the environment where this product is installed.
- This product has a function which monitors the emitter contamination all the time. When the emitter contamination is detected, it is indicated by the maintenance signal and LED.
- In maintenance detection level selection mode, the detection level of the emitter contamination can be set. (IZT40 does not have this function.)


[Maintenance detection level selection method]

- In CH selection mode, press the S and ▲ buttons simultaneously for 2 s or longer to move to balance control selection mode.
- By pressing the S button once, “Xi” or “Mi” or “Lo” or “oF” will flash in the frequency display. The maintenance detection level can now be selected.
- It can be set by pressing the ▼ or ▲ button.

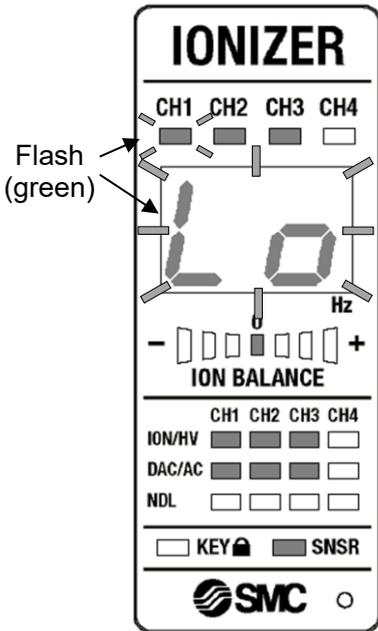

Display example of IZTC41

Example shows the emitter contamination detection level of CH1.

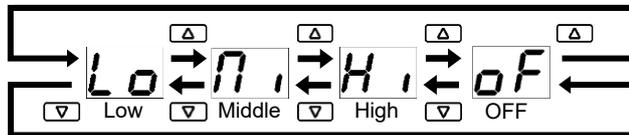

- Lo (Low).....Static neutralization time is slower than the initial state
- Mi (Middle)....Before the static neutralization time becomes slow
- Xi (High).....No influence to the static neutralization time
- oF(OFF).....Maintenance detection is OFF

[Change to the next mode]

- Press the S button once to change to the next mode and store the maintenance detection level selection setting.
- When power is supplied, the saved setting will be displayed.
- The selected bar (high voltage power supply module) moves on to the ion generation stop mode by pressing ▼ and ▲ button simultaneously for 2 s or longer and stops ion generation. To release, press the S button once or turn the power off and on again. Refer to [4-4-8. ion generation stop mode].

※Caution

If the mode is changed to ion generation stop mode during maintenance detection level selection or the power supply is turned off, the change to the setting will not be stored. Change the setting again.


Default maintenance detection level setting is "Middle".
Change the setting to change the maintenance detection level.

4-4-7. Key-lock setting mode

Applicable models: IZT40, IZT41, IZT42

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

- This product has a key lock function which disables any button operation.

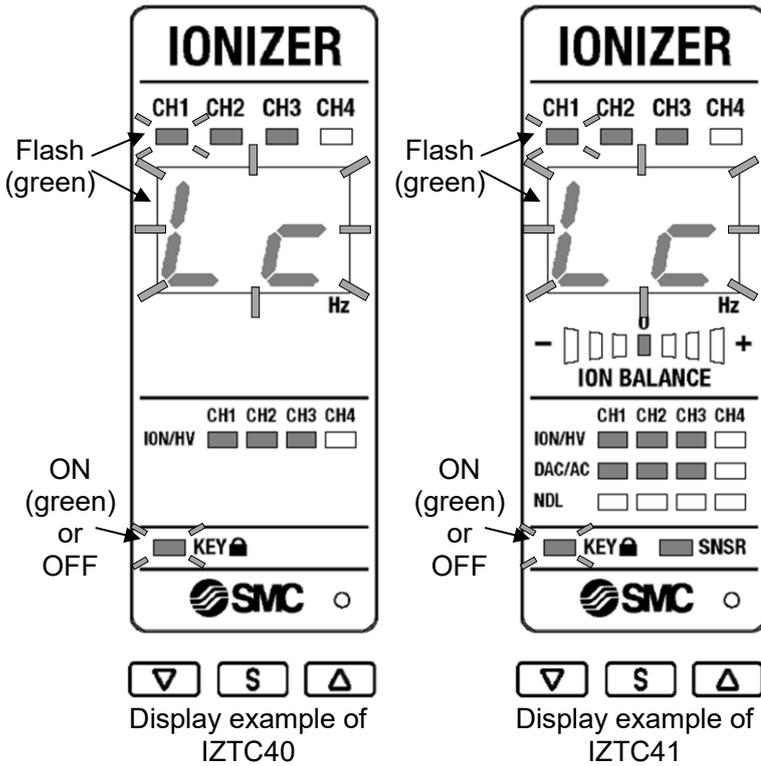

【Key-lock setting】

- Press the S button for 3 s or longer in CH selection mode, "Lc" or "VL" will flash in the frequency display and the ON/OFF setting of the key lock function is now possible.
- The key lock condition is indicated by "Lc" in the frequency display and by the key lock LED (green).

Key lock function ON :

Frequency display : "Lc" flashes / KEY LED is ON

Key lock function OFF :

Frequency display : "VL" flashes / KEY LED is OFF

[Change to the next mode]

- Press the S button once to change to CH selection mode and store the key lock setting.
- When power is supplied, the saved setting will be displayed.

Example shows Key lock ON.



Default key lock setting is OFF.

4-4-8. Ion generation stop mode



Applicable models: IZT40, IZT41, IZT42

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

- In addition to the external input signal, the product will stop ion generation temporarily by pressing a button. (the IZT40 does not have externally input signals).
- When the ion generation is stopped by the controller button, the external input signals are disabled. To release the mode, press the **S** button once to return to the previous setting mode. After the release of the button, the external input signal becomes effective.
- When the ion generation stop is disabled, ions will continue to be generated. Be careful when handling the high voltage power supply module and bar.
- Although the ion generation stop mode can be released by turning the power supply off and on again, the changes set in the previous mode will not be stored. It is necessary to change the setting again.

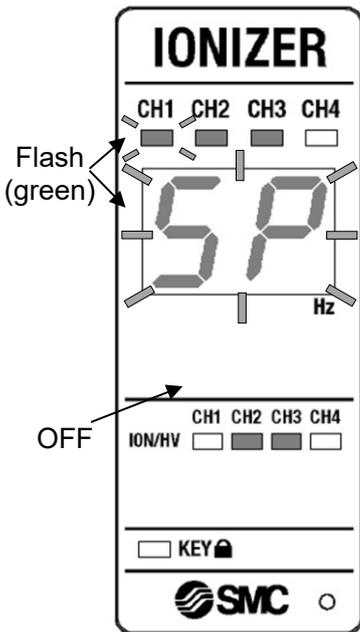

Display example of IZTC40

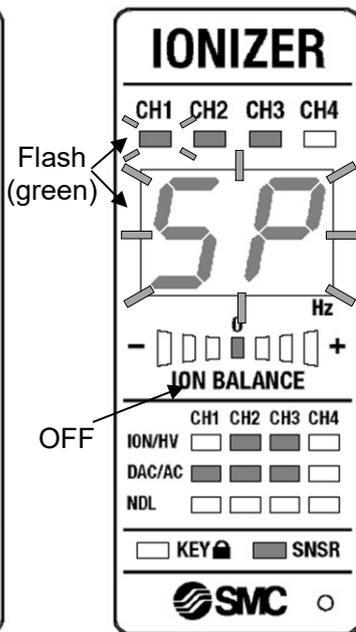

Display example of IZTC41

[Ion generating stop setting]

- In Channel selection mode, frequency set mode, offset voltage adjustment mode, balance control selection mode or maintenance detection level selection mode, ion generation is stopped by pressing the **▼ and ▲** button simultaneously for 2 s or longer.
- At that time, "5p" is displayed in the frequency display and the ION/HV LED of the selected CH is turned off.

[Ion generation stop release]

- To release the mode, press the **S** button once to return to the previous setting mode.
- Although the ion generation stop mode can be released by turning the power supply off and on again, the changes set in the previous mode will not be stored. It is necessary to change the setting again.

※When the ion discharge stop signal is ON, the mode will not move on to ion generation stop mode.

4-5. Alarm function (IZT40/41/42)

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

- When a problem occurs, an output signal or LED notification is generated.
- Depending on the content of abnormality, this product either continues or stops operation. IZT40 does not have output functions.

4-5-1. Alarms for IZT40

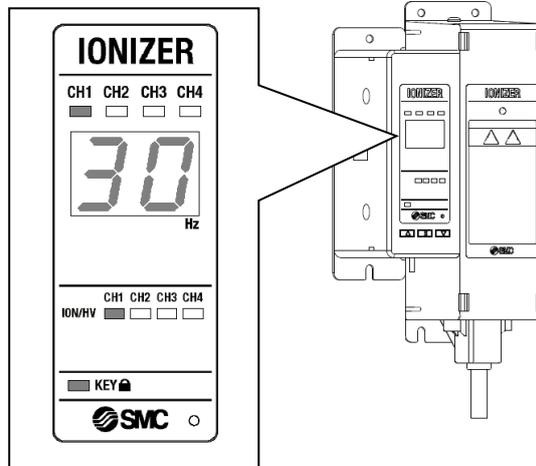


Table15. Alarm function

Alarm name	Ionizer operation after generating alarm	LED				Description	How to release error after recovery
		CH	Frequency	ION/HV	KEY		
CPU failure (controller)	Stop	Green (ON) Note55	Green (flash) error code E 0	Red (flash) Note58	OFF or green (ON) Note62	·When CPU operates abnormally due to noise etc. ·When the CH is switched during operation.	·Turn the power off and on again
Power supply failure	Stop	Green (ON) Note56	Green (flash) Error code E 1	Red (flash) Note59	OFF or green (ON) Note62	·When the connected power supply voltage is outside of the specification.	·To be reset automatically.
CPU failure (High voltage power supply module)	Stop	Green (flash) Note57	Green (flash) error code E 2	Red (flash) Note60	OFF or green (ON) Note62	·When CPU operates abnormally due to noise etc. ·High voltage cable to be connected to the high voltage power supply module is not connected.	·Turn the power off and on again
Incorrect high voltage	Stop	Green (flash) Note57	Green (flash) error code E 3	Red (ON) Note61	OFF or green (ON) Note62	·When abnormal high voltage is discharged.	·Turn the power off and on again
Communication error	Continue or Stop	Green (flash) Note57	Green (flash) error code E 4	Red (flash) Note60	OFF or green (ON) Note62	·When communication failure occurs due to noise or disconnection, etc.	·Turn the power off and on again
Fan motor failure	Stop	Green (flash) Note57	Green (flash) error code E 5	Red (flash) Note60	OFF or green (ON) Note62	·When ionizer does not operate properly due to foreign matter caught in the fan motor.	·Turn the power off and on again
Inconsistent module	Stop	Green (flash) Note57	Green (flash) error code E 6	Red (flash) Note60	OFF or green (ON) Note62	·High voltage power supply module which is not correct combination was connected to the controller.	·Turn the power off and on again
Duplication of CH	Stop	Green (flash) Note57	Green (flash) Error code E 7	Red (flash) Note60	OFF or green (ON) Note62	·Duplication of the CH setting of the high voltage power supply module connected to the controller exists.	·To be reset automatically.
High voltage power supply module not connected	Stop	OFF	Green (flash) Error code - -	OFF	OFF	·High voltage power supply module to be connected to the controller is not connected.	·Turn the power off and on again

Note55) All CH LEDs in the CH table are ON (green).

Note56) LED for all connected high voltage power supply modules CH are ON (green).

Note57) LED for CHs selected to display flashing (green).

Note58) All ION/ HV LEDs for CH1 to 4 flash (red).

Note59) LED for all connected high voltage power supply modules ION/HV flash (red).

Note60) LED for high voltage power supply module ION/HV with problem flashes (red).

Note61) LED for high voltage power supply module ION/HV with problem turns on (red).

Note62) The status at the time of the problem holds the status before the problem.

4-5-2. Alarms for IZT41 and IZT42

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

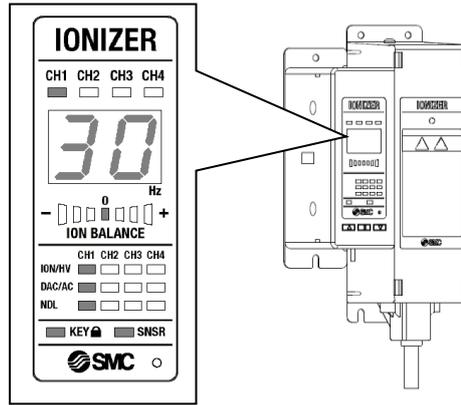


Table16. Alarm function

Alarm name	Output signal	Ionizer operation after generating alarm	LED								Description	How to release error after recovery	
			CH	Frequency	ION BALANCE	ION/HV	DAC/AC	NDL	SNSR	KEY			
CPU failure (controller)	Error signal OFF (B contact)	Stop	Green (ON) Note63	Green (flash) error code E0	OFF	Red (flash) Note69	Green (ON) or Note73 Blue (ON)	OFF	OFF	OFF	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> When CPU operates abnormally due to noise etc. When the CH is switched during operation. 	Turn the power off and on again.
Power supply failure	Error signal OFF (B contact)	Stop	Green (ON) Note64	Green (flash) error code E1	OFF	Red (flash) Note69	Green (ON) or Note73 Blue (ON)	OFF	OFF	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> When the connected power supply voltage is outside of the specification. 	To be reset automatically.
CPU failure (High voltage power supply module)	Error signal OFF (B contact)	Stop	Green (flash) Note65	Green (flash) error code E2	OFF Note67	Red (flash) Note70	Green (ON) or Note73 Blue (ON)	OFF Note75	OFF	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> When CPU operates abnormally due to noise etc. High voltage cable to be connected to the high voltage power supply module is not connected. 	Turn the power off and on again.
Incorrect high voltage	Error signal OFF (B contact)	Stop	Green (flash) Note65	Green (flash) error code E3	OFF Note67	Red (ON) Note71	Green (ON) or Note73 Blue (ON)	OFF Note75	OFF	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> When abnormal high voltage is discharged. 	<ul style="list-style-type: none"> Ion generation stop signal OFF and ON again. Turn the power off and on again.
Communication error	Error signal OFF (B contact)	Continue or Stop	Green (flash) Note65	Green (flash) error code E4	OFF Note67	Red (flash) Note70	Green (ON) or Note73 Blue (ON)	OFF Note75	OFF	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> When communication failure occurs due to noise or disconnection, etc. 	<ul style="list-style-type: none"> Ion generation stop signal OFF and ON again. Turn the power off and on again.
Fan motor failure	Error signal OFF (B contact)	Stop	Green (flash) Note65	Green (flash) error code E5	OFF Note67	Red (flash) Note70	Green (ON) or Note73 Blue (ON)	OFF Note75	OFF	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> When ionizer does not operate properly due to foreign matter caught in the fan motor. 	<ul style="list-style-type: none"> Ion generation stop signal OFF and ON again. Turn the power off and on again.
Inconsistent module	Error signal OFF (B contact)	Stop	Green (flash) Note65	Green (flash) error code E6	OFF Note67	Red (flash) Note70	Green (ON) or Note73 Blue (ON)	OFF Note74	OFF Note75	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> High voltage power supply module which is not correct combination was connected to the controller. 	Turn the power off and on again.
Duplication of CH	Error signal OFF (B contact)	Stop	Green (flash) Note65	Green (flash) error code E7	OFF Note67	Red (flash) Note70	Green (ON) or Note73 Blue (ON)	OFF Note74	OFF Note75	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> Duplication of the CH setting of the high voltage power supply module connected to the controller exists. 	To be reset automatically.
Output signal over current	Maintenance detection signal OFF (A contact) Error signal OFF (B contact)	Continue	Green (flash) Note65	Green (flash) error code E8 E9	Green (ON)	Green (flash) Note72	Green (ON) or Note73 Blue (ON)	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> When over current is applied to the output circuit and protective circuit is activated. 	To be reset automatically.
Maintenance warning	Maintenance detection signal ON (A contact)	Continue	Green (flash) Note65	Green (ON) frequency Note66	Green (ON)	Green (ON)	Green (ON) or Note73 Blue (ON)	Green (ON)	Green (ON)	OFF or Note76 Green (ON)	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> When static neutralization performance is reduced due to contamination, wearing or breakage of emitters. 	<ul style="list-style-type: none"> Ion generation stop signal OFF and ON again. Turn the power off and on again.
High voltage power supply module not connected	Error signal OFF (B contact)	Stop	OFF	Green (flash) Error code - -	OFF	OFF	OFF	OFF	OFF	OFF	OFF or Note76 Green (ON)	<ul style="list-style-type: none"> High voltage power supply module to be connected to the controller is not connected. 	Turn the power off and on again.

Note63) All CH LEDs in the CH table are ON (green).

Note64) LED for all connected high voltage power supply modules CH flash (green).

Note65) LED for CHs selected to display flashing (green).

Note66) Displays the frequency setting status of the selected CH.

Note67) Ion balance of the high voltage power supply module with problem turns off.

Note68) All ION/ HV LEDs for CH1 to 4 flash (red).

Note69) LED for all connected high voltage power supply modules ION/HV flash (green).

Note70) LED for high voltage power supply module ION/HV with problem flashes (red).

Note71) LED for high voltage power supply module ION/HV with problem turns on (red).

Note72) LED for all connected high voltage power supply modules ION/HV flash (green).

Note73) Displays the type of connected high voltage power supply module.

IZT41: DAC/AC LED (green) is ON

IZT42: DAC/AC LED (blue) is ON

Note74) LED for high voltage power supply module DAC/AC with problem turns off.

Note75) LED for high voltage power supply module NDL with problem turns off.

Note76) The status at the time of the problem holds the status before the problem.

4-5-3. Details of the alarms

For IZT41-L/42-L, refer to the IO-Link dedicated instruction manual.

1) Controller CPU problem (applicable product model: IZT40, IZT41, IZT42)

- If the controller CPU operation is abnormal due to electrical noise, or when the CH is switched during operation, the abnormal signal is OFF (ON when normal. IZTC40 does not have an output signal), and all CH LEDs (green) are ON and all ION/HV LEDs are flashing (red) and the error code "E0" is displayed in frequency display flashing red.
- When failure occurs, the ion generation will be stopped.
- To prevent noise, perform the following actions and take countermeasures.
 - I . If the source of noise is nearby, move this product away from the source.
 - II . Route the power line and this product cables separately.
 - III . If noise may enter the product from the power supply, install a noise filter to this product power supply.
- To resolve the error, supply power again after fixing the cause of the error.

2) Power supply failure (applicable models: IZT40, IZT41, IZT42)

- When the power supply connected to this product is not within the specified range of 24 V +/-10%, the abnormal signal is OFF (ON when normal. IZTC does not have an output signal), and all CH LEDs connected to the bar (high voltage power supply module) are ON (green), ION/HV LEDs of connected CH are flashing (red) and the error code "E1" is displayed flashing in the frequency display.
- When the failure occurs, the ion generation will be stopped.
- The problem is automatically released by changing the power supply voltage to 24V+/-10%.

3) High voltage power supply module CPU problem (Applicable models: IZT40, IZT41, IZT42)

- If the high voltage power supply module CPU operation is abnormal due to electrical noise, or the high voltage power supply cable is not connected to the high voltage power supply module, the abnormal signal is OFF (ON when normal. IZTC40 does not have an output signal), and ION/HV LED for the CH with abnormality is flashing (red) and the error code "E2" is displayed flashing in the frequency display.
- When the problem occurs, only the bar with a problem (high voltage power supply module) will stop ion generation.
- To prevent noise, perform the following actions and take countermeasures.
 - I . If the source of noise is nearby, move this product away from the source.
 - II . Route the power line and this product cables separately.
 - III . If noise may enter the product from the power supply, install a noise filter to this product power supply.
- To resolve the error, supply power again after fixing the cause of the error.

4) Incorrect high voltage (applicable models: IZT40, IZT41, IZT42)

- When abnormal discharge occurs during this product operation, the abnormal signal is OFF (ON when normal. IZTC40 does not have an output signal), and the ION/HV LED for the CH with abnormality is ON (red) and the error code "E3" is flashing in the frequency display.
- When the problem occurs, only the bar with a problem (high voltage power supply module) will stop ion generation.
- To resolve the error, input the ionizer stop signal or supply power again after remedying the cause of the incorrect electric discharge.

5) Communication error (applicable models: IZT40, IZT41, IZT42)

- When abnormality occurs in the communication between the controller and high voltage power supply module due to electrical noise or disconnection, the abnormal signal is OFF (ON when normal. IZTC40 does not have an output signal), and the ION/HV LED of CH with abnormality is flashing (red) and the error code "E4" is flashing in the frequency display.
- When abnormality occurs, the following operation is performed depending on the situation in which the error occurred.
 - ① If the connection of the high-voltage power supply module connector is physically disconnected, only the bar (high-voltage power supply module) where the error occurs stops the generation of ions.
 - ② If abnormality occurs in the communication signal due to noise, etc., the generation of ions will continue.
- To prevent noise, perform the following actions and take countermeasures.
 - I . If the source of noise is nearby, move this product away from the source.
 - II . Route the power line and this product cables separately.
 - III . If noise may enter the product from the power supply, install a noise filter to this product power supply.

- To resolve the error, input the ion generation stop signal or supply power again after remedying the cause of the error.
- 6) Fan motor failure (applicable models: IZT40, IZT41, IZT42)
- When fan motor operation non-conformance occurs during the operation of this product, the abnormal signal is OFF (ON when normal. IZTC40 does not have an output signal), and the ION/HV LED for the CH with abnormality is flashing (red) and the error code "E5" is flashing in the frequency display.
 - When the problem occurs, only the bar with a problem (high voltage power supply module) will stop ion generation.
 - To prevent noise, perform the following actions and take countermeasures.
 - I . If the source of noise is nearby, move this product away from the source.
 - II . Route the power line and this product cables separately.
 - III . If noise may enter the product from the power supply, install a noise filter to this product power supply.
 - To resolve the error, input the ion discharge stop signal or supply power again after remedying the cause of the error.
- 7) Incompatible module (applicable models: IZT40, IZT41, IZT42)
- When the high voltage power supply module IZTP41 or IZTP42 is connected to the controller IZTC40, or high voltage power supply module IZTP40 is connected to the controller IZTC41, the abnormal signal is OFF (ON when normal. IZTC40 does not have an output signal), and the ION/HV LED of CH with abnormality is flashing (red) and the error code "E6" is flashing in the frequency display.
 - To release the abnormality, connect the correct high voltage power supply module corresponding to the controller and turn on the power supply again.
- 8) Duplication of CH number (applicable models: IZT40, IZT41, IZT42)
- When multiple bars (high voltage power supply modules) are connected to the controller and the settings of the CH switch on the high voltage power supply module are duplicated, the abnormal signal is OFF (ON when normal. IZTC40 does not have an output signal), and the ION/HV LED for the CH of the bars (high voltage power supply module) which are duplicated are flashing (red) and the error code "E7" is flashing in the frequency display.
 - The abnormality is automatically released when the setting of the CH switch on the high voltage power supply module is not duplicated.
- 9) Output over current (applicable models: IZS41, IZS42)
- When current exceeding the specification value is applied to the maintenance output or abnormal output, the output is shut off to protect the output circuit, and the LEDs for all ION/HV connected to the bar (high voltage power supply module) flash (green) and the error code "E8" or "E9" is flashing in the frequency display.
 - E8 indicates excess current for the abnormal signal. E9 indicates excess current for the maintenance signal.
 - This product operates even when excessive current is generated in the output circuit.
 - To resolve the error, reset the product automatically by reducing the current to the output circuit down to 100 mA or less.
- 10) Maintenance (Applicable models: IZT41, IZT42)
- The maintenance signal is ON when contamination, wear or damage to the emitters is detected. The NDL LED (green) for the bar with the problem (high voltage power supply module) is ON to indicate that cleaning or replacement of the emitters needs to be performed.
 - This product operates even when the maintenance warning is generated.
 - When emitters are contaminated, the error can be solved by cleaning them. However, when they are worn out or damaged, it is necessary to replace the emitter cartridge with a new one.
 - To resolve the error, input the ion discharge stop signal or supply power again after remedying the cause of the error.
- 11) High voltage power supply module disconnected (Applicable models: IZT40, IZT41, IZT42)
- When the controller and high voltage power supply module are not connected, the abnormal signal is OFF (ON when normal. IZTC40 does not have an output signal), and error code "--" is flashing in the frequency display.
 - To release the abnormality, connect the high voltage power supply module to the controller and turn on the power supply.

5. Performance


- Performance data shown in this chapter is based on an electrified plate (dimensions: 150 x 150 mm, electrostatic capacity: 20pF) defined by ANSI standard (ANSI/ESD STM3.1-2015). Use this data as a guideline for selection, as the performance data may vary depending on the material and size of the workpiece.

5-1. Installation distance and Discharge time (Discharge time of 1000V→100V)

Applicable model: IZT40, IZT41(-L)


1) Without air purge

For IZT40-112D/L/V, IZT41-112D/L/V

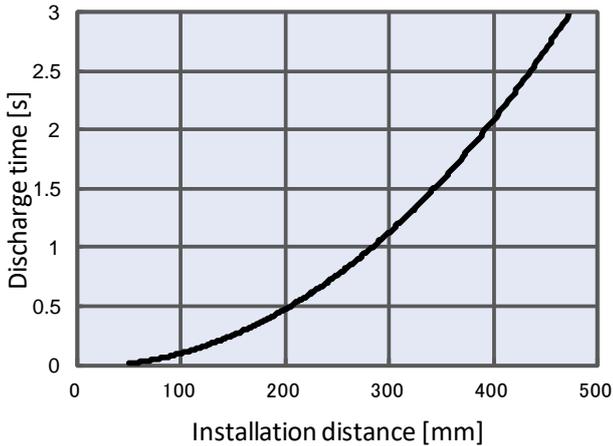


2) With High speed static neutralization cartridge

With air purge, For IZT40-112D, IZT41-112D

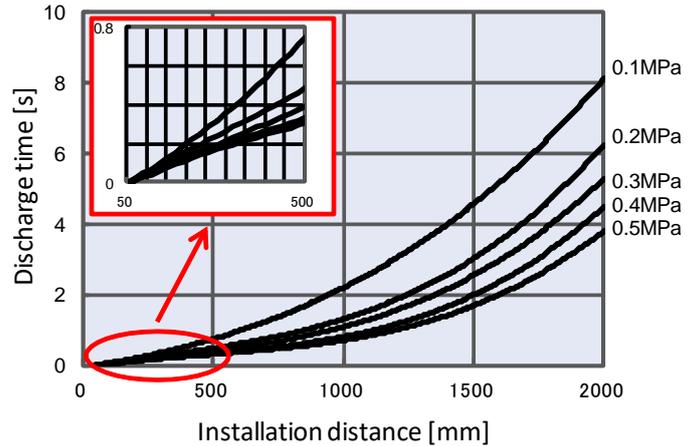


3) With Energy saving static neutralization cartridge

With air purge, For IZT40-112L, IZT41-112L

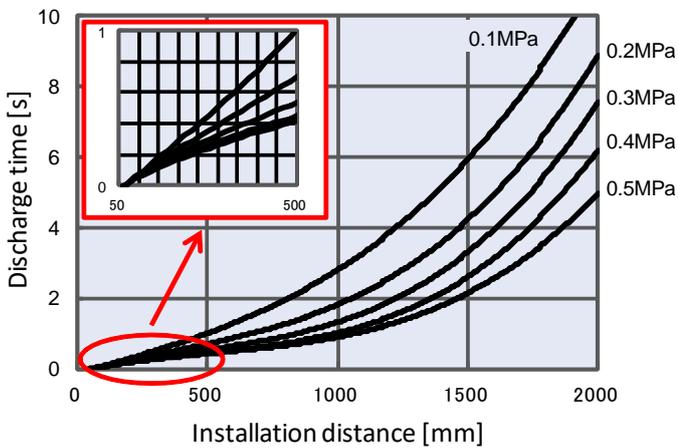


4) With Energy saving high-efficiency cartridge

With air purge, For IZT40-112V, IZT41-112V

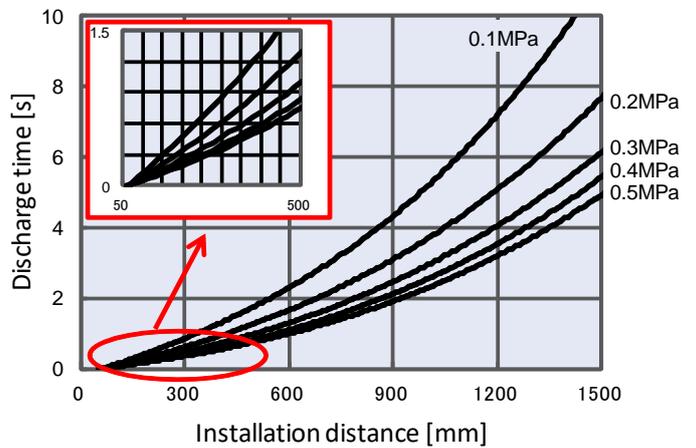


Applicable models: IZT42(-L)


1) Without air purge
For IZT42-112D/L/V

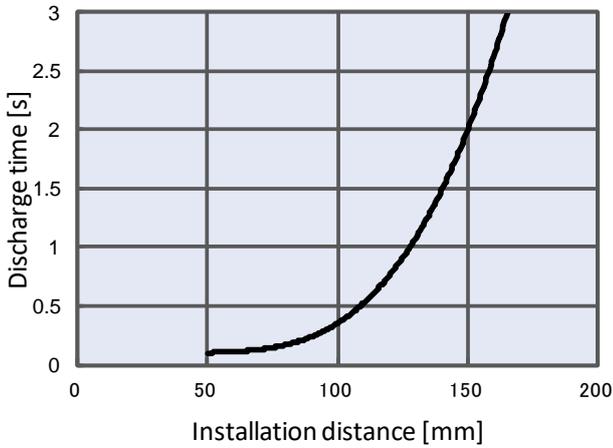


2) With High speed static neutralization cartridge
With air purge, For IZT42-112D

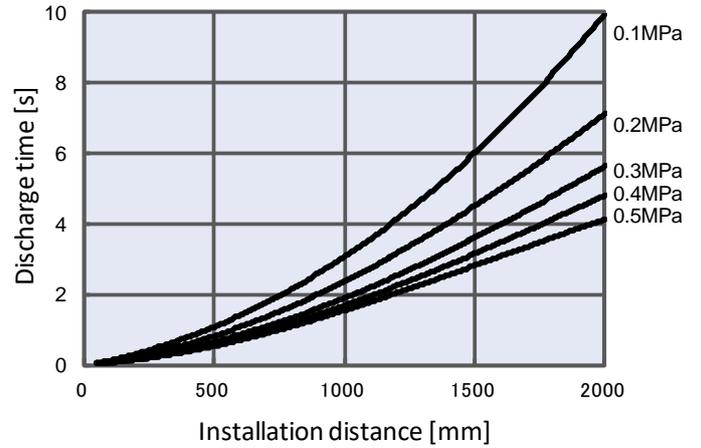

3) With Energy saving static neutralization cartridge
With air purge, For IZT42-112L

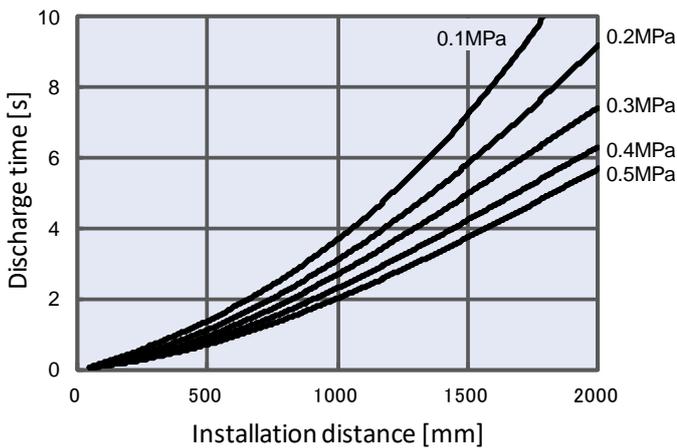

4) With Energy saving high-efficiency cartridge
With air purge, For IZT42-112V

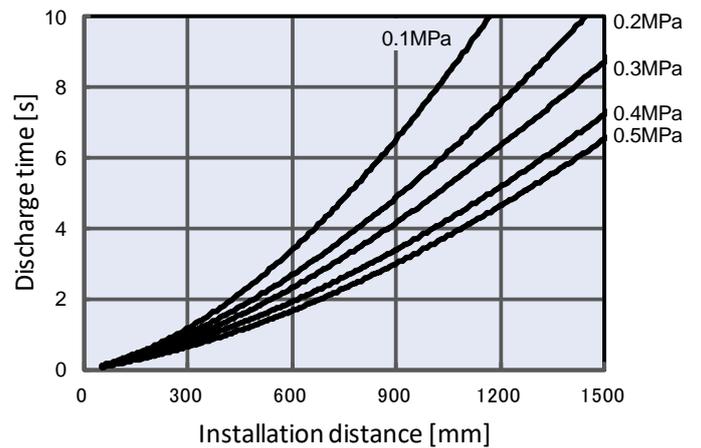


5-2. Potential amplitude


Supply pressure: 0.3 MPa

Applicable models: IZT40, IZT41(-L)


- 1) With High speed static neutralization cartridge
For IZT40-112D, IZT41-112D

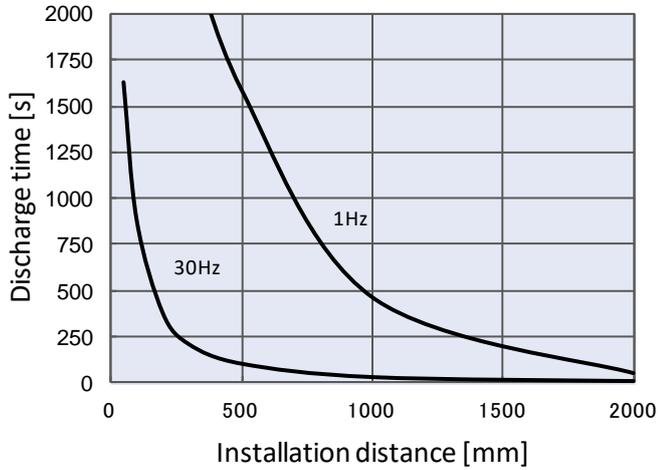

- 2) With Energy saving static neutralization cartridge
For IZT40-112L, IZT41-112L

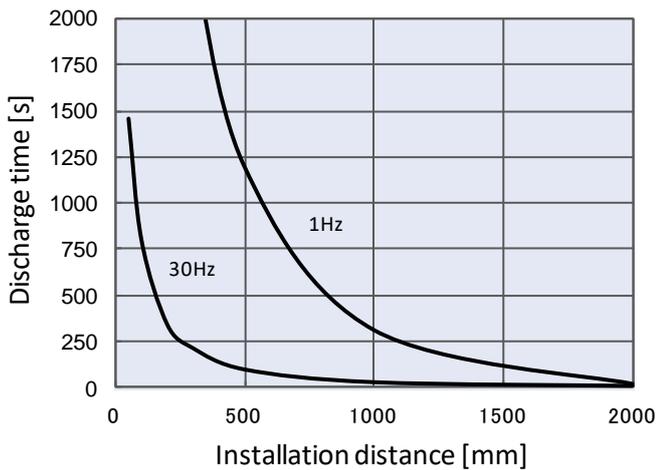


- 3) With Energy saving high-efficiency cartridge
For IZT40-112V, IZT41-112V

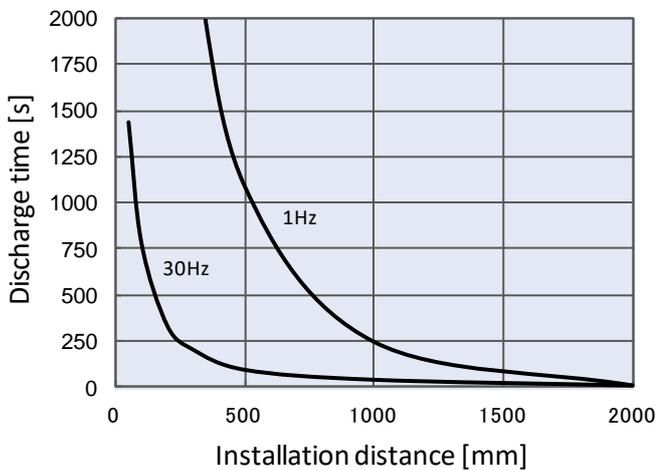


Applicable model: IZT42(-L)


- 1) With High speed static neutralization cartridge
For IZT42-112D

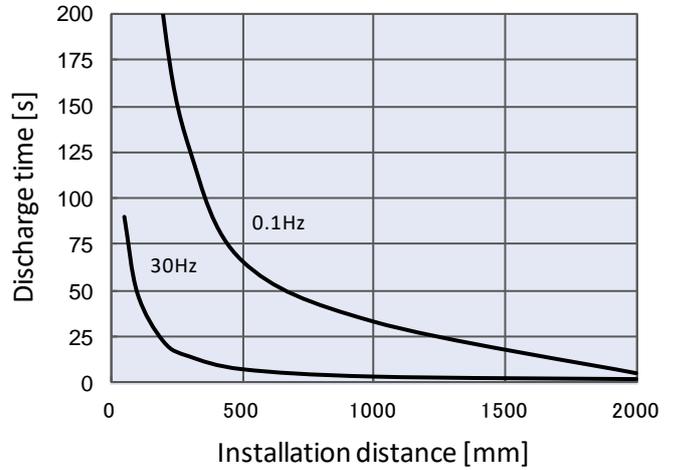

- 2) With Energy saving static neutralization cartridge
For IZT42-112L

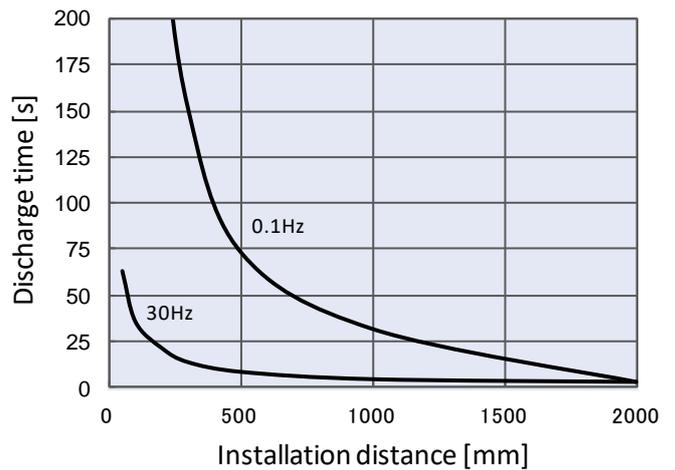

- 3) With Energy saving high-efficiency cartridge
For IZT42-112V

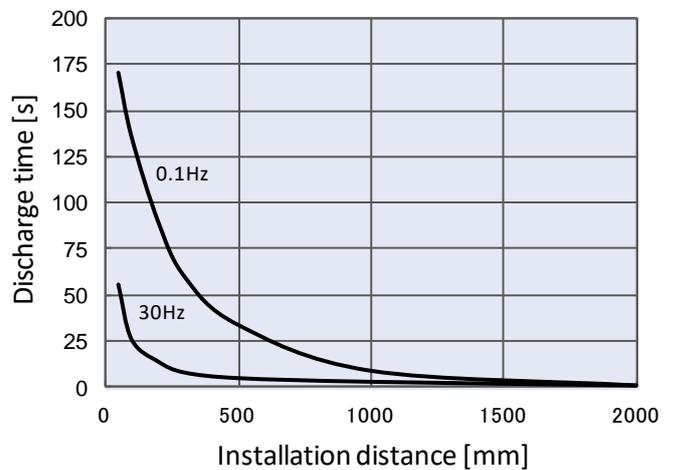



5-3. Static neutralization range

Frequency: 30 Hz

Applicable models: IZT40, IZT41(-L)



1) Supply pressure: 0 MPa

For IZT40-□D/L/V, IZT41-□D/L/V

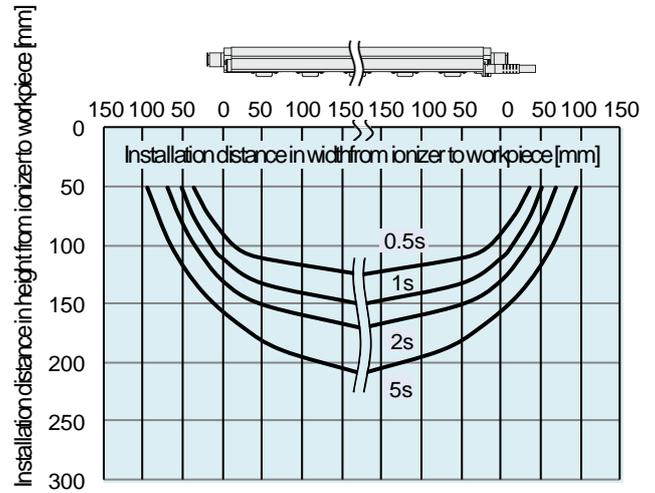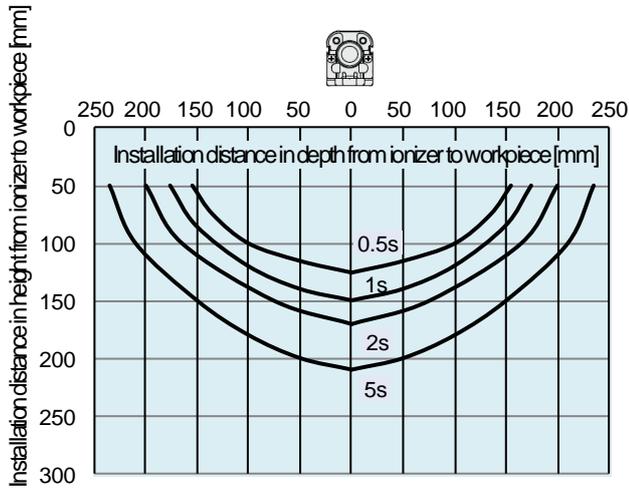



2) With High speed static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT40-□D, IZT41-□D

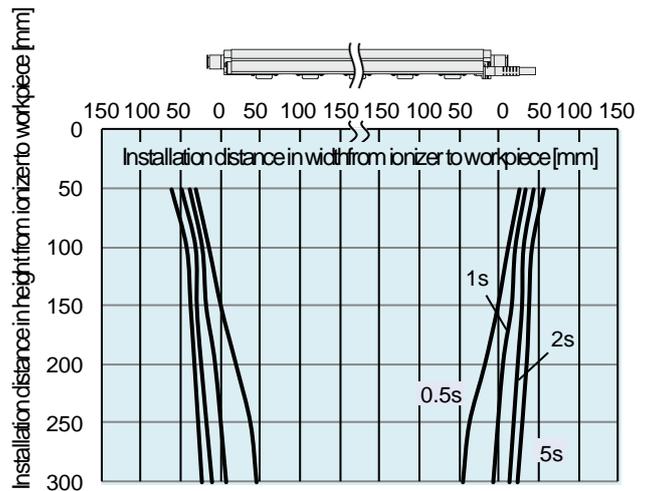
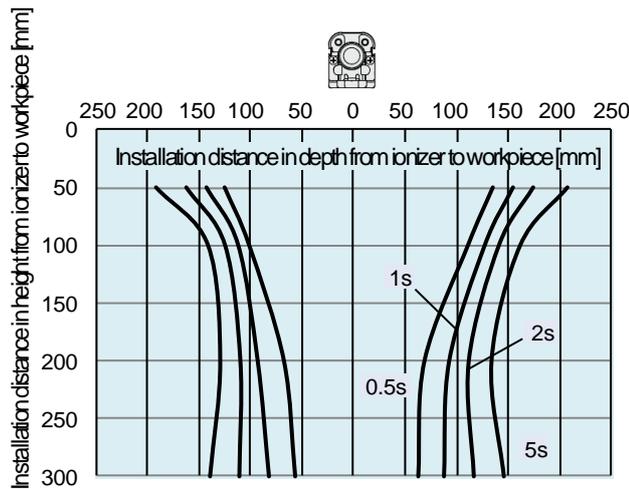


3) With Energy saving static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT40-□L, IZT41-□L

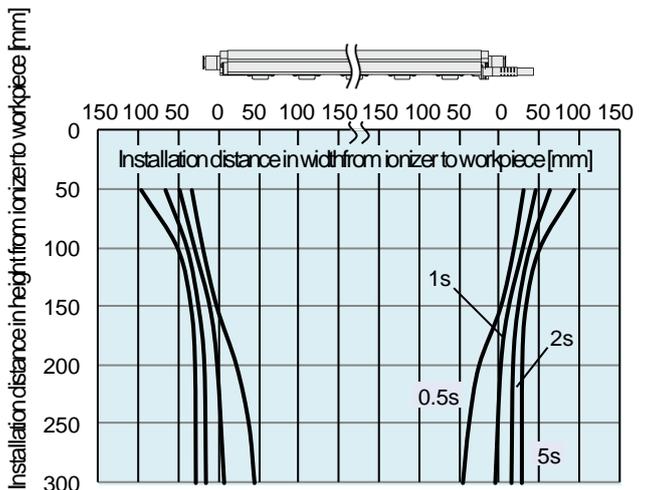
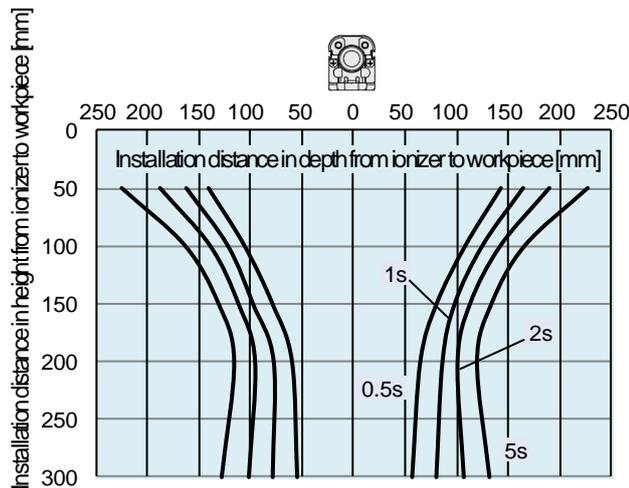


4) With Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa
 For IZT40-□V, IZT41-□V

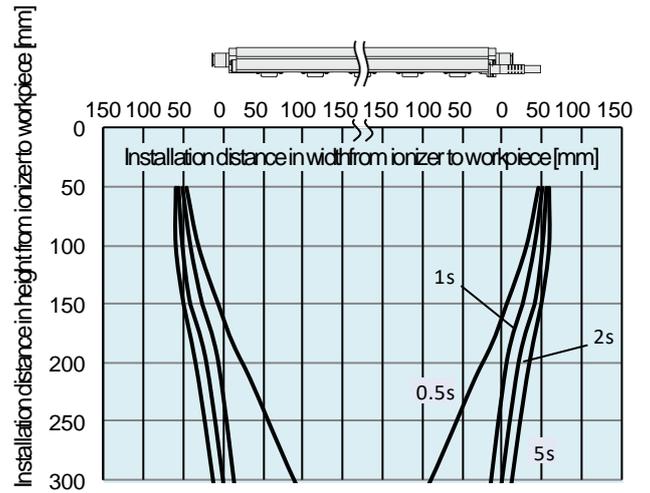
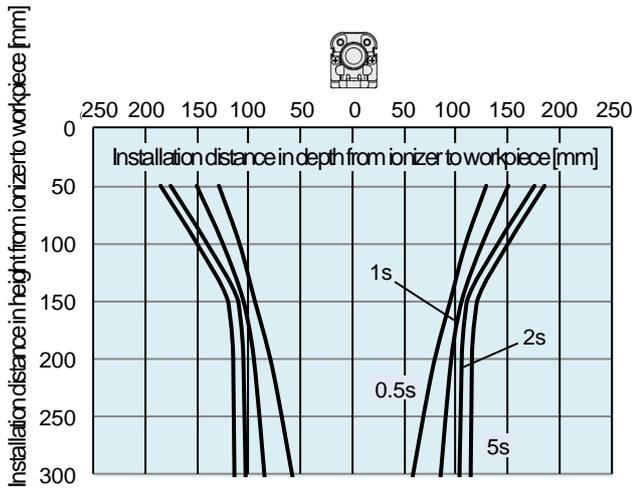


Applicable models: IZT42(-L)

1) Supply pressure: 0 MPa
 For IZT42-□D/L/V

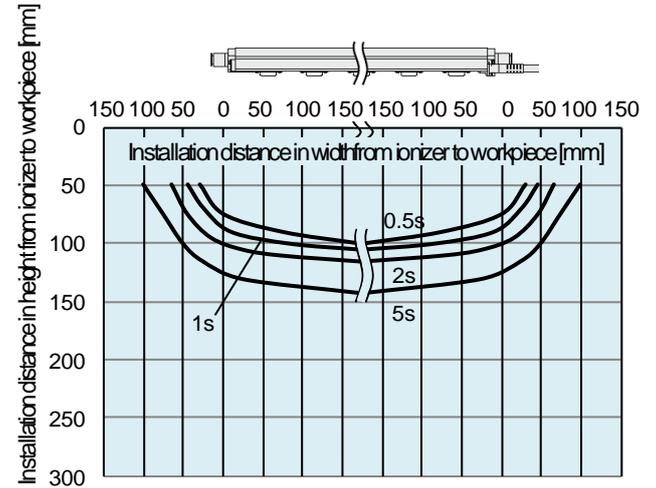
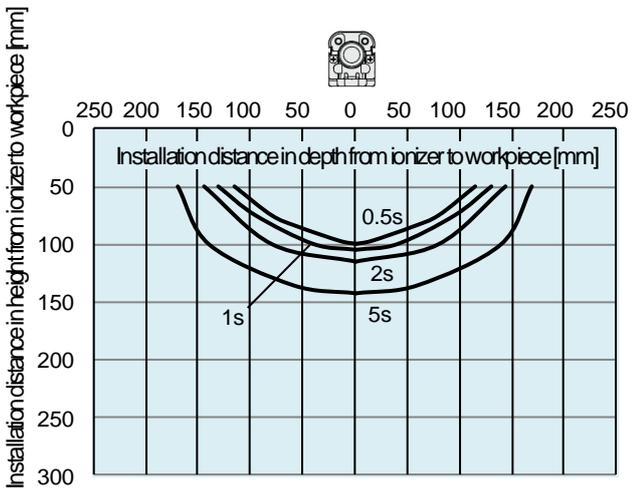


2) With High speed static neutralization cartridge, Supply pressure: 0.3 MPa
 For IZT42-□D

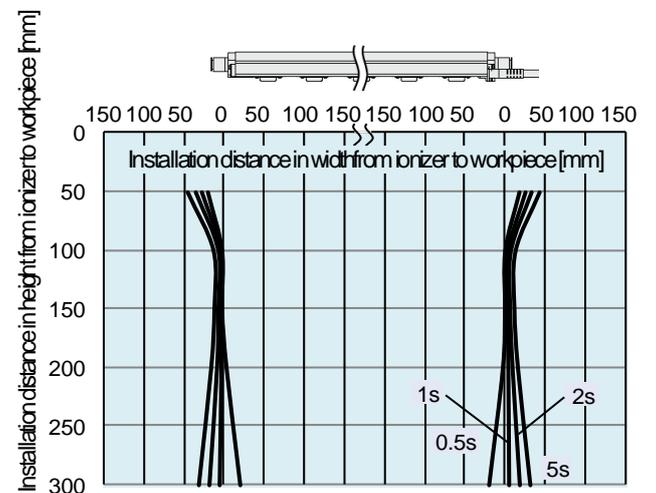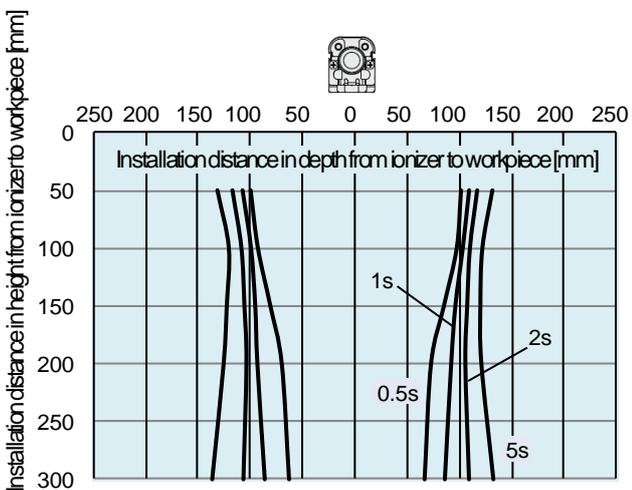



3) With Energy saving static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT42-□L

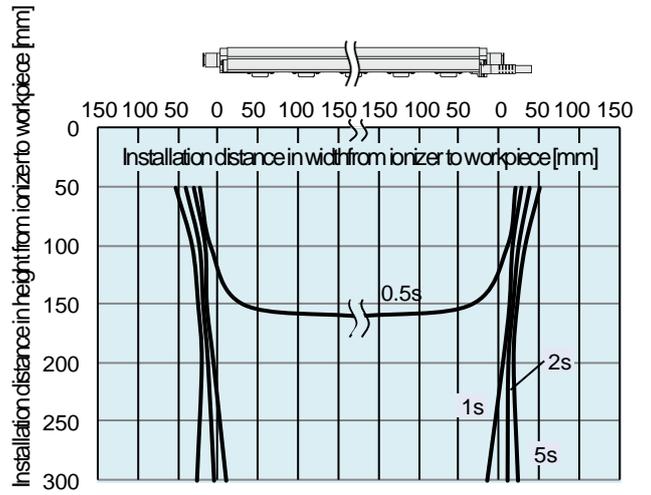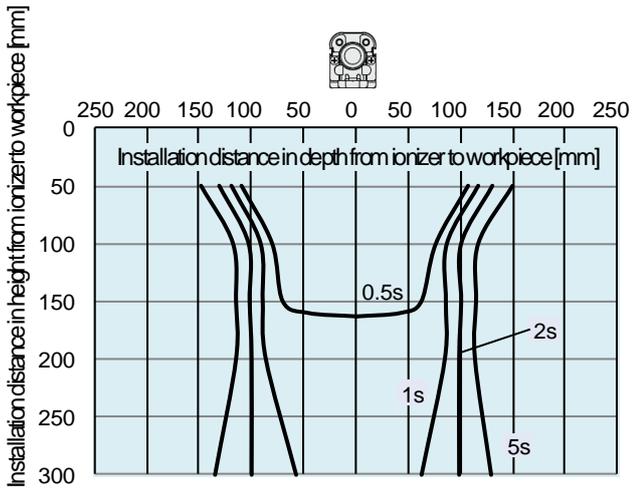


4) With Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa

For IZT42-□V

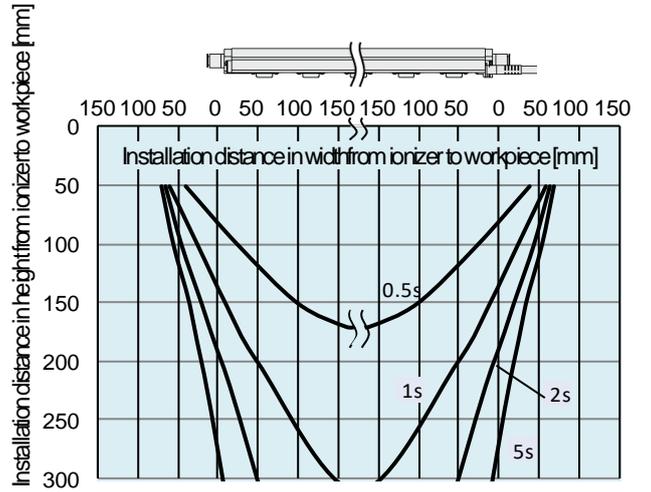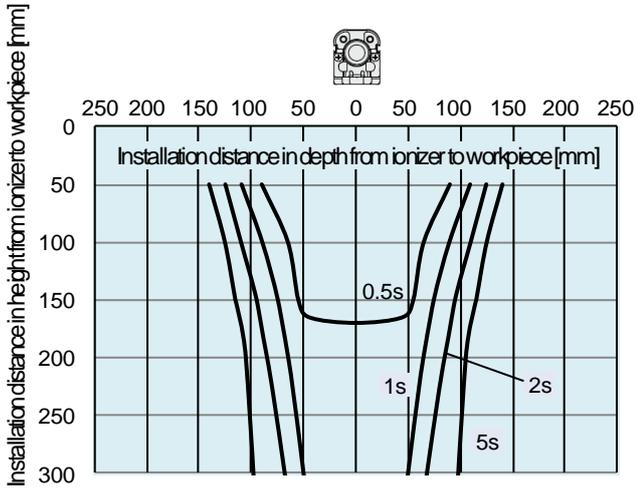


5-4. Flow - Pressure characteristics


1) With High speed
Static neutralization cartridge

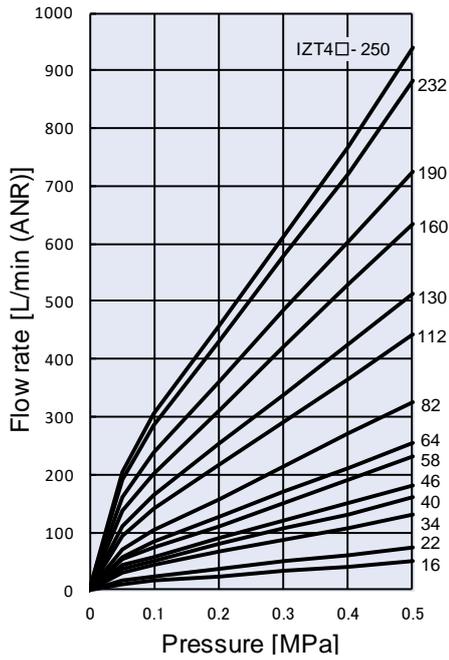

2) With Energy saving
Static neutralization cartridge

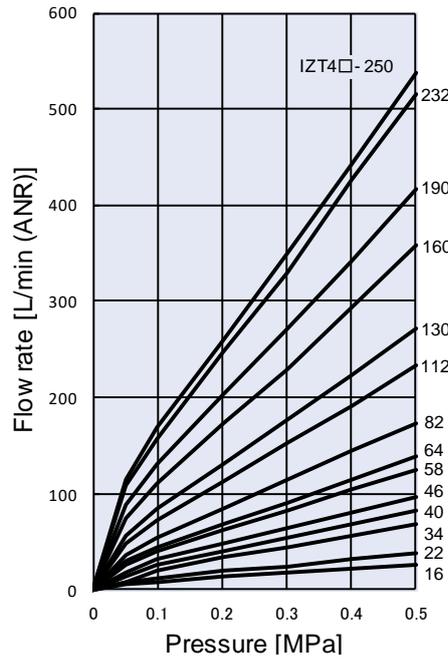


3) With Energy saving
high-efficiency cartridge

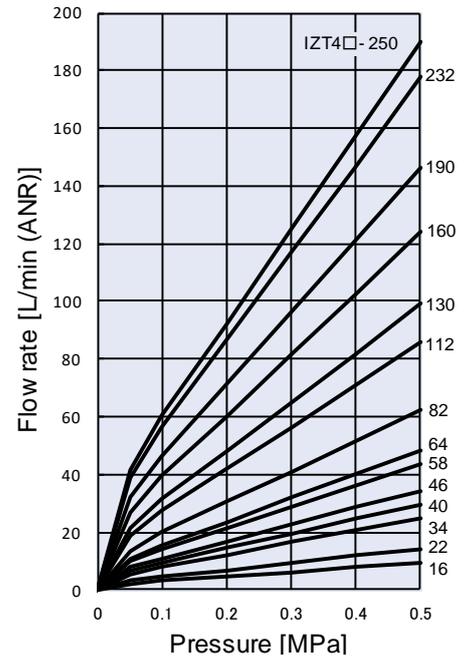

Measuring method schematic

a) Air supply from one side
IZT4□-16,22,34,40,46,58

Tube: O.D. $\phi 6 \times$ I.D. $\phi 4$

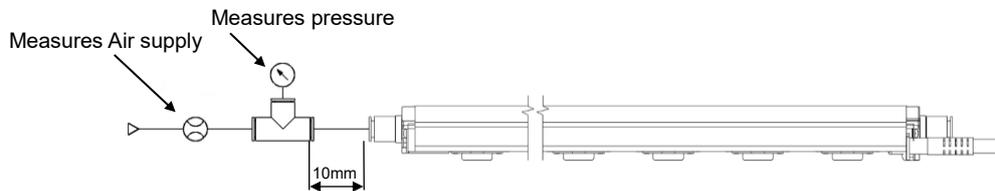

b) Air supply from both sides

IZT4□-64,82,112


Tube: O.D. $\phi 6 \times$ I.D. $\phi 4$

IZT4□-130,160,190

Tube: O.D. $\phi 8 \times$ I.D. $\phi 5$


IZT4□-232,250

Tube: O.D. $\phi 10 \times$ I.D. $\phi 6.5$

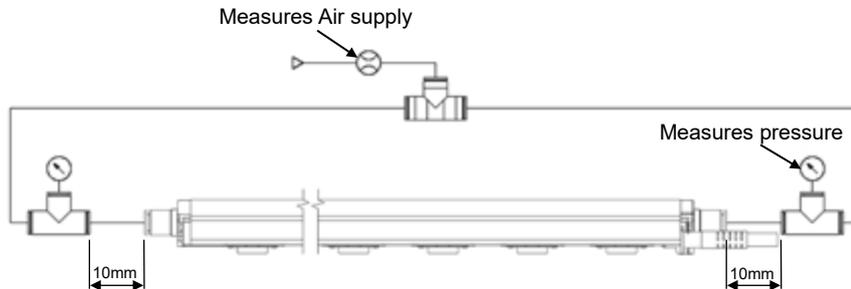

6. Dimensions

Ionizer IZT40, IZT41(-L)

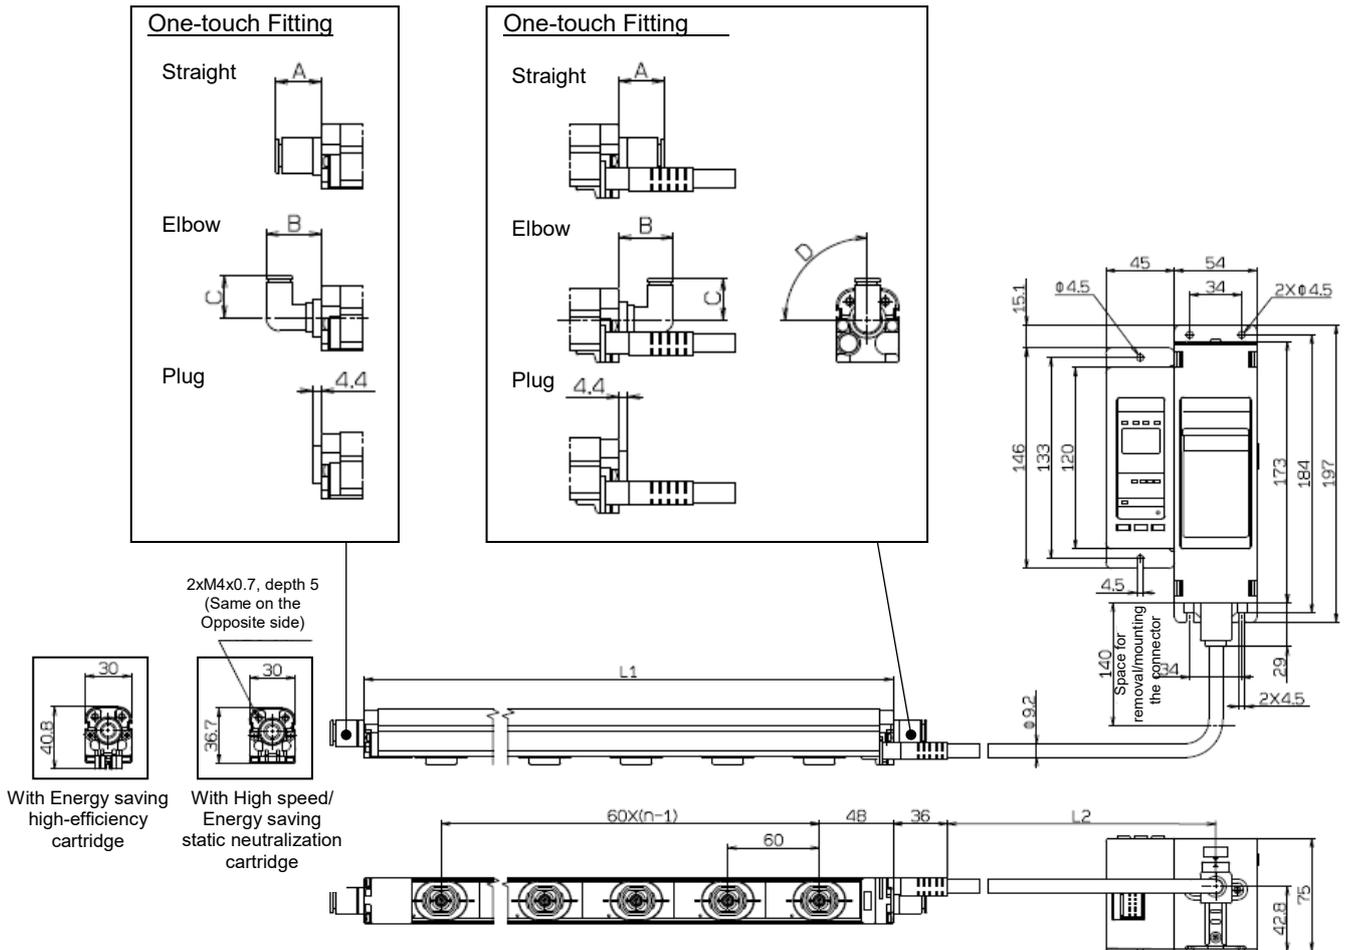

Emitter cartridge qty. n, bar length L1

Product No.	n(pc.)	L1(mm)
IZT4□-16	2	160
IZT4□-22	3	220
IZT4□-34	5	340
IZT4□-40	6	400
IZT4□-46	7	460
IZT4□-58	9	580
IZT4□-64	10	640
IZT4□-82	13	820
IZT4□-112	18	1120
IZT4□-130	21	1300
IZT4□-160	26	1600
IZT4□-190	31	1900
IZT4□-232	38	2320
IZT4□-250	41	2500

High voltage cable length L2

Symbol	L2(mm)
1	1000
2	2000
3	3000

One-touch fitting


Straight (mm)

Applicable tube O.D.		A
Metric	ø4	13
	ø6	13
	ø8	15
	ø10	22
Inch	ø3/16"	15
	ø1/4"	14
	ø5/16"	15
	ø3/8"	23


Elbow (mm)

Applicable tube O.D.		B	C	D
Metric	ø4	25	19	90°
	ø6	27	21	75°
	ø8	29	24	73°
	ø10	37	27	71°
Inch	ø3/16"	26	20	90°
	ø1/4"	27	21	75°
	ø5/16"	29	24	73°
	ø3/8"	36	27	71°


End bracket / IZT40-BE1
Intermediate bracket/ IZT40-BM1

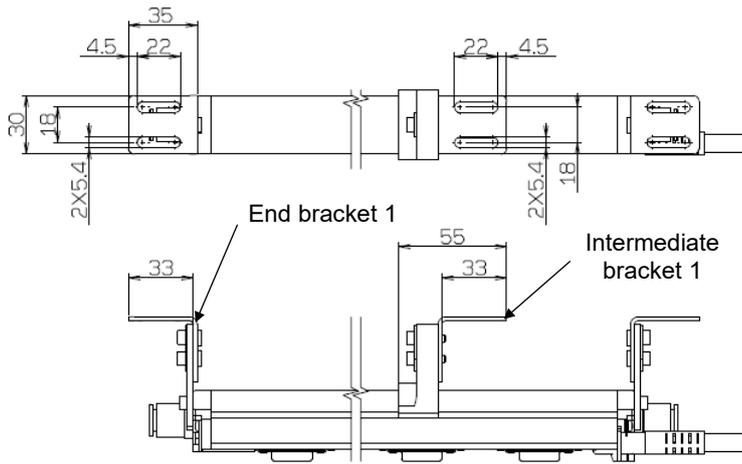


With High speed/ Energy saving static neutralization cartridge

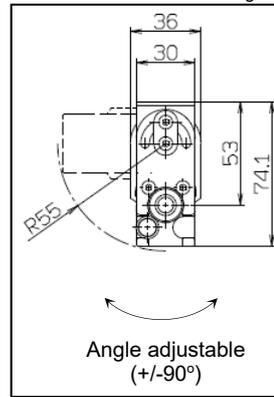


With Energy saving high-efficiency cartridge

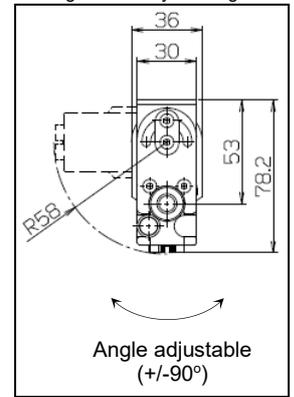


End bracket / IZT40-BE2
Intermediate bracket/ IZT40-BM2

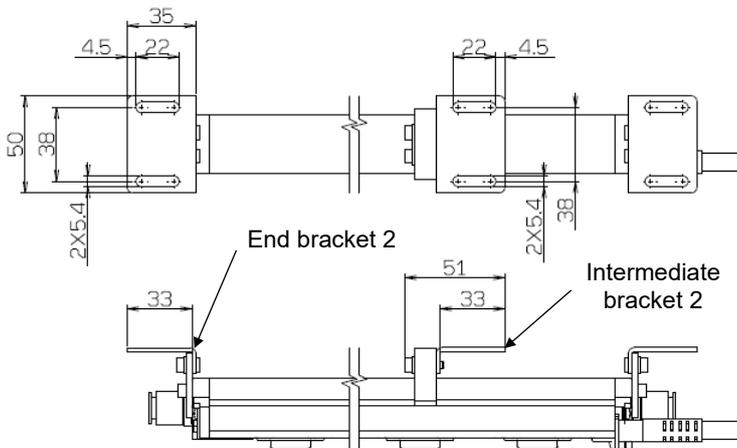


With High speed/ Energy saving static neutralization cartridge

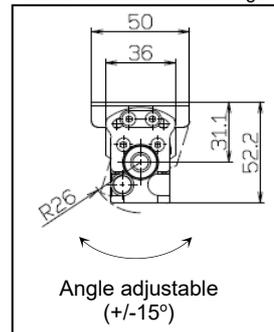

With Energy saving high-efficiency cartridge

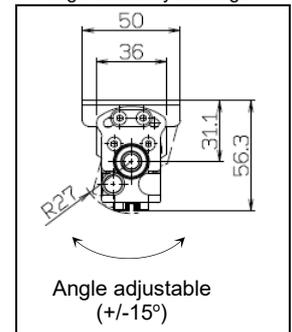

Ionizer IZT42(-L)

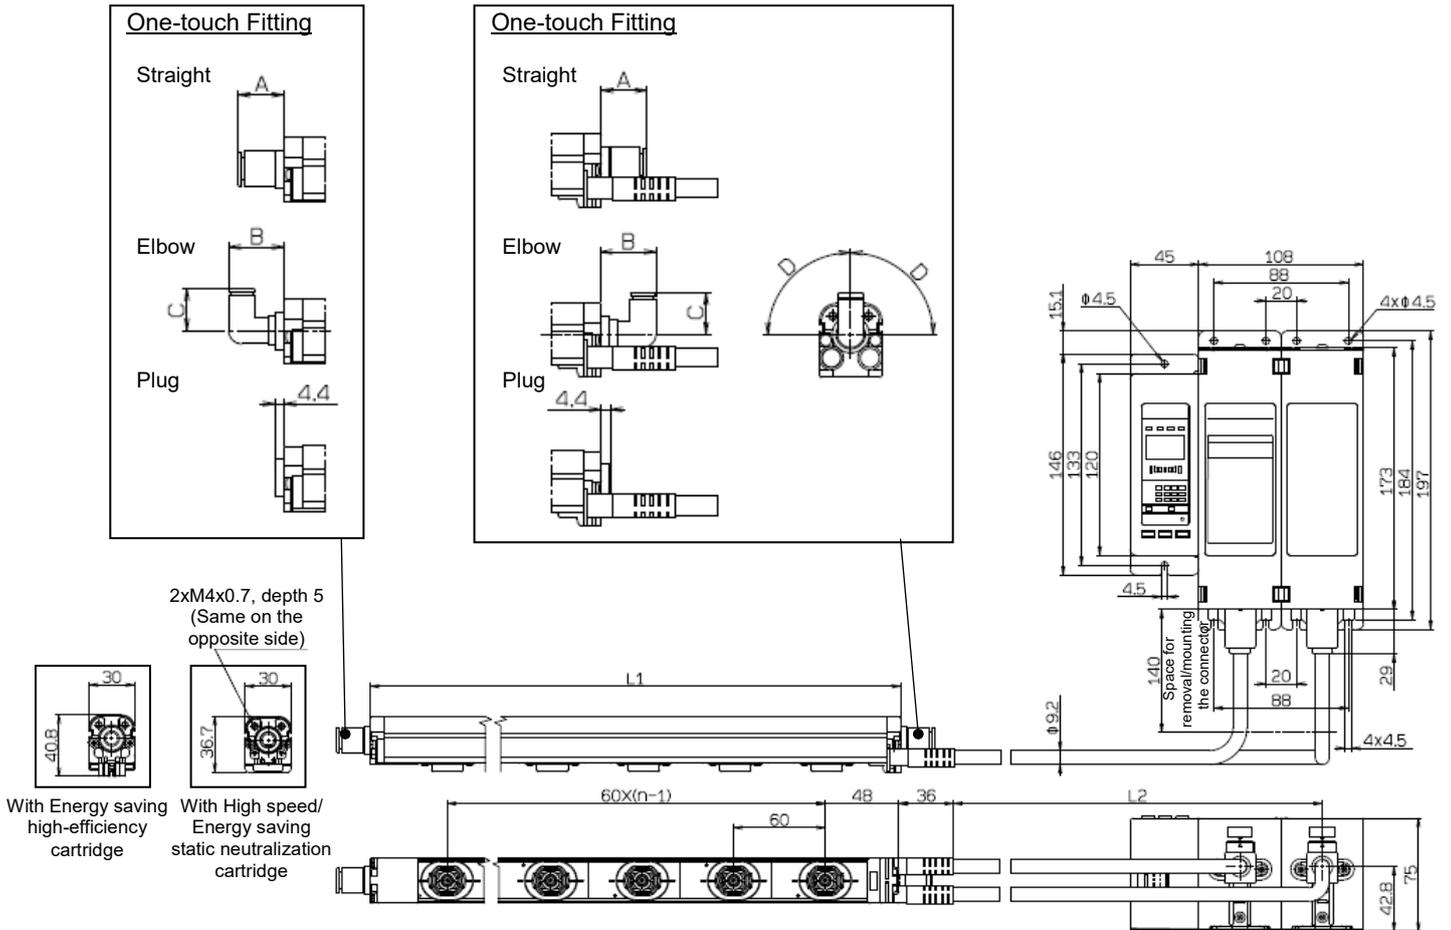

Emitter cartridge qty. n, bar length L1

Product No.	n(pc.)	L1(mm)
IZT4□-16	2	160
IZT4□-22	3	220
IZT4□-34	5	340
IZT4□-40	6	400
IZT4□-46	7	460
IZT4□-58	9	580
IZT4□-64	10	640
IZT4□-82	13	820
IZT4□-112	18	1120
IZT4□-130	21	1300
IZT4□-160	26	1600
IZT4□-190	31	1900
IZT4□-232	38	2320
IZT4□-250	41	2500

High voltage cable length L2


Symbol	L2(mm)
1	1000
2	2000
3	3000

One-touch fitting


Straight		(mm)
Applicable tube O.D.		A
Metric	ø4	13
	ø6	13
	ø8	15
	ø10	22
Inch	ø3/16"	15
	ø1/4"	14
	ø5/16"	15
	ø3/8"	23

Elbow		(mm)		
Applicable tube O.D.		B	C	D
Metric	ø4	25	19	90°
	ø6	27	21	75°
	ø8	29	24	73°
	ø10	37	27	71°
Inch	ø3/16"	26	20	90°
	ø1/4"	27	21	75°
	ø5/16"	29	24	73°
	ø3/8"	36	27	71°


End bracket / IZT40-BE1
Intermediate bracket/ IZT40-BM1

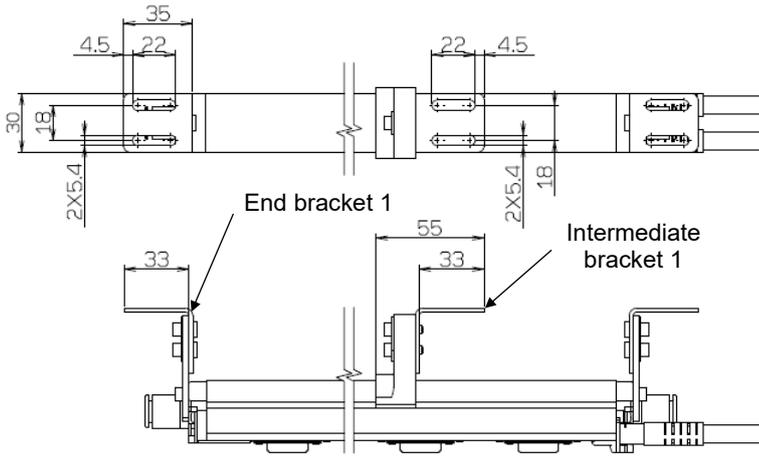


With High speed/ Energy saving static neutralization cartridge

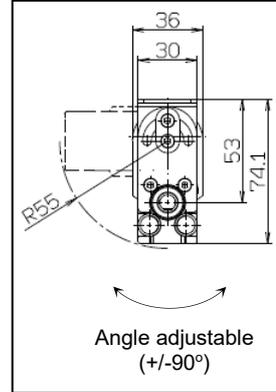


With Energy saving high-efficiency cartridge

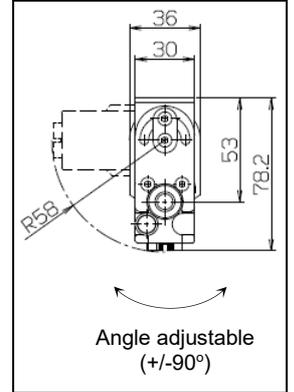


End bracket / IZT40-BE2
Intermediate bracket/ IZT40-BM2

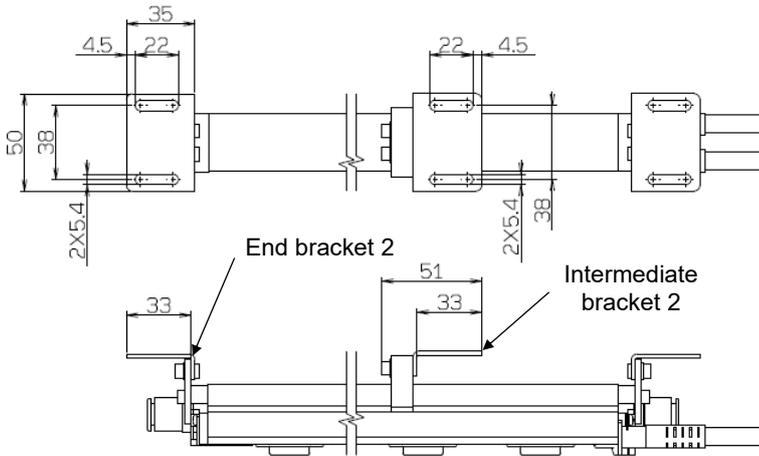

With High speed/ Energy saving static neutralization cartridge

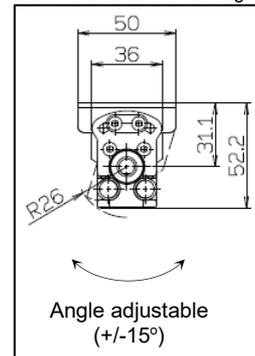


With Energy saving high-efficiency cartridge

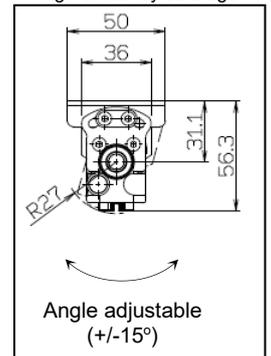


Controller IZTC40, IZTC41, IZTC41-P (IZT40/41/42)

For IZTC41-L, refer to IO-Link dedicated instruction manual.

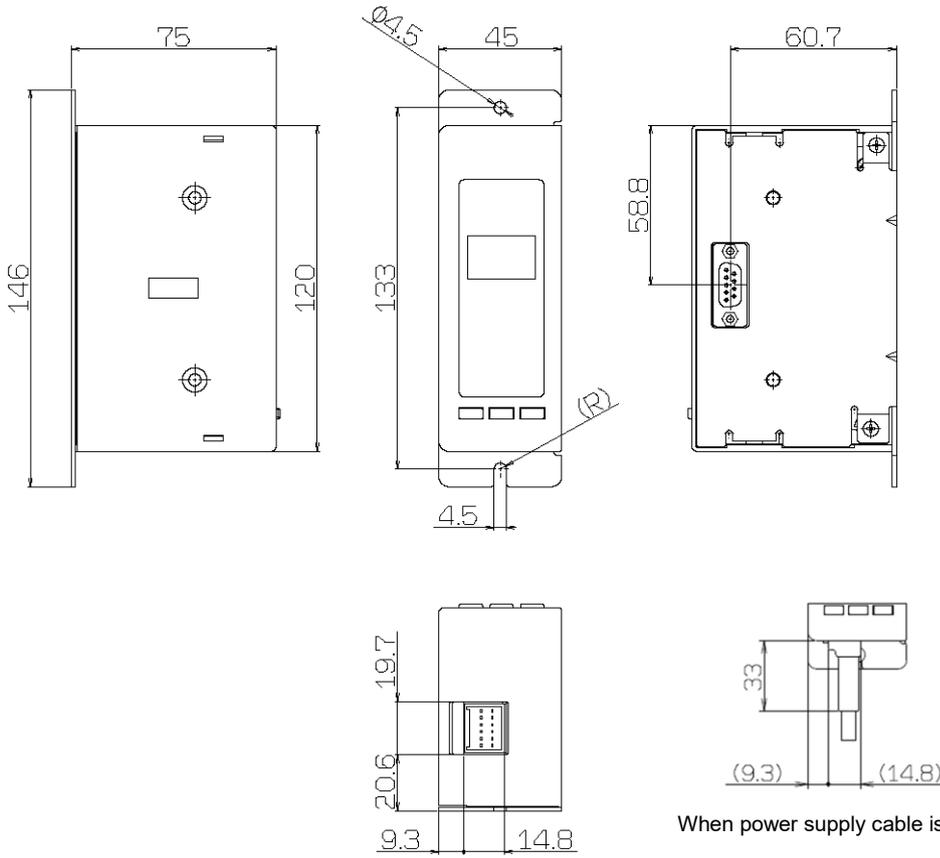


When power supply cable is inserted


When DIN rail mounting bracket (IZT40-B1) is used

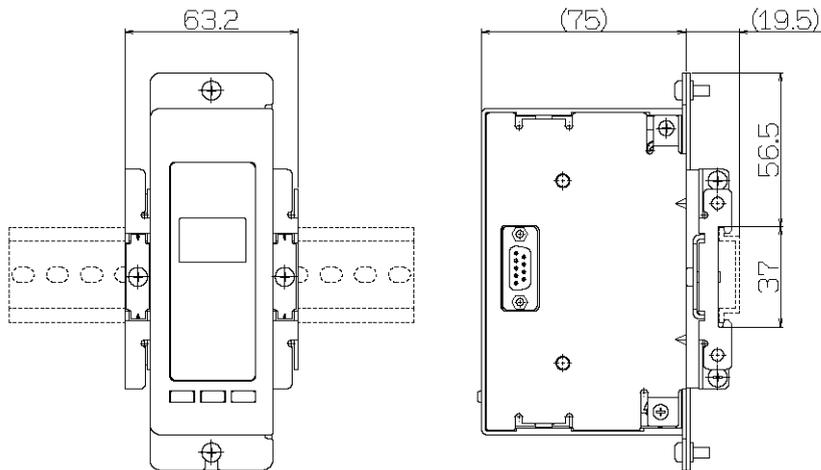


High voltage power supply module IZTP40, IZTP41 (IZT40/41)
 For IZTP41-L (IZT41-L), refer to IO-Link dedicated instruction manual.

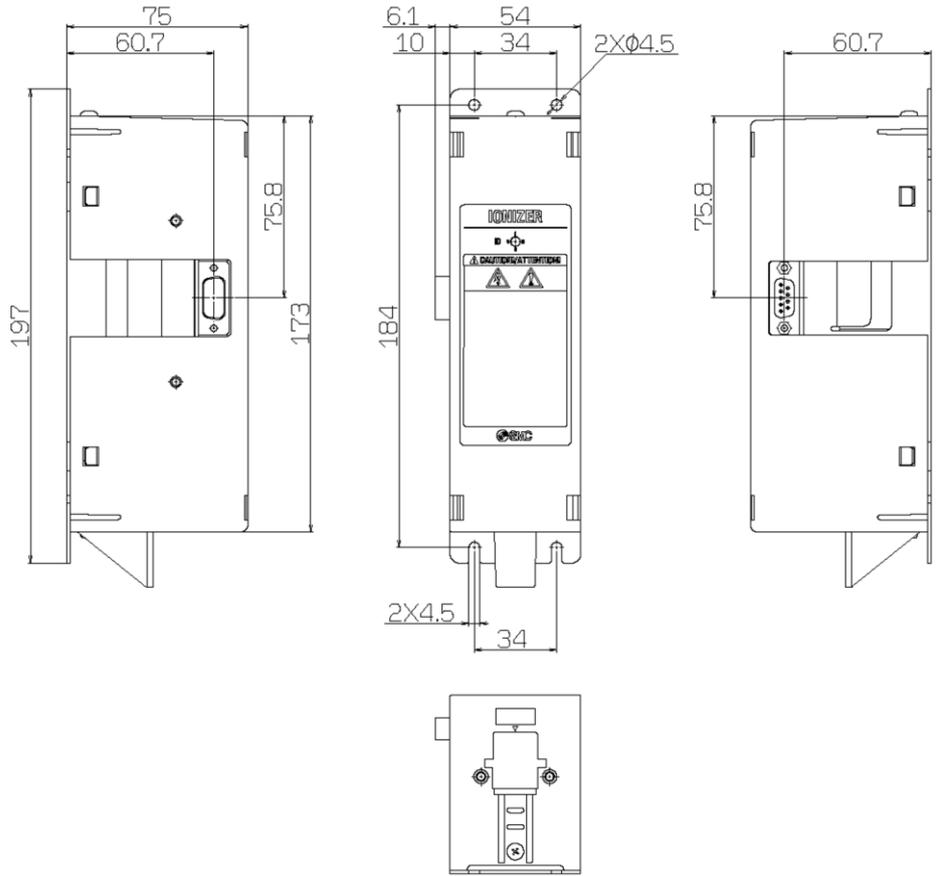


When DIN rail mounting bracket (IZT40-B2) is used

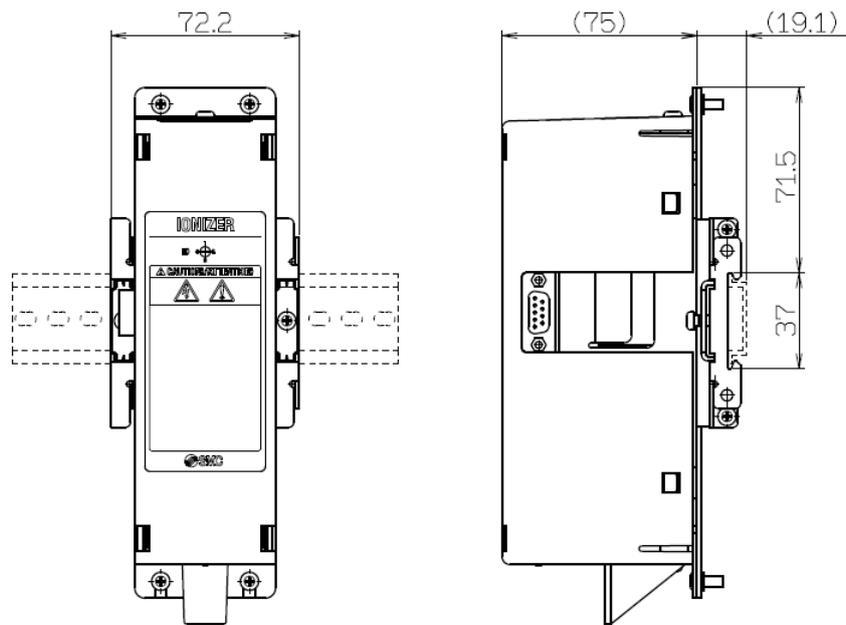

High voltage power supply module IZTP42 (IZT42)
 For IZTP42-L (IZT42-L), refer to IO-Link dedicated instruction manual.

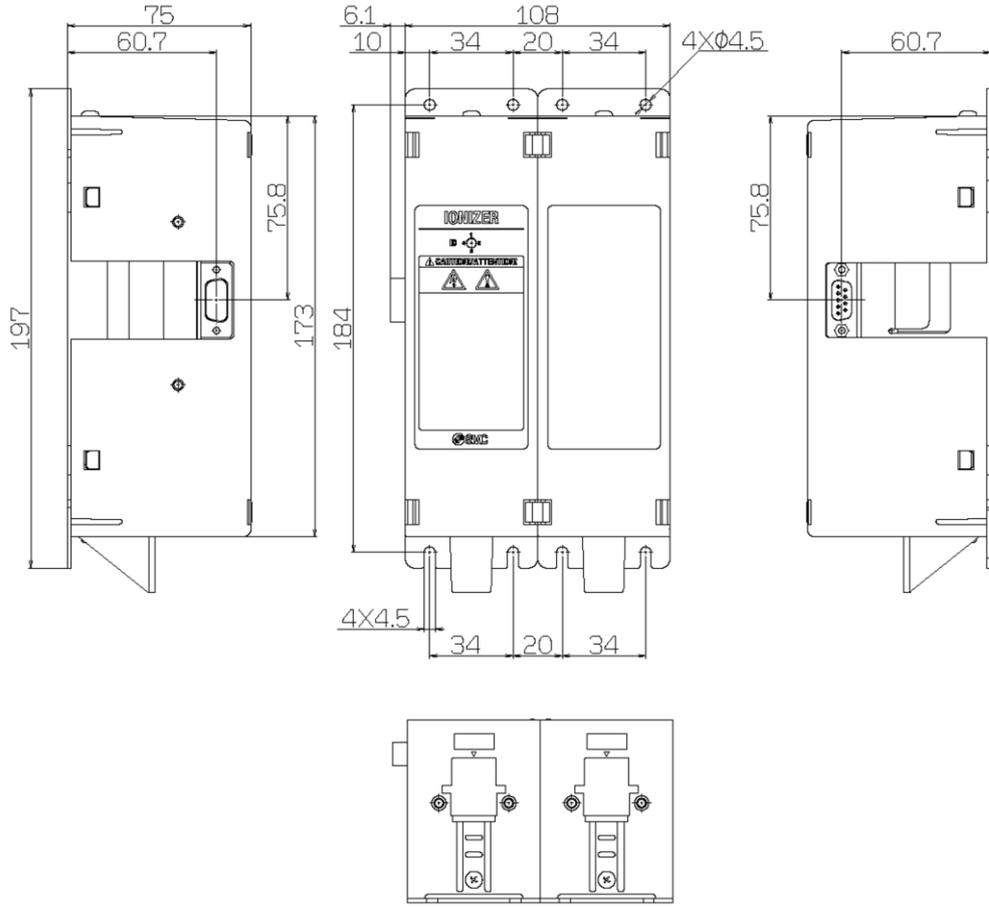


When DIN rail mounting bracket (IZT40-B3) is used

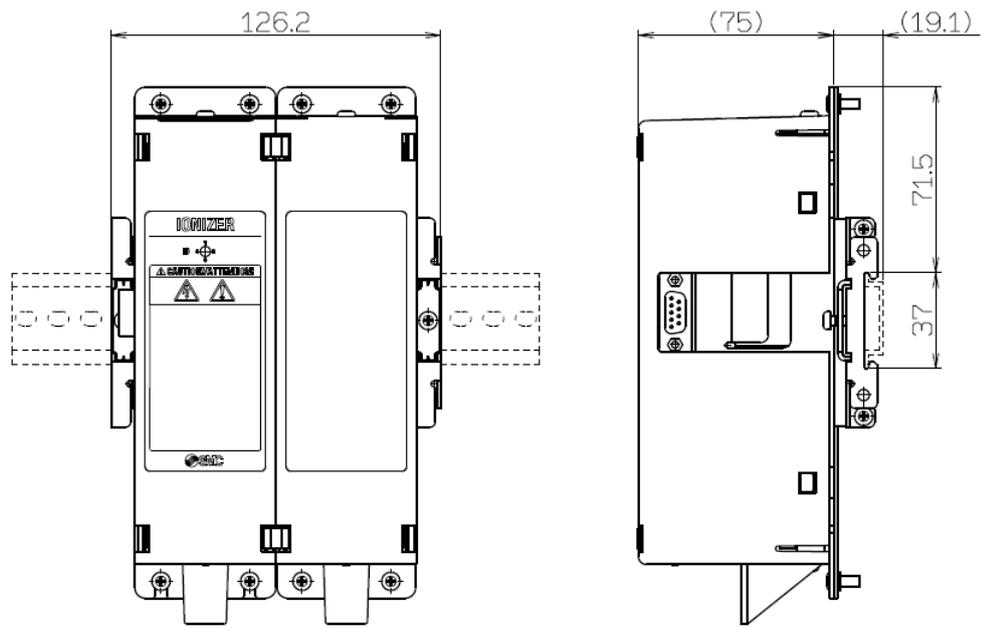

Power supply cable IZS40-CP□

For IZT41-CP□ (for IZT41-L/42-L), refer to IO-Link dedicated instruction manual.

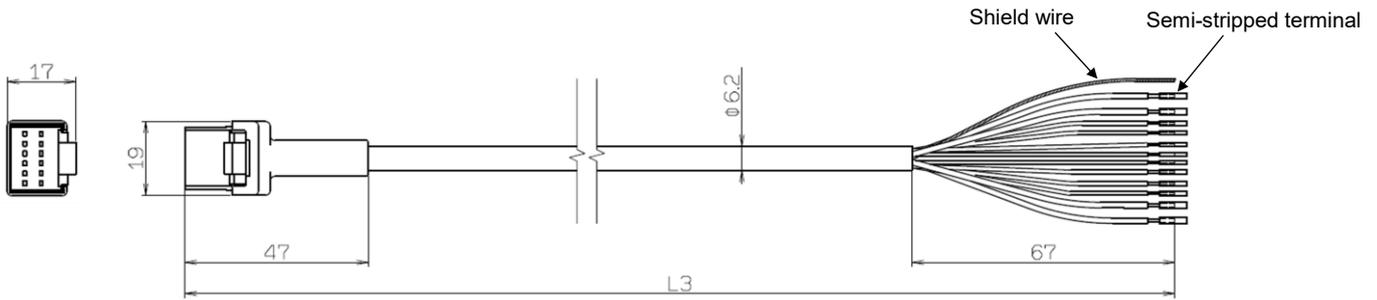


Cable length L3

Product No.	L3(mm)
IZT40-CP3	2950
IZT40-CP5	5000
IZT40-CP10	9800
IZT40-CP15	15000

Cable specification

Number of wire /size		12 cables/AWG20(4pcs.), AWG(8pcs.)
Conductor	Nominal cross section	0.54mm ² (4pcs.), 0.09mm ² (8 pcs.)
	O.D.	0.96mm (4pcs.), 0.38mm (8pcs.)
Insulator	O.D.	1.4mm, brown, blue
		0.7mm, white, green, pink, purple, gray, yellow, orange, black
Sheath	Material	Lead free PVC
	O.D.	6.2mm


Separate cable IZT40-CF□

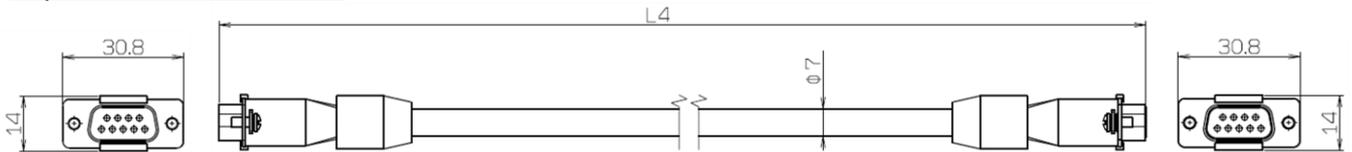

Cable length L4

Product No.	L4(mm)
IZT40-CF1	1000
IZT40-CF2	2000
IZT40-CF3	3000

Space for mounting/removal of the separate cable and high voltage connector

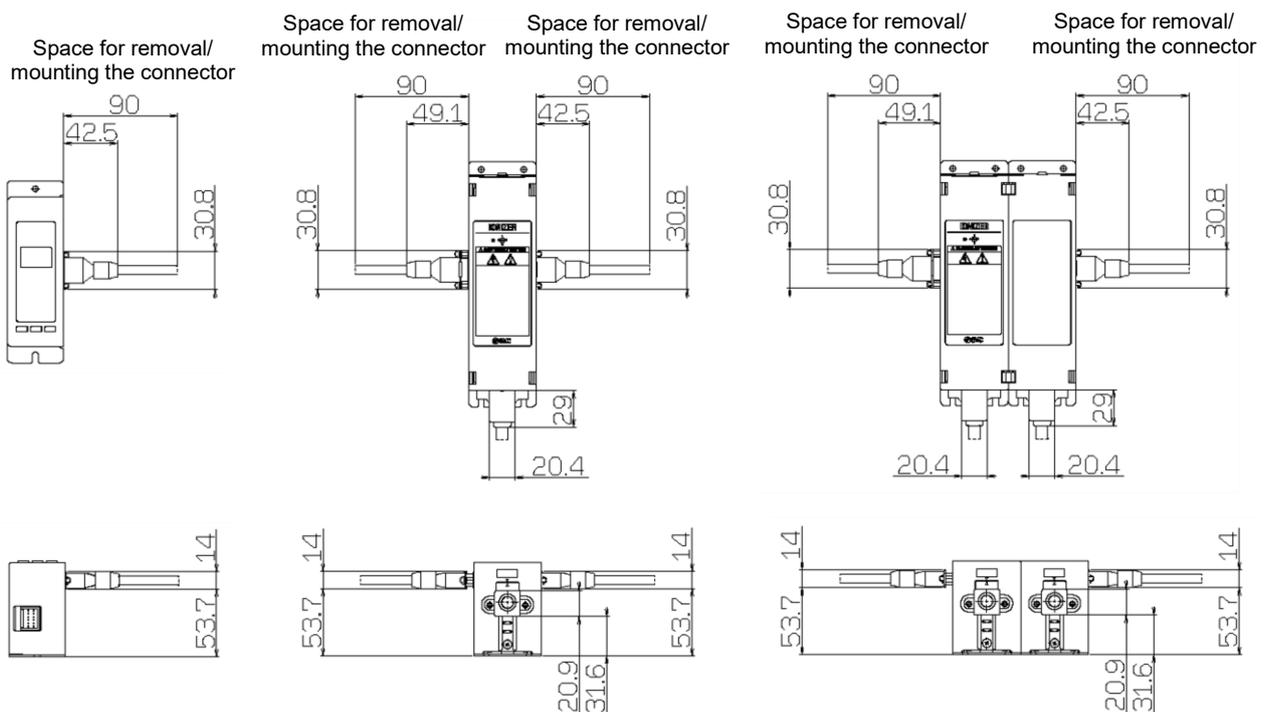


IZTC40/IZTC41(-L)


IZTP40/IZTP41(-L)

IZTP42(-L)


Cable holder (straight) IZT40-E1

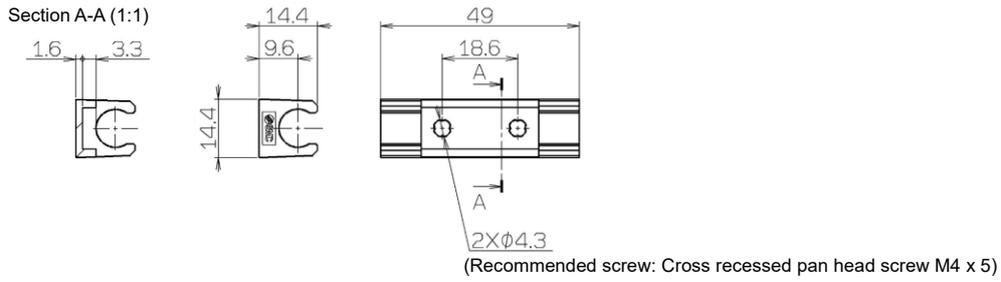


Cable holder (elbow) IZT40-E2

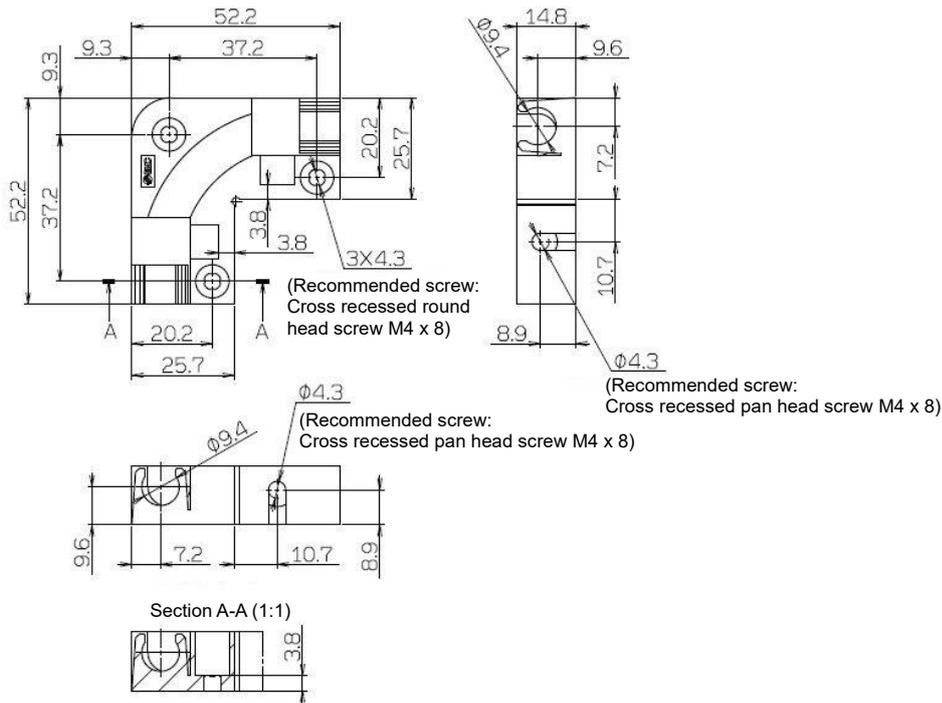

**AC adapter (IZT40/41/42)
IZT40-CG1(with AC cord)**

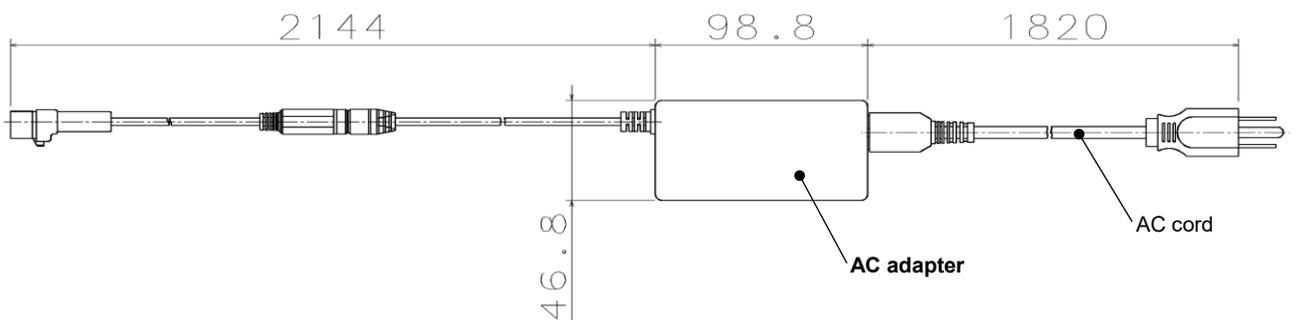

IZT40-CG2 (without AC cord)

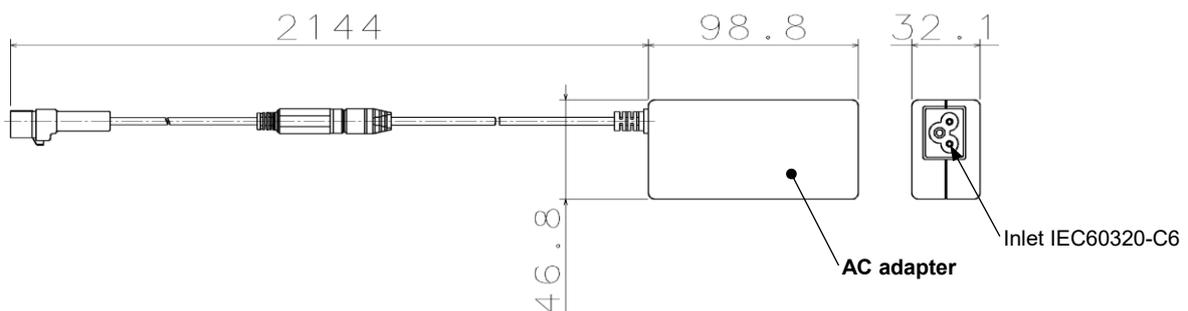

7. Specifications

Ionizer

Model		IZT40	IZT41(-L)	IZT42(-L)
Ion generating method		Corona discharging method		
Voltage application method		AC, DC ^{Note77)}		Dual AC
Applied voltage		±7,000V		±6,000V
Offset voltage ^{Note78)}		Within +/-30V		
Air purge	Fluid	Air (Clean and dry)		
	Operating pressure	0.5MPa or less		
	Proof pressure	0.7MPa		
	Connected tube O.D. (One side can be plugged)	In mm : $\phi 4$, $\phi 6$, $\phi 8$, $\phi 10$ In inch : $\phi 3/16$ ", $\phi 1/4$ ", $\phi 5/16$ ", $\phi 3/8$ "		
Current consumption		0.7A or less (+0.6A or less per ionizer when connected)	0.8A or less (+0.7A or less per ionizer when connected)	1.4A or less (+1.3A or less per ionizer when connected)
Power supply voltage		DC24V±10%		
Input signal ^{Note79)}	NPN type	—	Connect with DC(-) Voltage range : DC5V or less Current consumption : 5mA or less	
	PNP type		Connect with DC(+) Voltage range : 19VDC to supply voltage Current consumption : 5mA or less	
Output signal ^{Note79)}	NPN type	—	Max. load current : 100mA Residual voltage : 1V or less (at 100mA of load current) Max. supply voltage : 26.4VDC	
	PNP type		Max. load current : 100mA Residual voltage : 1V or less (at 100mA of load current)	
IO-Link Device ^{Note80)}		—	Voltage range : 18 to 30VDC Current consumption : 100mA or less	
Function		High voltage abnormality detection (ion generation stops when abnormality is detected)	Auto balance, Maintenance detection, High voltage abnormality detection (ion generation stops when abnormality is detected), Ion generation stop input	
Effective static neutralizing distance		50 to 2,000mm		
Ambient and fluid temperature	Controller High voltage power supply module	0 to 40°C		
	Bar	0 to 50°C		
Ambient humidity		35 to 80%Rh (no condensation)		
Material	Controller	Cover : ABS, Aluminium, Switch : Silicone rubber ^{Note79)}		
	High voltage power supply module	ABS, Aluminium		
	Bar	Cover: ABS, Emitter cartridge: PBT, Emitter: Tungsten or monocrystal silicon, High voltage cable: Silicone rubber, PVC		
Applicable standard		CE (EMC directive)		

Note77) Apply cathode or anode to DC.

Note78) With air purge at a distance of 300mm between the workpiece and ionizer

Note79) Transistor input/output type

Note80) IO-Link type

Communication specification (IZT41-L/42-L)

IO-Link type	Device
IO-Link version	V.1.1
Configuration file format	IODD file
Communication speed	COM2 (38.4 Kbps)
Minimum cycle time	8.0ms
Process data length	Input Data : 13 byte、Output Data : 9 byte
On-Request data	Compatible
Data Storage	Compatible
Event	Compatible
Vender ID	131 (0x0083)
Device ID	581 (0x000245)

Weight

	Controller	High voltage power supply module
IZT40	210	680
IZT41	210	680
IZT42		1350
IZT41-L	230	690
IZT42-L		1360

Emitter Cartridge qty., bar weight

Symbol for bar length		16	22	34	40	46	58	64	82	112	130	160	190	232	250
Emitter cartridge qty. (pcs.)		2	3	5	6	7	9	10	13	18	21	26	31	38	41
IZT40 IZT41 (common for bars)	High voltage cable 1m	360	420	530	590	650	760	820	990	1270	1440	1720	2010	2410	2580
	High voltage cable 2m	490	550	660	720	780	890	950	1120	1400	1570	1850	2140	2540	2710
	High voltage cable 3m	610	670	780	840	900	1010	1070	1240	1520	1690	1970	2260	2660	2830
IZT42	High voltage cable 1m	520	580	690	750	810	920	980	1150	1430	1600	1880	2170	2570	2740
	High voltage cable 2m	770	830	940	1000	1060	1170	1230	1400	1680	1850	2130	2420	2820	2990
	High voltage cable 3m	1010	1070	1180	1240	1300	1410	1470	1640	1920	2090	2370	2660	3060	3230

AC adapter(Sold separately) (IZT40/41/42)

Models	IZT40-CG1, IZT40-CG2
Input voltage	AC100-240V, 50/60Hz
Output current	1.9A
Ambient temperature	0 to 40°C
Ambient humidity	35 to 65%Rh (no condensation)
Weight	375g
Applicable standard/directive	CE, cUL

8. Troubleshooting

For IZT41-L/42-L refer to IO-Link dedicated instruction manual.

Problem	Applicable model IZ40 IZ41 IZ42	Status	Possible causes	Investigation method and possible causes	Countermeasures	
Does not operate	○	○	The product does not turn ON (LED is OFF)	Check the power supply wiring. Check the connection of 2 brown wires (DC+) and 2 blue wires (DC-).	Ensure all connections are in accordance with 3-2. Wiring.	
	○	○	Power supply incorrectly wired	Check if high voltage cable is connected to the high voltage power supply module.	Connect high voltage cable to the high voltage power supply module.	
	○	○	High voltage cable is not connected to the high voltage power supply module.	1) Check if there is any high current equipment installed near the ionizer 2) Check if the power supply cable or the separate cable is routed together with any high power cable.	1) If any high current equipment is nearby, either move it away or consider an alternative location for the ionizer. 2) Route the ionizer wiring separately to high power cables. 3) Install a noise filter to the controller power supply.	
	○	○	Error code "E0" is displayed (Controller CPU abnormality)	CPU malfunction caused by noise	Check the power supply input is within the range of 24 VDC +/-10%.	Ensure the power supply is in the range of 24 VDC +/-10%.
	○	○	Error code "E1" is displayed (Power supply failure)	Power supply voltage is out of range	1) Check if there is any high current equipment installed near the ionizer 2) Check if the power supply cable or the separate cable is routed together with any high power cable.	1) If any high current equipment is nearby, either move it away or consider an alternative location for the ionizer. 2) Route the ionizer wiring separately to high power cables. 3) Install a noise filter to the controller power supply.
	○	○	Error code "E2" is displayed (High voltage power supply module CPU abnormality)	CPU malfunction caused by noise	1) Check the emitter for contamination. 2) Check whether there is arcing between the bar and workpiece to be neutralized. 3) Check whether the ionizer is used in an environment subject to condensation or moisture. 4) Check the High voltage connector for contamination.	1) If dust or dirt is found on the emitter, clean the emitter referring to [9-2. Emitter maintenance alarm and cleaning cycles]. 2) If there is arcing between the workpiece to be neutralized and the bar, increase the distance between them until arcing no longer occurs. 3) The ionizer must not be used in environments subject to condensation or moisture. 4) If dust or dirt is found on the connector, clean the connector.
	○	○	Error code "E3" is displayed (Incorrect high voltage)	Abnormal high voltage discharge	1) Check if there is any high current equipment installed near the ionizer 2) Check if the power supply cable or the separate cable is routed together with any high power cable.	1) If any high current equipment is nearby, either move it away or consider an alternative location for the ionizer. 2) Route the ionizer wiring separately to high power cables. 3) Install a noise filter to the controller power supply.
	○	○	Error code "E4" is displayed (Communication error)	Malfuniction caused by noise	Check the fan motor is rotating for cooling which is installed in the high voltage power supply module.	If foreign matter is clogged with the fan motor, remove the foreign matter.
	○	○	Error code "E5" is displayed (Fan motor failure)	The fan motor was clogged up with foreign matter.	Check the model number of the controller and high voltage power supply module.	Select applicable controller and high voltage power supply module referring to [1-1. System construction].
	○	○	Error code "E6" is displayed (High voltage power supply module inconsistent)	High voltage power supply module which cannot be connected to the controller	When multiple high voltage power supply modules are connected to the controller, make sure that the CH number set synonymate not duplicated.	Make sure that the set numbers of the CH number set switch of the high voltage power supply module are not duplicated.
No output signal	○	○	Error code "E7" is displayed (Duplication of CH)	CH setting is duplicated when multiple high voltage power supply modules are connected to the controller.	Check if the high voltage power supply module is connected to the controller.	Connect the high voltage power supply module to the controller.
	○	○	Error code "E8" is displayed (When multiple high voltage power supply modules are connected, the number of them and the number of the controller display are not consistent)	High voltage power supply module is not connected to the controller.	Check if the high voltage power supply modules are connected each other.	Connect the high voltage power supply modules each other. (Refer to 3-1. Installation of Ionizer for details.)
	○	○	Error code "E9" is displayed (Error signal output over current)	High voltage power supply modules are not connected. Error signal output circuit wired incorrectly (Abnormal signal over current generated)	Check the output specifications (NPN/PNP) and wiring of black wire.	Ensure all connections are in accordance with 3-2. Wiring.
	○	○	Error code "E10" is displayed (Maintenance signal output over current)	Incorrect wiring of the maintenance signal output circuit (Maintenance signal over current generated)	Check the output specifications (NPN/PNP) and wiring of white wire.	
	○	○	No output signal	Output circuit wired incorrectly	Check the output specifications (NPN/PNP) and wiring of black and white wires.	
	○	○	Unable to turn ON/OFF Ion discharge stop signal	Input circuit wired incorrectly	Check the input specifications (NPN/PNP) and wiring of pink, gray, yellow and purple wires.	
	○	○	IONHV LED is OFF.	Ion generation stop signal is input	Check whether the ion generation stop signal discharge stop signal (pink line, gray line, yellow line, purple line) are being input.	When performing neutralization, do not input the ion generation stop signal.
	○	○	Ion balance (offset voltage) is unstable	F. G. is not connected	Check whether F. G. (green wire) is connected.	The ionizer neutralizes static electricity relative to ground, ensure the green wire always has a ground connection of less than 100Ω.
	○	○	Poor ion balance (offset voltage)	Adjustment failure of the offset voltage	Check the offset voltage by the measurement equipment such as the charged plate. Check the offset voltage referring to the controller ion balance display.	Adjust offset voltage referring to 4-4-4. Adjustment mode of Offset Voltage
	○	○	NDL LED is ON.	1) Dust or dirt on the emitter 2) Wearing or breakage of the emitter.	Examine the emitter tip with a magnifier. Examine the emitter tip with a magnifier.	1) If dust or dirt is found on the emitter, clean the emitter referring to [9. Maintenance]. 2) If the emitters are worn out or damaged, replace the emitter cartridge.
No/poor neutralizing performance	○	○	Reduction of ion generation	1) Dust or dirt on the emitter 2) Wearing or breakage of the emitter.	1) Dust or dirt is found on the emitter, clean the emitter referring to [9. Maintenance]. 2) The emitters are worn out or damaged, replace the emitter cartridge.	
	○	○	Ionized air is not reaching the workpiece to be neutralized	1) Compressed airflow insufficient 2) Interference with airflow	1) Check that the supply pressure and flow rate are sufficient. 2) Check if an external airflow could interfere with the flow of ionized air from the ionizer.	1) If flow rate is insufficient, check the supply pressure or improve the supply circuit such as air piping. (Refer to 3-1. Installation of Ionizer and 5. Performance for details.) 2) If an external airflow is having an effect, consider shutting off the air flow or otherwise changing the installation so that ionized air is not interfered with.
	○	○	Ionized air is not reaching the workpiece to be neutralized	Ionized air blocked or absorbed by obstacles	Check that there are obstacles which could absorb ions on the path used for supplying ionized air to the workpiece to be neutralized.	Objects between the ionizer and workpiece to be neutralized will block off or absorb the ionized air. Ensure there are no objects between, or near to, the ionizer and workpiece to be neutralized.
	○	○	Ionized air is not reaching the workpiece to be neutralized	Two or more ionizers are installed close to each other	Check if ionized air from nearby ionizers is interfering with that of the main ionizer, by starting and stopping the nearby ionizers and seeing if the performance of the main ionizer is affected.	If ionizers are installed close together, they may interfere with each other, and cause a decrease in performance. Install referring [Safety Instruction, Mounting]

9. Maintenance




Warning

- A high voltage generating circuit is mounted onto this product. Verify that the power supply is OFF when performing maintenance.
 - When compressed air is supplied to the product, shutoff the supply before performing any maintenance operation.
 - Never disassemble or modify the product, as this can cause loss of product functionality and a risk of electric shock and earth leakage.
 - Do not touch the end of the emitters. They have a sharp end and touching them directly with your fingers may cause injury.
 - Only people who have sufficient knowledge and experience are allowed to clean the emitters.
-
- If this product is used for an extended period of time, contamination such as dust will stick to the emitters, reducing the static neutralization performance.
 - The maintenance detection function is available for the IZT41(-L) and IZT42(-L). When the emitter contamination is detected, clean the emitter.
 - In cases where the maintenance detection function is not used on the IZT41(-L) or IZT42(-L) or IZT40 is used, perform neutralizing performance test and set a maintenance cycle for periodic cleaning.
 - Emitter contamination level is different depending on the installation environment and supply pressure.
 - If the maintenance signal is output upon completion of cleaning the emitter, it may not have been cleaned sufficiently or it may be worn or damaged. If the emitters are worn out or damaged, replace the emitter cartridge.
 - If the emitter is worn out or damaged, the static electricity elimination performance will decrease.

Cleaning procedure of emitter



- It is highly recommended that the emitter cleaning kit (IZS30-M2) is used to clean the emitter needles.
- a. Before cleaning the emitters, shutoff the power and air supply.
 - b. The emitters may be cleaned with the emitter cartridges mounted to the bar or with the cartridges removed from the bar.

Refer to "Removal procedure of emitter cartridge" shown below for instructions on how to remove the cartridges.

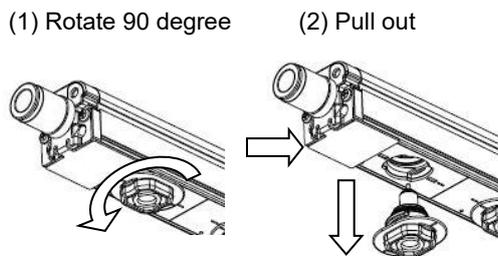


Removal procedure of emitter cartridge


- c. The emitter cleaning kit (IZS30-M2) has felt at one end of the tool and rubber-bonded whetstone at the other end of the tool.

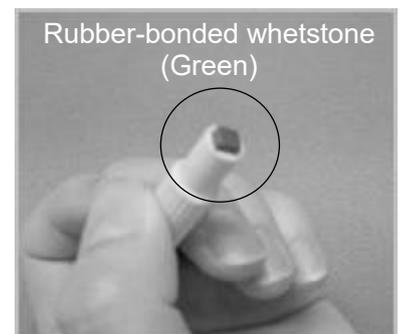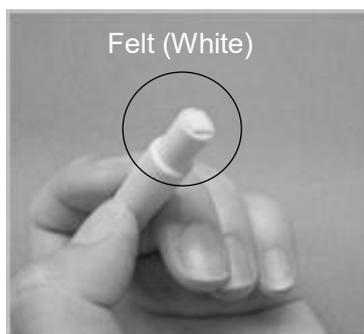

- Saturate the felt end of the emitter cleaning tool with alcohol and insert it into the back of the emitter cartridge. Turn the tool for several rotations to thoroughly remove dirt.
- If it is not possible to thoroughly remove the dirt using the felt end of the cleaning tool, the rubber-bonded whetstone should be used in the same procedure as described for that of the felt end.
- If you do not have a cleaning kit, an alcohol saturated cotton ball can be used for cleaning the electrodes. Use caution to prevent damage to the electrode needles.
- The alcohol used should be reagent ethanol class 1 99.5vol% or more.

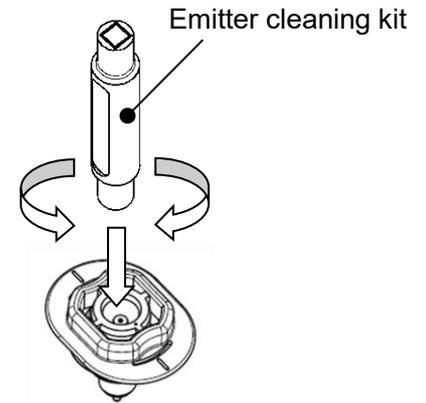

d. When the emitter cartridges are removed for cleaning, remount them to the bar according to the "Mounting procedure of emitter cartridge" shown below. Make sure that the cartridges are securely mounted. If not, the cartridges may become dislodged when compressed air is supplied to the ionizer.

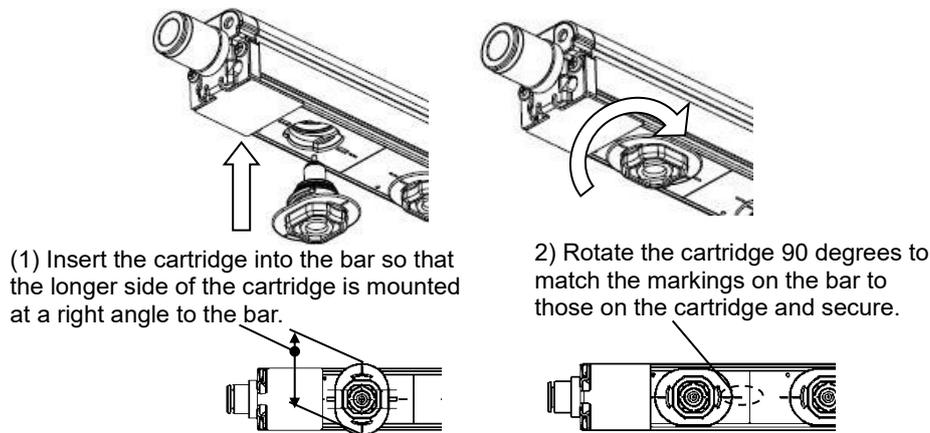

Mounting of the emitter cartridge

e. Confirm that the static neutralization performance is maintained after cleaning and remounting of the cartridges are completed.

Replacement of the felt or rubber-bonded whetstone tips of the emitter cleaning kit


· The felt or rubber-bonded whetstone tips of the emitter cleaning kit should be replaced referring to the procedure below when it becomes dirty, as it will not sufficiently clean the emitter.

a. Remove the felt or the rubber-bonded whetstone tip at the end of the emitter cleaning kit.




Removing the felt

b. Insert a new felt or rubber-bonded whetstone tip into the emitter cleaning kit using the reverse procedure as the removal. The felt and the rubber-bonded whetstone tips are rectangular, and the inserting orientation is specified. The end of the rubber-bonded whetstone tip will stick out of the emitter cleaning kit end for 1mm. Do not push it in too much.

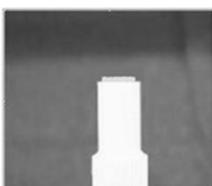

Cleaning kit with felt

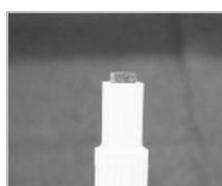

Cleaning kit with rubber-bonded whetstone

Part number for spare felt/ rubber-bonded whetstone tips

Description	Part No.	Qty.
Replacement felt pad	IZS30-A0201	10
Replacement rubber grindstone	IZS30-A0202	1

Revision history

Revision A (November 14, 2019)

Addition of "Energy saving high-efficiency cartridge" (p14, p15, p17, p22, p61 to p71)

Revision B (December 9,2019)

Mass is changed. (p77)

Revision C (March 31,2020)

Recommended screw postscript.(p23,25,31,32), Table 1 revised.(p6), Update ANSI standard number.(p61)

Revision D (August 30 ,2021)

Revised all due to the addition of IO-Link type.

SMC Corporation

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021 JAPAN

Tel: + 81 3 5207 8249 Fax: +81 3 5298 5362

URL <http://www.smcworld.com>

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.
© 2019 SMC Corporation All Rights Reserved