
# **Miniature Fittings Stainless Steel 316 MS** Series RoHS Applicable Tubes: ø3.2, ø4, ø6 Connection Thread: M5, R 1/8

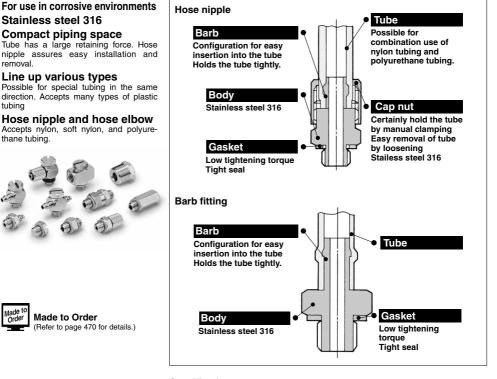

#### Specifications

Applicable tubing material	Nylon	Soft	nylon	Polyurethane	PFA (1)	FEP <sup>(2)</sup>	Modified PTFE <sup>(3)</sup>	Wear resistant polyurethane (4)
Applicable tubing O.D./I.D.	ø4/ø2.5 ø6/ø4	ø3.18/ø2.18	ø4/ø2.5 ø6/ø4	ø3.18/ø2 ø4/ø2.5 ø6/ø4	ø4/ø2.5 ø6/ø4	ø4/ø2.5 ø6/ø4	ø4/ø2.5 ø6/ø4	ø4/ø2.5 ø6/ø4
Fluid				Air, N2, W	ater (5, 6, 7)			
Maximum operating pressure (at 20°C)	1.5 MPa	1 N	1Pa	0.8 MPa	1 MPa	1.5 MPa	1.4 MPa	0.8 MPa
Ambient and fluid temperature		Ţ	5 to 60°C,	Water: 0	to 40°C (N	lo freezing	g)	
Connection size		M5, R1/8				M5		
Thread		JIS B0205 (Metric fine thread) JIS B0203 (Taper thread for piping						

Note 1), Note 2), Note 3), Note 4) Applicable only for hose nipple type.

Note 5) Barb fitting, barb elbow and barb tee are not compatible with water.

Note 6) Deionized water is not recommended for use as it may affect the material used in the fittings. In addition, it is known to degrade the water quality.

Note 7) As the universal nipple comes with grease, it cannot be used when N2 is used as clean, dry air.

#### **Principal Parts Material**

Madarial	Body	Stainless steel 316
Material	Gasket	PVC, Nylon 66, GF30%

tubing



# Model

Model	Description	Applicati	on	Note
MS-5AU-3	Barb fitting for soft tube	For soft nylor	n tube	ø3.18/ø2.18 x M5
M3-5AU-3		For polyuretha	ane tube	ø3.18/ø2 x M5
MS-5AU-4		For soft nylor		ø4/ø2.5 x M5
MS-5AU-6	P.468	polyurethane	tube	ø6/ø4 x M5
MS-5ALHU-3	Barb elbow for soft tube	For soft nylon tube	ud axis	ø3.18/ø2.18 x M5
MS-SALHU-S		For polyurethane tube	d the stu	ø3.18/ø2 x M5
MS-5ALHU-4	P	For soft nylon and	Body rotates at $360^\circ$ around the stud axis	ø4/ø2.5 x M5
MS-5ALHU-6	P.468	polyurethane tube	Body rotates	ø6/ø4 x M5
MS-5H-4	Hose nipple	For nylon, soft nylon, and polyurethane tube		ø4/ø2.5 x M5
MS-5H-6	P.468			ø6/ø4 x M5
MS-5HLH-4	Hose elbow	<ul> <li>For nylon, s nylon, and polyurethar</li> </ul>		ø4/ø2.5 x M5
MS-5HLH-6	P.468	<ul> <li>Body rotate 360° aroun stud axis</li> </ul>		ø6/ø4 x M5


Model	Description	Applicat	ion	Note
MS-5UL	Universal elbow P.468	Body rotates around the stu		M5 female x M5 male
MS-5UT	Universal tee P.468	Body rotates around the stu		M5 female x M5 female x M5 male
MS-5B	Bushing P.469	For reducing female to M5		R 1/8 x M5 female
MS-5P	Plug P.469	Use to plug M5 port.	unused	
MS-5J	P.469	Solid piece fitting up fro piece	M5 male x M5 female	
MS-5N	P.469	Fitting to workpiece and fitting to fitting connection		M5 male x M5 male
MS-5UN	P.469	Body rotates at 360° around the stud axis		M5 male x M5 male
MS-5ATHU-3	Barb tee for soft tube	For soft nylon tube	ud axis	ø3.18/ø2.18 x M5
		polyurethane tube	d the stu	ø3.18/ø2 x M5
MS-5ATHU-4		For soft nylon and	Body rotates at $360^\circ$ around the stud axis	ø4/ø2.5 x M5
MS-5ATHU-6	P.469	polyurethane tube	Body rotates (	ø6/ø4 x M5

# **MS** Series

### Barb Fitting for Soft Tube: MS-5AU-3/4/6




Model	С	øD	L	Effective area (mm <sup>2</sup> )	Weight (g)
MS-5AU-3	4.5	1.6	11.5	1.7	1.4
MS-5AU-4	5	1.8	12	2.1	1.5
MS-5AU-6	7	2.5	14	4.0	1.7

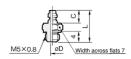

## Barb Elbow for Soft Nylon: MS-5ALHU-3/4/6

đ	P	
(	7	F


Model	A	с	øD	L	Effective area (mm²)	Weigh (g)
MS-5ALHU-3	8	4.5	1.6	11.8	1.1	3
MS-5ALHU-4	8.8	5	1.8	12.6	1.4	3.1
MS-5ALHU-6	10.8	7	2.5	14.6	2.4	3.7

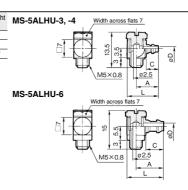

#### Hose Nipple: MS-5H-4/6


.

Model	в	øD	L	Е	øF	М	Effective area (mm²)	Weight (g)
MS-5H-4	7	1.8	15.5	7	6.5	5	2.1	2.5
MS-5H-6	8	2.5	16.5	8	8.5	6	4.0	3.7

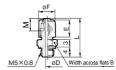

G

#### Hose Elbow: MS-5HLH-4/6

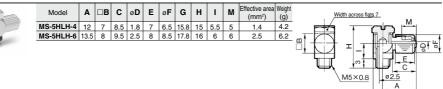


#### Universal Elbow: MS-5UL Universal Tee: MS-5UT Width across flats 7 Width across flats 7 M5×0.8 2×M5×0.8 11.8 80.00 ٢ ыţ in the M5×0.8 M5×0.8 c ÷ m Ø6.8 ø6.8 Effective area: 2.4 mm<sup>2</sup> Weight: 4.5 g Effective area: 2.4 mm<sup>2</sup> Weight: 4.5 g



# Miniature Fittings **MS** Series


### **Bushing: MS-5B**



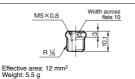

### **Extension Fitting: MS-5J**



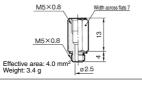


#### Barb Tee for Soft Tube: MS-5ATHU-3/4/6


Model	A1	A2	С	øD	Effective area (mm²)	Weight (g)
MS-5ATHU-3	8	8.3	4.5	1.6	1.1	3.4
MS-5ATHU-4	8.8	8.8	5	1.8	1.4	3.6
MS-5ATHU-6	10.8	10.8	7	2.5	2.4	4.2



#### MS-5ATHU-3, -4 Width across flats 7

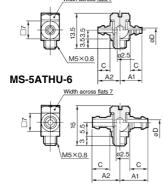


## Universal Nipple: MS-5UN

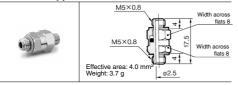

## Plug: MS-5P



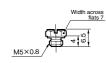

Weight: 1.2 g

#### Nipple: MS-5N



MS Series Made to Order Specifications



Please contact SMC for detailed dimensions, specifications and lead times.

# 1 Gasket Material Modification

Symbol	Specifications				
	Gasket materia	: Stainless steel 304, NBR			
X83	Applicable thread	Gasket part no.			
	M5	M-5G2			
	Gasket material: Stainless steel 316, Special FKM				
X112	Applicable thread	Gasket part no.			
	M5	M-5G3			

Suffix "-X83" to the end of part number. Example) MS-5AU-4-X83

# **Spare Parts**

Description	Part no.	Applicable thread	Material	Applicable model
	M-5G1		PVC	—
	M-5G2		Stainless steel 304, NBR	_
	M-5G3		Stainless steel 316, Special FKM	—
Gasket	M-5GH	M5	Nylon 66, GF30%	MS-5ALHU-6 MS-5HLH-4 MS-5HLH-6 MS-5ATHU-6
Con put	MS-5-4-P01	_	Stainless steel 316	MS-5H-4 MS-5HLH-4
Cap nut	MS-5-6-P01	_	Stainless steel 316	MS-5H-6 MS-5HLH-6

# **APrecautions**

Be sure to read this before handling the products.
 Refer to page 11 for safety instructions and pages 14 to 18 for fittings and tubing precautions.

# Tightening of M5 Thread

# ▲Caution

L.

1. Tighten by hand, and give it an additional rotation with a wrench.

Please check the number of tightening revolutions using the table below. If tightened excessively, thread portion may be demaged and gasket may be deformed. This will cause air leakage. On the contrary, if tightened insufficiently, thread may loosen causing air leakage.

Thread	Model	Number of tightening rotations			
	MS-5AU-				
	MS-5H-				
	MS-5P	Annual 1/C to 1/4 untation Note)			
	MS-5J	Approx. 1/6 to 1/4 rotation Note)			
	MS-5N				
M5	MS-5UN				
	MS-5ALHU-				
	MS-5HLH-				
	MS-5ATHU-	Approx. 1/2 rotation Note)			
	MS-5UL				
	MS-5UT				

Note) As a guideline, the tightening torque should be 1 to 1.5 N·m.

#### Use of Tube with Hose Nipple

# A Caution

I. Cut the tube perpendicularly to the tube axis to a little longer length than required (use tube cutter "TK-1", "TK-2", "TK-3", "TK-5" or "TK-6").

. \_ \_ \_ -

- 2. Pass the tube through the cap nut.
- 3. Push the tube until it comes to the end of the barb portion, or it may cause air leakage or hose releasing.
- 4. Tighten the cap nut firmly by hand on the fitting.

### Use of Tube with Barb Fitting

#### ▲ Caution

- Cut the tube perpendicularly to the tube axis to a little longer length than required (use tube cutter "TK-1", "TK-2", "TK-3", "TK-5" or "TK-6").
- Push the tube until it comes to the end of the barb portion, or it may cause air leakage or release hose.