
# Compact Cylinder with Solenoid Valve/Guide Rod Type


# **CVQM** Series

## ø32, ø40, ø50, ø63

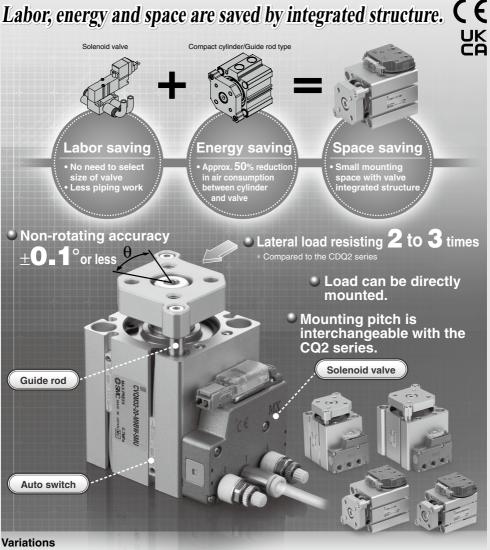


Guide rod configuration with improved lateral load resistance and non-rotating accuracy

- Allowable lateral load of the plate is 2 to 3 times better than the CDQ2 series.
- Plate non-rotating accuracy  $\pm 0.1^{\circ}$

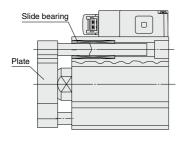


Small 2-color indicator solid state auto switch can be mounted.

• A round slot for mounting small auto switches is provided on 3 surfaces.

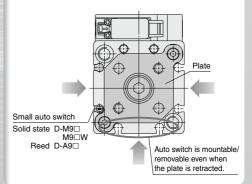


#### Height comparison (Dimensional difference: C)

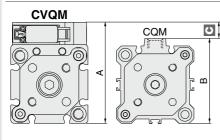


			(mm)
Bore size	A	В	С
32	59	49.5	9.5
40	67	57	10
50	83	71	12
63	97	84	13

#### Mounting example

- Two ways of mounting are possible.
- Mounting pitch is interchangeable with the CQ2 series.

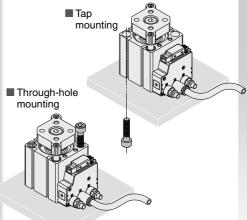

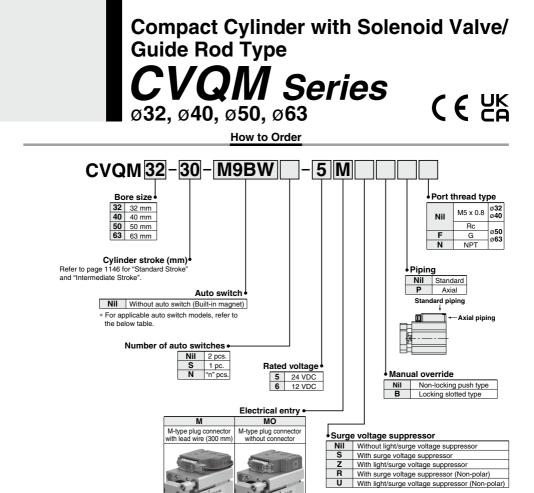

\* For lead wire lengths other than 300 mm.

refer to the plug connector lead wire. (Page 1149)

#### Applicable Auto Switches/Refer to pages 1341 to 1435 for detailed auto switch specifications

- APP	Applicable Auto Switches/Relef to pages 1341 to 1435 for detailed auto switch specifications.																							
			Ţ,			DC AC		Load voltage Auto switch model		Lead wire length (m)*				Durantinad	Applicable									
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)				Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	Pre-wired connector	Applic									
				3-wire (NPN)	= 1/ 10 1/		534 4034			M9NV	M9N	•	•	•	0	0	IC circuit							
				3-wire (PNP)		5 V, 12 V	5 V, 12 V		M9PV	M9P	•	٠	٠	0	0	IC circuit								
~ ~						2-wire	12 V	-	12 V	12 V	M9	M9BV	M9B	۲	•	•	0	0	-					
ritc	Diagnostic indication			3-wire (NPN)	24 V 5 V, 12V 12 V	24 V 12 V					5 V 12V	E V 10V	E V 10V	5 V 12V	5 V 12V	5 V 12V	5 V 12V	M9NWV	M9NW	۲		•	0	0
d s s v	indication (2-color )	Grommet	Yes	3-wire (PNP) 2			V 5 V, 12V	V 5 V, 12 V	24 V 3 V, 12 V	-	M9PWV	M9PW	•	•	•	0	0	IC CITCUIT	Relay, PLC					
Solid auto s	(indicator)			2-wire					12 V 5 V, 12V				M9BWV	M9BW	•	•	•	0	0	-	1 20			
ۍ رو	water			3-wire (NPN)								E V 10V	5 V 12V	5 V 12V	E V 10V	E V 10V	EV 10V	EV 10V	E V 10V	101/	M9NAV*1	M9NA*1	0	0
	resistant (2-color \			3-wire (PNP)		5 V, 12V		M9PAV*1	M9PA*1	0	0	•	0	0	IC CITCUIT									
	(indicator)			2-wire		12 V		M9BAV*1	M9BA*1	0	0	•	0	0	-									
tch			Yes	3-wire (NPN equivalent)	—	— 5 V	—	A96V	A96	•	—	٠	—	—	IC circuit	—								
Reed auto switch		Grommet	res	2-wire	24 V	12 V	100 V	A93V*2	A93	•	٠	٠	٠	—	_	Relay,								
auto			_	∠-wire	24 V	5 V, 12 V	100 V or less	A90V	A90	۲	—	•	—	—	IC circuit	PLC								

\*1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

M9NWM

M9NWL

M9NW7

\*2 1 m type lead wire is only applicable to D-A93

\* Lead wire length symbols: 0.5 m ..... ··· Nil (Example) M9NW

1 m ···· ... M

3 m ----- L 5 m ----- 7 5 m .....

\* Solid state auto switches marked with "O" are produced upon receipt of order. \* For details about auto switches with pre-wired connector, refer to pages 1410 and 1411.


\* Auto switches are shipped together, (but not assembled).



# **≜**Caution

- 1. Do not separate the cylinder from the valve.
- 2. Do not disassemble or modify the guide rod.
- 3. This product should not be used as a stopper.

#### Symbol



#### **Standard Stroke**

		(mm)
Bore size	Standard stroke	
<b>32</b> *1	5, 10, 15, 20, 25, 30, 35 40, 45, 50, 75, 100	
40	5, 10, 15, 20, 25, 30, 35 40, 45, 50, 75, 100	
<b>50</b> *2	10, 15, 20, 25, 30, 35 40, 45, 50, 75, 100	
63	10, 15, 20, 25, 30, 35 40, 45, 50, 75, 100	

\*1 The outline dimensions for 5 mm stroke will be the same as those for 10 mm stroke.

\*2 The outline dimensions for 10 mm stroke will be the same as those for 15 mm stroke.

#### Theoretical Output

		-		
	_			Unit: N
Bore size	Operating	Operatir	ng pressur	e (MPa)
(mm)	direction	0.3	0.5	0.7
32	IN	181	302	422
32	OUT	241	402	563
40	IN	317	528	739
40	OUT	377	628	880
50	IN	495	825	1150
50	50 OUT		982	1370
	IN	840	1400	1960
63	OUT	936	1560	2184

#### **Cylinder Specifications**

Bore size (mm)	32	40	50	63			
Action	Double acting, Single rod						
Fluid		Air (No	n-lube)				
Proof pressure		1.0	MPa				
Maximum operating pressure		0.7	MPa				
Minimum operating pressure		0.15	MPa				
Ambient and fluid temperature		-10 to 50°C	(No freezing)				
Stroke tolerance		0 to +1	.0 mm*				
Mounting	Through-hole/Both ends tapped						
Piston speed	50 to 500 mm/s 50 to 300 mm/s						
Cushion	Rubber bumper						

\* Stroke length tolerance dose not include the amount of bumper change.

#### Valve Specifications

Type of actuation	2-position single
Manual override	Non-locking push type/Locking slotted type
Pilot exhaust	Main/Pilot valve common exhaust type
Mounting orientation	Unrestricted (based on cylinder mounting orientation)
Enclosure	Dustproof

#### **Solenoid Specifications**

Electrical entry		M-type plug connector		
Coil rated voltage DC		24, 12 (V)		
Allowable voltage range Note)		±10% of the rated voltage		
Power consumption	DC	0.35 (With light: 0.4) W		
Surge voltage suppressor		Diode (Non-polar: Varistor)		
Indicator light		LED		

Note) The S and Z types of surge voltage suppressor have an internal circuit allowing voltage drop, so use within the following allowable voltage range.

S, Z type 24 VDC: -7% to +10% 12 VDC: -4% to +10%

#### Intermediate Stroke

Part no.	Refer to "How to Order" for standard model numbers. (Previous page)					
	Spacers are installed in a cylinder with standard stroke.					
Description	Bore size	Description				
Description	32	Available in 1 mm stroke increments				
	40, 50, 63	Available in 5 mm stroke increments				
	Bore size	Stroke range				
Stroke range (mm)	32	1 to 99				
(1111)	40, 50, 63	5 to 95				
Example Part no.: CVQM32-95- A spacer 5 mm in width is installed in standard cylinder CVQM32-100- B dimension: 133 mm						
	•					

#### Weight

												Unit (g)
Bore size		Stroke										
(mm)	5	10	15	20	25	30	35	40	45	50	75	100
32	349	344	368	393	417	441	465	489	514	538	660	782
40	435	464	492	520	548	577	605	633	661	690	828	966
50	_	834	865	908	952	995	1039	1081	1125	1168	1386	1603
63	—	1088	1139	1190	1241	1292	1343	1394	1445	1496	1751	2006


1146



#### Mounting Bolt for CVQM

Mounting: Be sure to use it as through-hole when mounting. Refer to the following for ordering procedures. Order the actual number of bolts that will be used.

Example) CQ-M5x45L 4 pcs.



			(mm)
Cylinder model	C	D	Mounting bolt part no.
CVQM32- 5		45	CQ-M5 x 45L
- 10		45	x 45L
- 15		50	x 50L
- 20		55	x 55L
- 25		60	x 60L
- 30	9	65	x 65L
- 35	9	70	x 70L
- 40		75	x 75L
- 45		80	x 80L
- 50		85	x 85L
- 75		110	x 110L
-100		135	x 135L
CVQM40- 5		45	CQ-M5 x 45L
- 10		50	x 50L
- 15		55	x 55L
- 20		60	x 60L
- 25		65	x 65L
- 30	7.5	70	x 70L
- 35	1.5	75	x 75L
- 40		80	x 80L
- 45		85	x 85L
- 50		90	x 90L
- 75		115	x 115L
-100		140	x 140L

			(mm)
Cylinder model	С	D	Mounting bolt part no.
CVQM50- 10		60	CQ-M6 x 60L
- 15		60	x 60L
- 20		65	x 65L
- 25		70	x 70L
- 30		75	x 75L
- 35	12.5	80	x 80L
- 40		85	x 85L
- 45		90	x 90L
- 50		95	x 95L
- 75		120	x 120L
-100		145	x 145L
CVQM63- 10		60	CQ-M8 x 60L
- 15		65	x 65L
- 20		70	x 70L
- 25		75	x 75L
- 30		80	x 80L
- 35	14.5	85	x 85L
- 40		90	x 90L
- 45		95	x 95L
- 50		100	x 100L
- 75		125	x 125L
-100		150	x 150L

#### **Plate Non-rotating Accuracy**

Non-rotating accuracy without load is designed to be same or less than the figures shown in the table below at the retracted cylinder end (plate).

Bore size (mm) Non-rotating accurac			
32 to 63	±0.1°		
	+θ -θ		

#### Plate Allowable Rotational Torque


Make sure to operate strictly within the allowable rotation torque range to the plate.

Operation outside of this range may result in shorter service life or damage to the device.



Bore size		Cylinder stroke (mm)										
(mm)	5	10	15	20	25	30	35	40	45	50	75	100
32	0.66	0.59	0.53	0.49	0.45	0.42	0.39	0.36	0.34	0.32	0.25	0.20
40	1.06	0.96	0.88	0.81	0.75	0.70	0.65	0.61	0.58	0.55	0.43	0.36
50	-	1.70	1.56	1.45	1.35	1.26	1.19	1.12	1.06	1.01	0.80	0.67
63	—	3.90	3.62	3.37	3.15	2.96	2.80	2.65	2.51	2.39	1.92	1.61

#### Plate Allowable Lateral Load

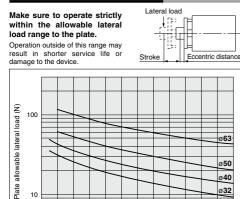

40


50 60 70 80 90

Stroke + Eccentric distance (mm)

#### Allowable Kinetic Energy


### Make sure to operate strictly within the allowable range of the load mass and maximum speed.

Operation outside of this range may cause excessive impact, which may result in the damage to the device.

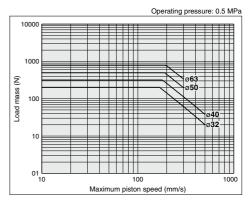

#### Relationship between Number of Needle Rotations and Piston Speed

100 110 120

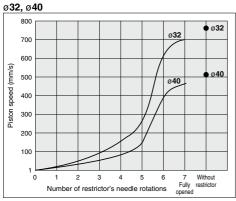

Restrictor: ASN2-M5

0 10 20 30

\* The above piston speed is for reference purpose only.

ø**50,** ø63 800 ø**50** 700 600 ø63 speed (mm/s) 500 ø**50** 400 Piston ( ø63 300 200 100 0 10 Without 0 1 2 з 4 5 6 7 8 9 Fully restrictor Number of restrictor's needle rotations opened Restrictor: ASN2-01

Pressure: 0.5 MPa

Mounting orientation: Horizontal, No-load, Piston extended \* The above piston speed is for reference purpose only.


#### <Exhaust restrictor with silencer>

-	Applicable bore size (mm)	Model	Port size	Effective area (mm <sup>2</sup> )	Weight (g)
4.1.4	32, 40	ASN2-M5	M5 x 0.8	1.8	5
	50, 63	ASN2-01	1/8	3.6	17

Pressure: 0.5 MPa

Mounting orientation: Horizontal, No-load, Piston extended

#### Construction

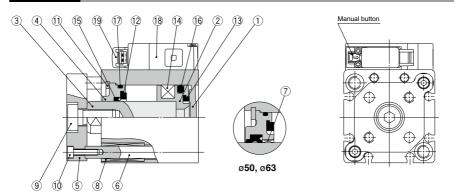


#### **Component Parts**

No.	Description	Material	Note
1	Cylinder tube	Aluminum alloy	Hard anodized
2	Piston	Aluminum alloy	Chromated
3	Piston rod	Carbon steel	Hard chrome plated
4	Collar	Alluminum alloy casted	ø50, ø63, Chromated, painted
4	Collar	Aluminum alloy	ø32, ø40, Anodized
5	Plate	Aluminum alloy	Anodized
6	Guide rod	Stainless steel	
7	Bushing	Bearing alloy	ø50, ø63
8	Bushing	Oil impregnated sintered alloy	
9	Hexagon socket head bolt	Carbon steel	Nickel plated
10	Hexagon socket head bolt	Carbon steel	Nickel plated
11	Retaining ring	Carbon tool steel	Phosphate coated
12	Bumper A	Urethane	
13	Bumper B	Urethane	
14	Magnet	—	
15	Rod seal	NBR	
16	Piston seal	NBR	
17	Gasket	NBR	
18	Solenoid valve	_	
19	Pilot valve	_	

#### Length of plug connector lead wire

The standard length of the plug connector with a lead wire is 300 mm, but other lengths are available as follows.

#### How to Order Pilot Valve Assembly

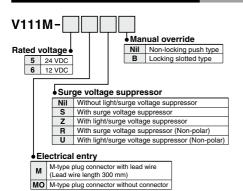

#### How to Order Connector Assembly

With lead wire: **SY100-30-4A-**

	Lea	d wire	e lengthe
Nil	300 mm	20	2000 mm
6	600 mm	25	2500 mm
10	1000 mm	30	3000 mm
15	1500 mm	50	5000 mm


#### How to Order

Indicate the part number of the connector assembly in addition to the part number of the solenoid valve without the connector for the plug connector. Example) Lead wire length 2000 mm


When ordering cylinder with valve CVQM32-30-M9B-5MOZ SY100-30-4A-20



#### Dimensions

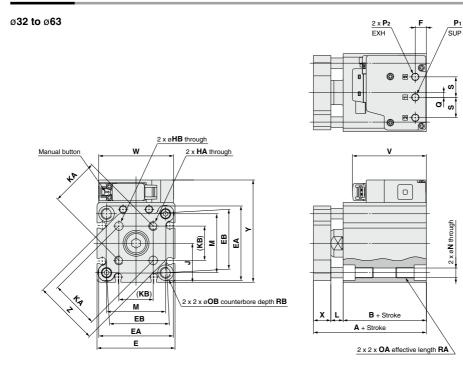

Axial piping



Bore size (mm)	F1
32	30
40	34.5
50	43.5
63	51


Bore size (mm)	Stroke range (mm)	Α	в	Е	EA	ЕВ	F	НА	нв	J	KA	кв	L	м	N	OA
32	5 to 100	50 Note 1)	33 Note 1)	45	43	34.4	6.5	M5 x 0.8	5 +0.2	22.5	28 ±0.2	19.8	7	34	5.4	M6 x 1
40	5 to 100	56.5	39.5	52	50	41.4	6.5	M5 x 0.8	5 +0.2	26	33 ±0.2	23.3	7	40	5.4	M6 x 1
50	10 to 100	60.5 Note 2)	40.5 Note 2)	64	62	53.4	7.5	M6 x 1	6 <sup>+0.2</sup>	32	42 ±0.2	29.7	8	50	6.6	M8 x 1.25
63	10 to 100	66	46	77	74	59.6	7.5	M6 x 1	6 <sup>+0.2</sup>	38.5	50 ±0.2	35.4	8	60	9	M10 x 1.5

Note 1) The dimensions (A + stroke) and (B + stroke) for 5 mm stroke will be the same as those for 10 mm stroke. Note 2) The dimensions (A + stroke) and (B + stroke) for 10 mm stroke will be the same as those for 15 mm stroke.

Bore size (mm)	Stroke range (mm)	ов	P1	P <sub>2</sub>	Q	RA	RB	s	v	w	х	Y	z
32	5 to 100	9	M5 x 0.8	M5 x 0.8	2.5	10	7	12	43	43.5	10	59	38
40	5 to 100	9	M5 x 0.8	M5 x 0.8	2.5	10	7	12	43	43.5	10	67	46
50	10 to 100	11	Rc, G, NPT1/8	Rc, G, NPT1/8	3.5	14	8	17	54	63	12	83	58
63	10 to 100	14	Rc, G, NPT1/8	Rc, G, NPT1/8	3.5	18	10.5	17	54	63	12	97	69
1150			-	le l	<b>S</b> SN	/IC							

# CVQM Series Auto Switch Mounting

#### Auto Switch Proper Mounting Position (Detection at Stroke End) and Mounting Height

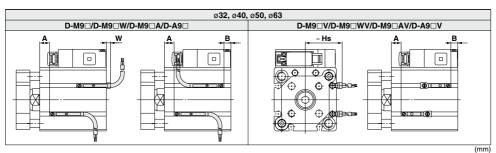

Bore size (mm)				D-M9□V, D-M9□WV D-M9□AV			D-M9□A				D-A9	) []	D-A9□V		
(((((((((((((((((((((((((((((((((((((((	Α	в	w	Α	В	Hs	Α	в	w	Α	В	w	A	В	Hs
32	12 [17]	9	1	12 [17]	9	29	12 [17]	9	3	8 [13]	5	-3 (-0.5)	8 [13]	5	27
40	16	11.5	-1.5	16	11.5	32.5	16	11.5	0.5	12	7.5	-5.5 (-3)	12	7.5	30.5
50	14 <19>	14.5	-4.5	14 <19>	14.5	42	14 <19>	14.5	-2.5	10 <15>	10.5	-8.5 (-6)	10 <15>	10.5	36.5
63	16.5	17.5	-7.5	16.5	17.5	42	16.5	17.5	-5.5	12.5	13.5	-11.5 (-9)	12.5	13.5	40

[ ]: Values for 5 mm stroke with ø32

< >: Values for 10 mm stroke with ø50


( ): Values for the D-A93

\* The negative indication in the table for W shows the mounting inside the cylinder body.

\* For the actual setting, check the operating condition of the auto switch and adjust.

#### Auto Switch Mountable Surface, Mounting Groove Number (Direct Mounting)

The below table shows which surfaces of the cylinder an auto switch can be mounted on, and the number of grooves for the direct mounting type auto switch.



er a	an auto switch can be	e mounted on,	and the num	ber of grooves	s for the direct
	Auto switch model	D-M9□(	(V), M9⊟W(V	'), M9□A(V),	A9□(V)
	Bore size (mm)	A (Mounting groove number)	B (Mounting groove number)	C (Mounting groove number)	D (Mounting groove number)
	32	—	(2)	(2)	(2)
	40	—	(2)	(2)	(2)
	50	—	(2)	(2)	(2)
	63	_	(2)	(2)	(2)

Auto Switch Mounting

#### **Operating Range**

				(mm)						
Auto switch model		Bore size								
Auto switch model	32	40	50	63						
D-M9□, D-M9□V D-M9□W, D-M9□WV D-M9□A, D-M9□AV	6	6	7	7.5						
D-A9□, D-A9□V	9.5	9.5	9.5	11.5						

 Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately ±30% dispersion)

There may be the case it will vary substantially depending on the ambient environment.

#### Minimum Stroke for Auto Switch Mounting

# Refer to page 1453.

(mm)

Bore size (mm)	Number of auto switches mounted	D-M9□	D-M9⊡V		D-M9□WV D-M9□AV	D-A9□	D-A9⊡V
32*1, 40	1	10 (5)	5	15 (10)	10	10 (5)	5
50 *2, 63	2	10 (5)	5	15	15	10	10

\*1 The outline dimensions for 5 mm stroke will be the same as those for 10 mm stroke.

\*2 The outline dimensions for 10 mm stroke will be the same as those for 15 mm stroke.

\*3 (): Mountable minimum stroke when the auto switch protrudes from the cylinder body end face and does not interfere with the space for the lead wire. (The figure on the right) Order separately for auto switches.





# **CVQM** Series Specific Product Precautions

Be sure to read this before handling the products. Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.


ÌSMC

#### Mounting

## **Warning**

1. Do not put hands or fingers between the plate and cylinder tubing.

Never put hands or fingers in the gap between the plate and cylinder tubing when the piston rods are retracted. Due to the heavy power output of the cylinder, failure to comply with this directive may result in trapping and subsequent injury to the human body.



## **≜**Caution

1. Do not scratch or dent the sliding parts of the piston rod and guide rods.

Damage to seals may cause air leakage or faulty operation.

2. Mounting of workpiece

When screwing a bolt onto the threaded portion of the plate surface, be certain that the guide rods are fully extended to the end. Also, be careful that the tightening torque is not applied to the guide rods.

3. Make sure that the cylinder mounting surface has a flatness of 0.02 mm or less.

When mounting the cylinder body or work pieces on the plate, improper flatness of the mounting surface may cause malfunctions.

When the flatness of a workpiece is not sufficient, attaching a shim such as a flat washer, etc., at the place of a mounting bolt between the workpiece and the plate may reduce the affect on the operation. Others

## **A** Caution

- 1. Do not separate the cylinder from the valve.
- 2. This product should not be used as a stopper.
- 3. Do not disassemble and modify the product.
- 4. For example, in a pressing application, the cylinder thrust is directly applied to the plate, therefore, make sure that the pressing force is applied to the plate directly on the extended axial line of a rod. (Below figures)

