

# Refrigerated Air Dryer

Series **IDFB□E**

For use in North, Central & South America

## Protect Pneumatic Equipment from Moisture!



An air dryer removes the vapor from the moist compressed air delivered by the compressor, and prevents it from causing the pneumatic equipment to fail.

### Effects of moisture on equipment

Malfunctoning of valves and actuators caused by dripping grease

Decomposition of auto drain caused by rusting inside pipes

Generation of water droplets

Refrigerant **R134a(HFC), R407C(HFC)**  
Coefficient of destruction for ozone is zero.

Improved corrosion resistance with the use of stainless steel, plate type heat exchanger (IDFB4E to 75E)

UL certified product

Power supply voltage:

Single-phase  
115 VAC (60 Hz)  
230 VAC (60 Hz)  
Three-phase  
460 VAC (60 Hz)

Series	Rated inlet condition	Air flow capacity SCFM (m <sup>3</sup> /h [ANR])			Port size
		37°F(2.8°C)	45°F(7.2°C)	50°F(10°C)	
<b>IDFB3E</b>	100°F (37.8°C) 100psi (0.7MPa)	10(17)	11(19)	12(20)	NPT3/8
<b>IDFB4E</b>		15(25)	16(27)	17(28)	NPT1/2
<b>IDFB6E</b>		25(43)	26(45)	28(47)	NPT3/4
<b>IDFB8E</b>		41(70)	43(74)	45(77)	
<b>IDFB11E</b>		59(100)	62(106)	65(110)	NPT1
<b>IDFB15E</b>		71(120)	80(136)	86(147)	
<b>IDFB22E</b>		107(182)	120(205)	130(221)	NPT1 1/2
<b>IDFB37E</b>		161(273)	173(294)	181(308)	
<b>IDFB55E</b>		226(384)	258(438)	297(504)	NPT2
<b>IDFB75E</b>		300(510)	353(600)	406(690)	

Note) Air flow capacity for each dew point is indicated.



- HAA
- HAW
- AT
- IDF
- IDU
- IDFA
- IDFB**
- IDH
- ID
- IDG
- IDK
- AMG
- AFF
- AM
- AMD
- AMH
- AME
- AMF
- ZFC
- SF
- SFD
- LLB
- AD□
- GD

## 1. Standard Products

### Series IDFB

Standard inlet air type

Rated inlet air temperature:  
100°F (37.8°C)



Model	Air flow capacity SCFM (m <sup>3</sup> /h [ANR])			Refrigerant	Rated inlet condition	Port size
	Outlet air pressure dew point <sup>Note</sup>					
	37°F (2.8°C)	45°F (7.2°C)	50°F (10°C)			
<b>IDFB3E</b>	10 (17)	11 (19)	12 (20)	R134a (HFC)	100°F (37.8°C) 100 psi (0.7 MPa)	NPT 3/8
<b>IDFB4E</b>	15 (25)	16 (27)	17 (28)			NPT 1/2
<b>IDFB6E</b>	25 (43)	26 (45)	28 (47)			NPT 3/4
<b>IDFB8E</b>	41 (70)	43 (74)	45 (77)			
<b>IDFB11E</b>	59 (100)	62 (106)	65 (110)			NPT 1
<b>IDFB15E</b>	71 (120)	80 (136)	86 (147)			
<b>IDFB22E</b>	107 (182)	120 (205)	130 (221)			NPT 1 1/2
<b>IDFB37E</b>	161 (273)	173 (294)	181 (308)			
<b>IDFB55E</b>	226 (384)	258 (438)	297 (504)	R407C (HFC)	NPT 2	
<b>IDFB75E</b>	300 (510)	353 (600)	406 (690)			

Page

**P. 90 to 96**

Note) Air flow capacity for each dew point is indicated.

## 2. Options

Optional specifications	Applicable model	Model (Suffix: Option symbol)
Cool compressed air output	<b>IDFB3E to 11E</b>	<b>IDFB□E-11-A</b>
For medium air pressure (up to 240 psi (1.6 MPa)) (Auto drain bowl: Metal bowl with level gauge)	<b>IDFB6E to 37E</b>	<b>IDFB□E-□-K</b>
With heavy duty auto drain (Suitable for medium air pressure)	<b>IDFB55E, 75E</b>	<b>IDFB□E-46-L</b>
With circuit breaker	<b>IDFB4E to 75E</b>	<b>IDFB□E-□-R</b>
Power supply terminal block connection	<b>IDFB3E to 22E</b>	<b>IDFB□E-11-S</b>
With terminal block for power supply, run & alarm signal and remote operation	<b>IDFB4E to 75E</b>	<b>IDFB□E-□-T</b>
Timer type solenoid valve with auto drain (Suitable for medium air pressure)	<b>IDFB4E to 75E</b>	<b>IDFB□E-□-V</b>

Page

**P. 97, 98**

## 3. Accessory (Option)

Description	Page
Dust-protecting filter set	<b>P. 99</b>

# Series IDFB□E

## Model Selection

The corrected air flow capacity, which considers the user's operating conditions, is required for selecting the air dryer. Please select using the following procedures.

### 1 Read the correction factor.

Obtain the correction factor A to D suitable for your operating condition using the table below.

### IDFB□E Selection Example

Condition	Data symbol	Correction factor <sup>(Note)</sup>	
Inlet air temperature	110°F (43°C)	A	0.82
Ambient temperature	105°F (40.5°C)	B	0.98
Inlet air pressure	75 psi (0.53 MPa)	C	0.95
Air consumption	14 SCFM	—	—

(Note) Values obtained from the table below.

### 2 Calculate the corrected air flow capacity.

Obtain the corrected air flow capacity from the following formula.  
 Corrected air flow capacity = Air consumption ÷ (Correction factor A x B x C)

$$\text{Corrected air flow capacity} = 14 \text{ SCFM} \div (0.82 \times 0.98 \times 0.95) = 18 \text{ SCFM}$$

### 3 Select the model.

Select the model which air flow capacity exceeds the corrected air flow capacity using the specification table. (For air flow capacity, refer to the data D below.)

According to the corrected air flow capacity of 18 SCFM, the **IDFB6E** will be selected because its air flow capacity at 60 Hz is 25 SCFM.

### 4 Option

Refer to pages 97, 98.

### 5 Finalize the model number.

Refer to pages 90, 94.

### 6 Select accessories sold separately.

Refer to page 99.

### Data A: Inlet Air Temperature

Inlet air temperature		Correction factor	
°F	°C	IDFB3E to 37E	IDFB55E, 75E
90	32	1.31	1.08
100	37.8	1.00	1.00
110	43	0.82	0.83
122	50	0.66	0.46

### Data B: Ambient Temperature

Ambient temperature		Correction factor
°F	°C	
77	25	1.24
90	32	1.09
95	35	1.04
100	37.8	1.00
104	40	0.98

### Data C: Inlet Air Pressure

Inlet air pressure		Correction factor
psi	MPa	
75	0.53	0.95
100	0.70	1.00
110	0.76	1.04
120	0.83	1.07
125	0.86	1.09
150	1.03	1.13
175	1.21	1.18
200	1.38	1.22
232	1.60	1.24

### Data D: Air Flow Capacity

Model	Air flow capacity SCFM (m³/h (ANR))										
	IDFB3E	IDFB4E	IDFB6E	IDFB8E	IDFB11E	IDFB15E	IDFB22E	IDFB37E	IDFB55E	IDFB75E	
Outlet air pressure dew point	37°F (2.8°C)	10 (17)	15 (25)	25 (43)	41 (70)	59 (100)	71 (120)	107 (182)	161 (273)	226 (384)	300 (510)
	45°F (7.2°C)	11 (19)	16 (27)	26 (45)	43 (74)	62 (106)	80 (136)	120 (205)	173 (294)	258 (438)	353 (600)
	50°F (10°C)	12 (20)	17 (28)	28 (47)	45 (77)	65 (110)	86 (147)	130 (221)	181 (308)	297 (504)	406 (690)

(Note) In case of "Option A (Cool compressed air output)", the air flow capacity is different. Refer to page 97 for details.

- HAA
- HAW
- AT
- IDF
- IDU
- IDFA
- IDFB
- IDH
- ID
- IDG
- IDK
- AMG
- AFF
- AM
- AMD
- AMH
- AME
- AMF
- ZFC
- SF
- SFD
- LLB
- AD□
- GD


# Refrigerant R134a (HFC) Standard Inlet Air

## Series **IDFB** □ **E**

3E, 4E, 6E, 8E, 11E, 15E

(Inlet air temperature: 100°F [37.8°C])

### How to Order

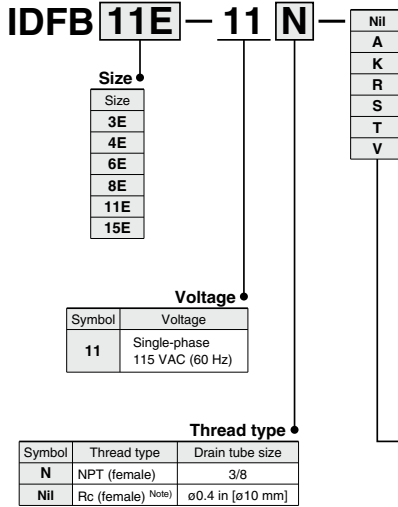

Note) An adapter for converting NPT to Rc is included if the thread symbol is "Nil".

**Table of Options and Available Combinations (Size/Option)**

Symbol <sup>Note 1)</sup>	Nil	A	K	R	S	T	V
Optional specifications <sup>Note 3)</sup>	None	Cool compressed air output	For medium air pressure (Auto drain bowl: Metal case with level gauge)	With circuit breaker	Power supply terminal block connection <sup>Note 2)</sup>	With terminal block for run & alarm signal	Timer type solenoid valve with auto drain (Suitable for medium air pressure)
Size							
3	●	●	—	—	●	—	—
4	●	●	—	●	●	●	●
6	●	●	●	●	●	●	●
8	●	●	●	●	●	●	●
11	●	●	●	●	●	●	●
15	●	—	●	●	●	●	●

Note 1) Enter alphabetically when multiple options are combined. However, the following combination cannot be achieved.

- Combination of R and S (Because S function is also included in R.)
- Combination of S and T (Because S function is also included in T.)
- Combination of K and V (Only one or the other may be attached.)

Note 2) Standard specification is the power cable with plug.

Note 3) Refer to pages 97 and 98 for further information on options.

## Standard Specifications

Specifications		Model					
		IDFB3E	IDFB4E	IDFB6E	IDFB8E	IDFB11E	IDFB15E
Operating conditions (Note 3)	Fluid	Compressed air					
	Inlet air temperature °F (°C)	41 to 122 (5 to 50)					
	Inlet air pressure psi (MPa)	22 (0.15) to 150 (1.0)					
	Ambient temperature °F (°C)	36 to 104 (2 to 40) Relative humidity of 85% or less					
Rated conditions (Note 4)	Air flow capacity SCFM (Note 1)	10 (17)	15 (25)	25 (43)	41 (70)	59 (100)	71 (120)
	Outlet air pressure dew point 37°F (2.8°C)						
	Outlet air pressure dew point 45°F (7.2°C)	11 (19)	16 (27)	26 (45)	43 (74)	62 (106)	80 (136)
	Outlet air pressure dew point 50°F (10°C)	12 (20)	17 (28)	28 (47)	45 (77)	65 (110)	86 (147)
Rated conditions (Note 4)	Operating pressure psi (MPa)	100 (0.7)					
	Inlet air temperature °F (°C)	100 (37.8)					
	Ambient temperature °F (°C)	100 (37.8)					
Electrical characteristics	Power supply voltage (frequency)	Single-phase 115 VAC [voltage fluctuation ±10%] 60 Hz					
	Operating current (A) (Note 5)	2.7	3.0	3.0	3.5	6.5	7.5
	Power consumption (W) (Note 5)	240	260	260	310	550	750
	Applicable circuit breaker capacity (A) (Note 6) (sensitivity current 30 mA)	15					
Condenser		Forced air-cooled					
Refrigerant		R134a (HFC)					
Thread symbol and size	Symbol N	NPT 3/8 (female)	NPT 1/2 (female)	NPT 3/4 (female)		NPT 1 (female)	
	Symbol Nil	Rc 3/8 (female) With Rc conversion adapter	Rc 1/2 (female) With Rc conversion adapter	Rc 3/4 (female) With Rc conversion adapter		Rc 1 (female) With Rc conversion adapter	
Drain tube O.D.	Symbol N	3/8 inch					
	Symbol Nil	10 mm					
Coating color		White 1					
Weight	lbs (kg)	40 (18)	55 (25)	57 (26)	64 (29)	73 (33)	110 (50)
Compliant standards		UL, CSA					

Note 1) ANR is under the conditions of 68°F (20°C) at atmospheric pressure and relative humidity of 65%.

Note 2) Air flow capacity for each outlet air pressure dew point is indicated.

Note 3) The operation range does not guarantee the use with normal air flow capacity.

Note 4) When operating conditions are different from the rated specifications, please select a model in accordance with the Model Selection (Page 89).

Note 5) These values are reference values under rated conditions, and are not guaranteed. Do not use these values for the thermal set values, etc.



Note 6) Product other than the option R is not equipped with an earth leakage breaker. Please purchase an appropriate earth leakage breaker separately.

Note 7) If this equipment suffers a short-term power outage (even if it is only momentary), it may require some time before normal operation resumes, and protective mechanisms may prevent normal operation even after the power supply has been restored.

## Replacement Parts


Model		IDFB3E	IDFB4E	IDFB6E	IDFB8E	IDFB11E	IDFB15E
Auto drain replacement part no. (Note 8)	Thread symbol N	AD38N-Z			AD48N-Z		
	Thread symbol Nil	AD38			AD48		

Note 8) The part number for the auto drain components without including the body part. Body part replacement is impossible.



## Construction Principle (Circuit for Air/Refrigerant)


Humid, hot air coming into the air dryer will be cooled down by a cooler (heat exchanger). Water condensed at this time will be removed from the air by a drain separator (auto drain) and drained out automatically. Air separated from the water will be heated by a re-heater (heat exchanger) to obtain the dried air, which goes through to the outlet side.

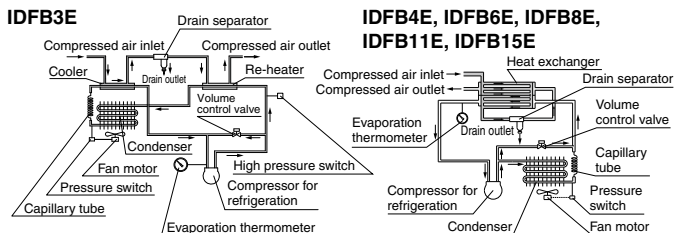

HAA  
HAW  
AT  
IDF  
IDU  
IDFA  
IDFB  
IDH  
ID  
IDG  
IDK  
AMG  
AFF  
AM  
AMD  
AMH  
AME  
AMF  
ZFC  
SF  
SFD  
LLB  
AD  
GD

## Dimensions


### IDFB3E

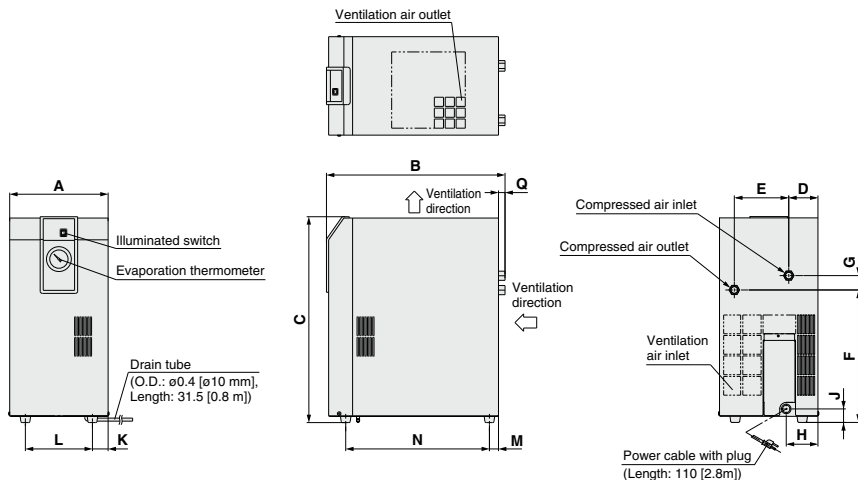

### Dimensions

Model	Port size	A	B	C	D	E	F	G	H	J	K	L	M	N	Q	Unit: inch [mm]
IDFB3E	3/8	8.9 [226]	16.1 [410]	18.6 [473]	2.6 [67]	4.9 [125]	12.0 [304]	1.3 [33]	2.9 [73]	1.2 [31]	1.4 [36]	6.1 [154]	0.8 [21]	13.0 [330]	0.6 [15]	

### IDFB4E to IDFB11E

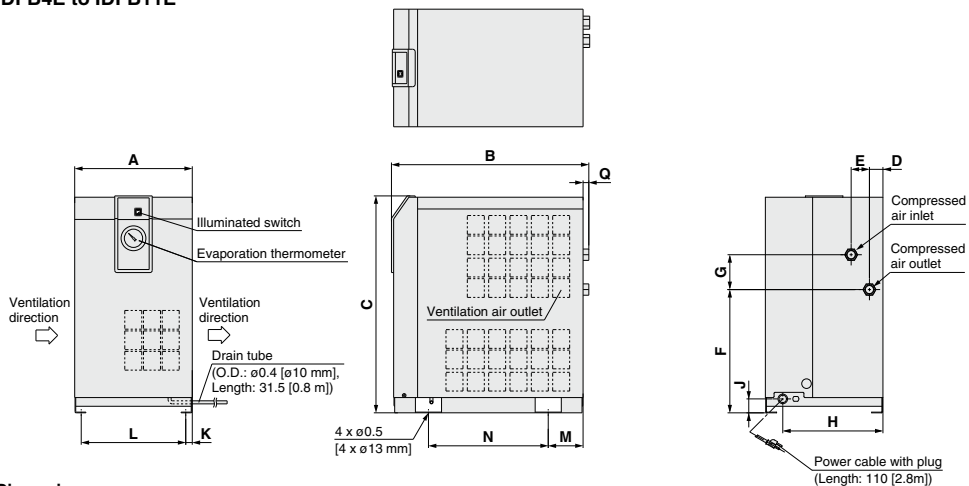


### Dimensions

Model	Port size	A	B	C	D	E	F	G	H	J	K	L	M	N	Q	Unit: inch [mm]
IDFB4E	1/2		17.8 [453]													
IDFB6E			19.6 [498]				11.1 [283]								10.8 [275]	
IDFB8E	3/4	10.6 [270]			1.2 [31]	1.7 [42]		3.1 [80]	9.1 [230]	1.3 [32]	0.6 [15]	9.4 [240]	3.1 [80]		0.5 [13]	
IDFB11E			19.1 [485]	22.4 [568]				14 [355]							11.8 [300]	

**Dimensions**

**IDFB15E**

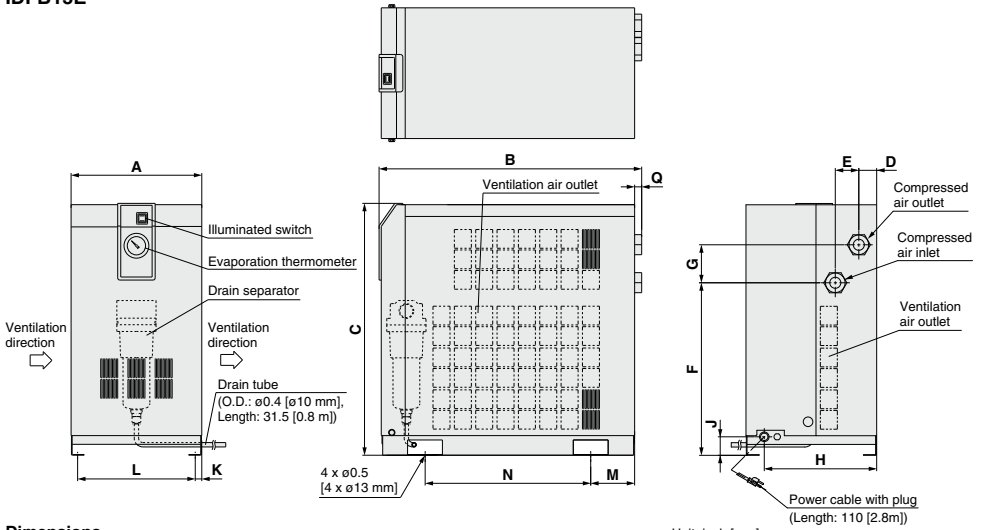

**Dimensions**

Unit: inch [mm]

Model	Port size	A	B	C	D	E	F	G	H	J	K	L	M	N	Q
<b>IDFB15E</b>	1	11.8 [300]	23.7 [603]	22.8 [578]	1.6 [41]	2.1 [54]	16.6 [396]	3.4 [87]	10.2 [258]	1.7 [43]	0.6 [15]	10.6 [270]	4.0 [101]	15.0 [380]	0.6 [16]

- HAA
- HAW
- AT
- IDF
- IDU
- IDFA
- IDFB**
- IDH
- ID
- IDG
- IDK
- AMG
- AFF
- AM
- AMD
- AMH
- AME
- AMF
- ZFC
- SF
- SFD
- LLB
- AD□
- GD

# Refrigerant R134a (HFC), R407C (HFC) Standard Inlet Air

## Series **IDFB** □ **E**

22E, 37E, 55E, 75E

(Inlet air temperature: 100°F [37.8°C])

### How to Order

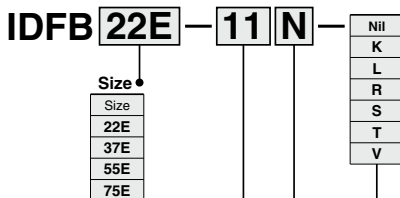


Table of Options and Available Combinations (Size/Option) ●

Symbol <sup>Note 1)</sup>	Nil	K	L	R	S	T	V
Optional specifications <sup>Note 3)</sup>	None	For medium air pressure (Auto drain bowl: Metal case with level gauge)	With heavy duty auto drain (Suitable for medium air pressure)	With circuit breaker	Power supply terminal block connection (Voltage symbol 11 only) <sup>Note 2)</sup>	With terminal block for run & alarm signal	Timer type solenoid valve with auto drain (Suitable for medium air pressure)
Size	●	●	—	●	●	●	●
22	●	●	—	●	●	●	●
37	●	●	—	●	—	●	●
55	●	—	●	●	—	●	●
75	●	—	●	●	—	●	●

Note 1) Enter alphabetically when multiple options are combined.

However, the following combination cannot be achieved.

- Combination of R and S (Because S function is also included in R.)

- Combination of S and T (Because S function is also included in T.)

- Combination of K, L and V (All of them are auto drain and only one or the other may be attached.)

Note 2) Voltage symbol 23 (230 VAC) and 46 (460 VAC) are the terminal block connection as standard. The option S cannot be chosen.

Voltage symbol 11 (115 VAC) is the power cable with plug as standard.

Note 3) Refer to pages 97 and 98 for further information on options.



## Standard Specifications

Specifications		Standard inlet air			
		IDFB22E	IDFB37E	IDFB55E	IDFB75E
Operating conditions (Note 3)	<b>Fluid</b>	Compressed air			
	<b>Inlet air temperature</b> °F (°C)	41 to 122 (5 to 50)			
	<b>Inlet air pressure</b> psi (MPa)	22 (0.15) to 150 (1.0)			
	<b>Ambient temperature</b> °F (°C)	36 to 104 (2 to 40) Relative humidity of 85% or less			
Rated conditions (Note 4)	<b>Air flow capacity</b> SCFM (Note 1)	107 (182)	161 (273)	226 (384)	300 (510)
	<b>Outlet air pressure dew point</b> 37°F (2.8°C)				
	<b>Outlet air pressure dew point</b> 45°F (7.2°C)	120 (205)	173 (294)	258 (438)	353 (600)
	<b>Outlet air pressure dew point</b> 50°F (10°C)	130 (221)	181 (308)	297 (504)	406 (690)
	<b>Operating pressure</b> psi (MPa)	100 (0.7)			
Electrical characteristics	<b>Inlet air temperature</b> °F (°C)	100 (37.8)			
	<b>Ambient temperature</b> °F (°C)	100 (37.8)			
	<b>Power supply voltage (frequency)</b>	Single-phase 115 VAC [voltage fluctuation ±10%] 60 Hz		Single-phase 230 VAC [voltage fluctuation ±10%] 60 Hz	
<b>Operating current</b> (A)	9		4.5	5.6	3.8
<b>Power consumption</b> (W)	1000		1270		2400
<b>Applicable circuit breaker capacity</b> (A) (sensitivity current 30 mA)	10				
<b>Condenser</b>		Forced air-cooled			
<b>Refrigerant</b>		R134a (HFC)			R407C (HFC)
<b>Thread symbol and size</b>	<b>Symbol N</b>	NPT 1 (male)		NPT 1 1/2 (male)	
	<b>Symbol Nil</b>	R 1 (male)		R 1 1/2 (male)	
<b>Drain tube O.D.</b>	<b>Symbol N</b>	3/8 inch			
	<b>Symbol Nil</b>	10 mm			
<b>Coating color</b>		White 1			
<b>Weight</b>	<b>lbs (kg)</b>	119 (54)	137 (62)	258 (117)	271 (123)
<b>Compliant standards</b>		UL, CSA			

Note 1) ANR is under the conditions of 68°F (20°C) at atmospheric pressure and relative humidity of 65%.

Note 2) Air flow capacity for each outlet air pressure dew point is indicated.

Note 3) The operation range does not guarantee the use with normal air flow capacity.

Note 4) When operating conditions are different from the rated specifications, please select a model in accordance with the Model Selection (Page 89).

Note 5) These values are reference values under rated conditions, and are not guaranteed. Do not use these values for the thermal set values, etc.



Note 6) Product other than the option R is not equipped with an earth leakage breaker. Please purchase an appropriate earth leakage breaker separately.

Note 7) If this equipment suffers a short-term power outage (even if it is only momentary), it may require some time before normal operation resumes, and protective mechanisms may prevent normal operation even after the power supply has been restored.

### Replacement Parts

Model		IDFB22E	IDFB37E	IDFB55E	IDFB75E
<b>Auto drain replacement part no.</b> (Note 8)	<b>Thread symbol N</b>	AD48N-Z			
	<b>Thread symbol Nil</b>	AD48			


Note 8) The part number for the auto drain components without including the body part. Body part replacement is impossible.



### Construction Principle (Circuit for Air/Refrigerant)

Humid, hot air coming into the air dryer will be cooled down by a cooler re-heater (heat exchanger). Water condensed at this time will be removed from the air by a drain separator (auto drain) and drained out automatically. Air separated from the water will be heated by a cooler re-heater (heat exchanger) to obtain the dried air, which goes through to the outlet side.


#### IDFB22E, IDFB37E, IDFB55E, IDFB75E

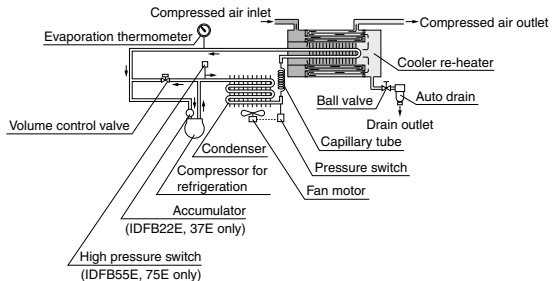

**HAA**  
**HAW**  
**AT**  
**IDF**  
**IDU**  
**IDFA**  
**IDFB**  
**IDH**  
**ID**  
**IDG**  
**IDK**  
**AMG**  
**AFF**  
**AM**  
**AMD**  
**AMH**  
**AME**  
**AMF**  
**ZFC**  
**SF**  
**SFD**  
**LLB**  
**AD**  
**GD**

## Dimensions

### IDFB22E, IDFB37E

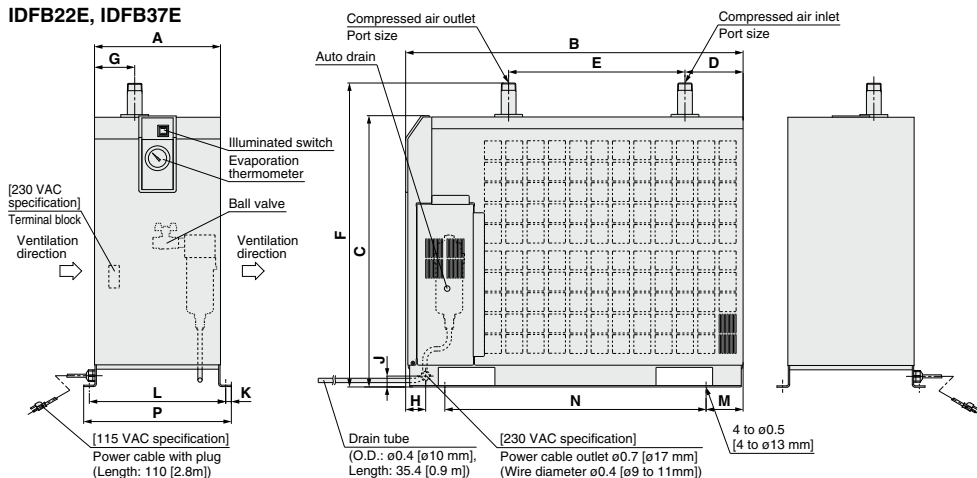


### Dimensions

Model	Port size	A	B	C	D	E	F	G	H	J	K	L	M	N	P
IDFB22E	1	11.4 [290]	30.5 [775]	24.5 [623]	5.3 [134]	15.9 [405]	27.5 [698]	3.7 [93]	1.8 [46]	1.0 [25]	0.5 [13]	12.4 [314]	3.3 [85]	23.6 [600]	13.4 [340]
IDFB37E	1½		33.7 [855]											26.8 [680]	

Unit: inch [mm]

### IDFB55E, IDFB75E

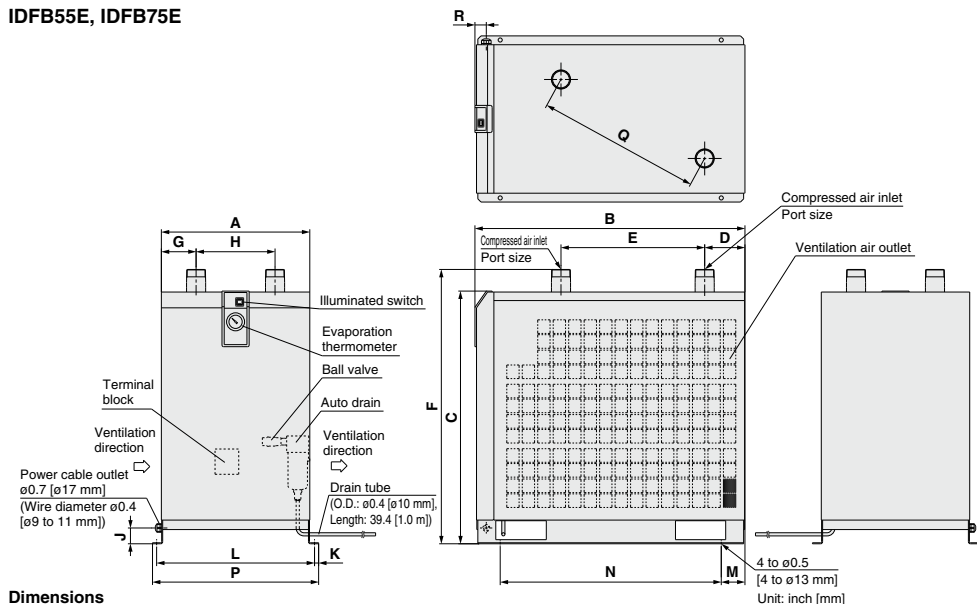

### Dimensions

Model	Port size	A	B	C	D	E	F	G	H	J	K	L	M	N	P	Q	R
IDFB55E	2	18.5 [470]	33.7 [855]	31.5 [800]	5.0 [128]	17.9 [455]	34.2 [868]	4.3 [110]	9.8 [250]	2 [50]	0.5 [13]	19.7 [500]	3.0 [75]	27.6 [700]	20.7 [526]	20.4 [519]	1.4 [36]
IDFB75E	2			35.4 [900]			38.1 [968]										

Unit: inch [mm]

# Series IDFB □ E

# Optional Specifications 1

Refer to "How to Order" pages 90 and 94 for optional models.

## A Option symbol

### Cool compressed air output IDFB3E to 11E

There is no heating of cooled, dehumidified air as it leaves the air dryer. The air flow capacity with this option is smaller than that of the standard dryer. (The external dimensions are identical with the standard product.)  
 (Note) Perform thermal insulation treatment for pipings and equipment installed after the dryer to prevent the formation of condensation.

### Air Flow Capacity

Model	IDFB3E	IDFB4E	IDFB6E	IDFB8E	IDFB11E
Air flow capacity (ANR)	5 SCFM (8 m <sup>3</sup> /h)	13 SCFM (23 m <sup>3</sup> /h)	17 SCFM (29 m <sup>3</sup> /h)	19 SCFM (32 m <sup>3</sup> /h)	23 SCFM (39 m <sup>3</sup> /h)

Conditions: Inlet air pressure: 100 psi (0.7 MPa), Inlet air temperature: 100°F (37.8°C),  
 Outlet air temperature: 50°F (10°C), Ambient temperature: 100°F (37.8°C)

## K Option symbol

### Moderate pressure specification (Auto drain bowl: Metal bowl with level gauge) IDFB6E to 37E

The auto drain is changed from the standard one to one with a moderate pressure specification.  
 A metal bowl with a level gauge which can confirm the water level is used for the auto drain.

### Specifications

1. Maximum operating pressure: 240 psi (1.6 MPa)
2. Dimensions --- same as standard products

### Replacement Parts

Model	Auto drain assembly part no.	Note
IDFB6E to 15E-11N	IDF-S0201	The AD48N-8Z-X2110 auto drain, insulator, and one-touch fitting are included.
IDFB22E, 37E-□N	AD48N-8Z-X2110	One-touch fitting (KQ2H11-35AS) is not included.
IDFB6E to 15E-11	IDF-S0086	The AD48-8-X2110 auto drain, insulator, and one-touch fitting are included.
IDFB22E, 37E-□	AD48-8-X2110	One-touch fitting (KQ2H10-02AS) is not included.


## L Option symbol

### With heavy duty auto drain (Suitable for moderate air pressure) IDFB55E, 75E

More thorough drain discharge can be achieved by replacing the float type auto drain (used with standard equipment) with a heavy duty auto drain (ADH4000-04).  
 (The external dimensions are identical with the standard product.)

Maximum operating pressure: 240 psi (1.6 MPa)

### Replacement Parts

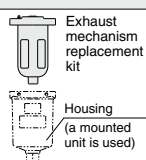
Model	Replacement part no. (Description)	Configuration
IDFB55E, 75E	ADH-E400 (Exhaust mechanism replacement kit)	 <p>Exhaust mechanism replacement kit</p> <p>Housing (a mounted unit is used)</p>

## R Option symbol

### With circuit breaker IDFB4E to 75E

A circuit breaker with cover is attached to the side of the air dryer. This saves additional electrical wiring at the time of installation.


### IDFB4E to 15E

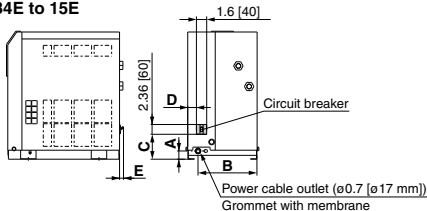

### Dimensions

Model	Unit: inch [mm]				
	A	B	C	D	E
IDFB4E, 6E, 8E, 11E	1.3 [32]	9.0 [230]	3.8 [97]	1.3 [34]	0.6 [15]
IDFB15E	1.7 [43]	10.2 [258]	4.0 [102]	3.2 [82]	—

### IDFB22E to 75E

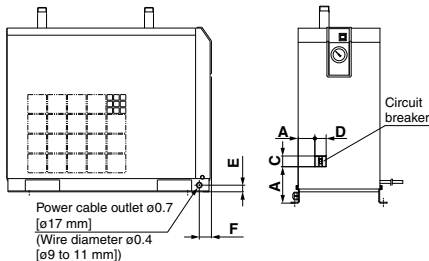

### Dimensions

Model	Unit: inch [mm]					
	A	B	C	D	E	F
IDFB22E, 37E	4.9 [125]	2.3 [59]	2.4 [60]	1.6 [40]	1 [25]	1.8 [46]
IDFB55E, 75E	5.7 [145]	2.2 [56]	3.8 [96]	2.4 [60]	2 [50]	1.4 [36]

### Breaker Capacity and Sensitivity Current

Model	Breaker capacity	Sensitivity current
IDFB4E to 37E	10 A	30 mA
IDFB55E, 75E	10 A	30 mA

- HAA
- HAW
- AT
- IDF
- IDU
- IDFA
- IDFB
- IDH
- ID
- IDG
- IDK
- AMG
- AFF
- AM
- AMD
- AMH
- AME
- AMF
- ZFC
- SF
- SFD
- LLB
- AD□
- GD

## Optional Specifications 2

Refer to “How to Order” pages 90 and 94 for optional models.


### S Option symbol

#### Power supply terminal block connection


IDFB3E-11 to 22E-11

The option allows the connection of a power cable to a terminal block. 200 V and 460 V specifications are equipped as standard.


#### IDFB3E\_Terminal block

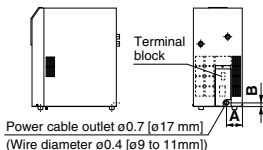


#### IDFB4E to 11E\_Terminal block

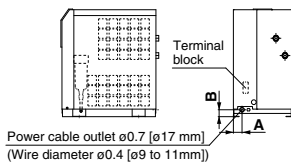

#### IDFB15E\_Terminal block

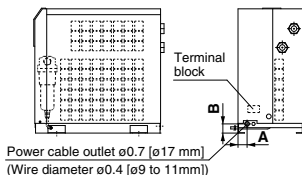

#### IDFB22E\_Terminal block

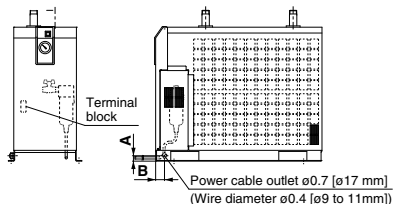

### T Option symbol

#### With terminal block for power supply, run & alarm signal and remote operation


IDFB4E to 75E

In addition to the terminals for the power supply, terminals for the operating signal and the error signal are also available. (No-voltage contact) Also, in case of remote control, operate it from the power supply side while the air dryer switch remains ON.

Contact capacity: 230 VAC, 4 A 24 VDC, 5 A for operating and error signals. Minimum current value: 20 V, 5 mA (AC/DC) for operating and error signals.

Note) Please be sure to confirm the electric circuits with the drawings or instruction manual before using the output signal.

#### IDFB4E to 15E

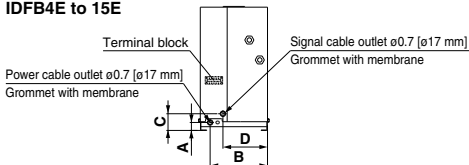


#### Dimensions

Model	A	B	C	D
IDFB4E, 6E, 8E, 11E	1.3 [32]	9.0 [230]	2.6 [67]	7.0 [179]
IDFB15E	1.7 [43]	10.2 [258]	3.0 [77]	6.2 [158]

Unit: inch [mm]

#### IDFB22E to 75E

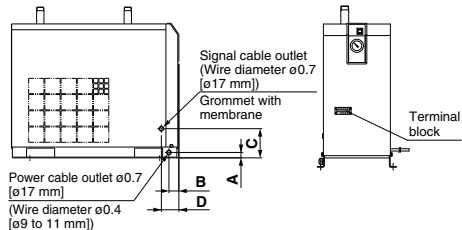

#### Dimensions

Model	A	B	C	D
IDFB22E, 37E	1 [25]	1.8 [46]	5.3 [135]	3.2 [81]
IDFB55E, 75E	2 [50]	1.4 [36]	10.6 [270]	

Unit: inch [mm]

### V Option symbol

#### Timer type solenoid valve with auto drain (Suitable for moderate air pressure)

IDFB4E to 75E

Drainage is discharged by controlling a solenoid valve with a timer. A strainer for solenoid valve protection and stop valve are also included. (The external dimensions are identical with the standard product.)


Maximum operating pressure: 240 psi (1.6 MPa)

\* The timer type solenoid valve actuates once (for 0.5 seconds) every 30 seconds.

#### Replacement Parts

Model	Part no.	Note
IDFB4E to 22E-11 □	IDF-S0199	115 VAC
IDFB22E, 37E-23 □	IDF-S0198	230 VAC
IDFB55E, 75E-46 □	IDF-S0302	230 VAC

# Series IDFB□E Accessory (Option)

	Features	Specifications	Applicable dryer
<b>Dust-protecting filter set</b> 	Prevents a decline in the performance of the air dryer, even in a dusty atmosphere.	Max. ambient temperature 104°F (40°C)	IDFB3E to 75E

## How to Order


Dust-protecting filter set

**IDF — FL** 209


Applicable dryer

Symbol	Applicable dryer
<b>209</b>	IDFB3E
<b>203</b>	IDFB4E IDFB6E
<b>204</b>	IDFB8E
<b>205</b>	IDFB11E
<b>206</b>	IDFB15E
<b>208</b>	IDFB22E IDFB37E
<b>213</b>	IDFB55E
<b>214</b>	IDFB75E


## Dust-protecting Filter Set/Dimensions

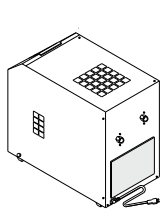

(IDF-FL209)

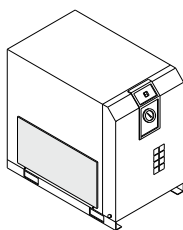

(IDF-FL203 to 208, 213, 214)

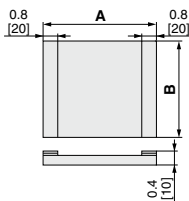

### Dimensions

Unit: inch [mm]

Part no.	Applicable dryer	A	B	Weight lb [g]
<b>IDF-FL209</b>	IDFB3E	8.7 [220]	9.4 [240]	0.08 [35]
	IDFB4E IDFB6E	14.8 [375]	7.7 [195]	0.12 [55]
<b>IDF-FL204</b>	IDFB8E	13.3 [340]	10.4 [265]	0.15 [70]
<b>IDF-FL205</b>	IDFB11E	14.8 [375]		0.17 [75]
<b>IDF-FL206</b>	IDFB15E	[17.3] 440	[14.5] 370	[0.26] 120
	IDFB22E IDFB37E	21.7 [550]	14.4 [365]	0.31 [140]
<b>IDF-FL213</b>	IDFB55E	28.3 [720]	15.7 [400]	0.39 [175]
	<b>IDF-FL214</b>	IDFB75E	24 [610]	22 [560]

- HAA
- HAW
- AT
- IDF
- IDU
- IDFA
- IDFB**
- IDH
- ID
- IDG
- IDK
- AMG
- AFF
- AM
- AMD
- AMH
- AME
- AMF
- ZFC
- SF
- SFD
- LLB
- AD□
- GD



# Series IDFB□E Specific Product Precautions 1

Be sure to read this before handling. Refer to front matter 43 for Safety Instructions and pages 6 to 8 for Air Preparation Equipment Precautions.

## Installation

### ⚠ Caution

- Avoid locations where the air dryer will be in direct contact with wind and rain. (Avoid locations where relative humidity is greater than 85%.)
- Avoid exposure to direct sunlight.
- Avoid locations that contain much dust, corrosive gases, or flammable gases. Failure due to corrosion is not covered under warranty.
- Avoid locations of poor ventilation and high temperature.
- Allow ample space around the air dryer.
- Avoid locations where a dryer could draw in high temperature air that is discharged from an air compressor or other dryer.
- Avoid locations subjected to vibration.
- Avoid possible locations where the drain can freeze.
- Use the air dryer with an ambient temperature lower than 104°F (40°C).
- Avoid installation on machines for transporting, such as trucks, ships, etc.

## Drain Tube

### ⚠ Caution

- A polyurethane tube is attached as a drain tube for the IDFB3E to 75E. Use this tube to discharge drainage.
- Do not use the drain tube in an upward direction. Do not bend or crush the drain tube. (The auto drain will not be activated and water will try to escape via the air outlet.)  
If it is necessary that the tube goes upwards, make sure it only goes as far as the position of the auto drain.

## Power Supply

### ⚠ Caution

- Connect the power supply to the terminal block.
- Install a suitable circuit breaker applicable for the specific model.
- The voltage fluctuation should be maintained within  $\pm 10\%$  of the rated voltage.


Note) Select a circuit breaker with a sensitivity current 30 mA. As regards rated current, refer to "Applicable circuit breaker capacity" on pages 91 and 95.

## Air Piping

### ⚠ Caution

- Be careful to avoid an error in connecting the air piping at the compressed air inlet (IN) and outlet (OUT).
- Install by-pass piping since it is needed for maintenance.


IDFB3E

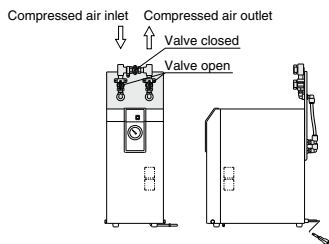


## Air Piping

### ⚠ Caution


IDFB4E to 15E

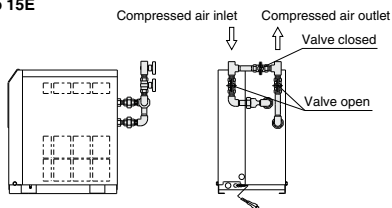

IDFB22E, 37E

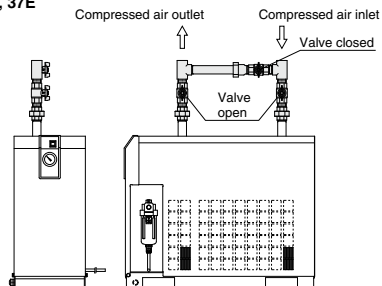

IDFB55E, 75E

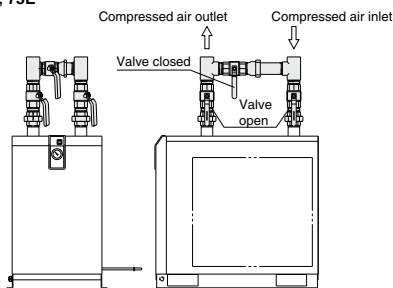

- When tightening piping at the air inlet/outlet tube, the hexagonal parts of the port on the air dryer side or piping should be held firmly with a spanner or adjustable angle wrench.
- Variations in operating conditions may cause condensation to form at the surface of the outlet piping. Apply thermal insulation around the piping to prevent condensation from forming.
- Vibration resulting from the compressor should not be transmitted through air piping to the air dryer.
- Do not allow the weight of the piping to lie directly on the air dryer.
- If a metallic flexible tubing is used for the inlet/outlet air piping abnormal noise might be generated in the piping. In that case, please change it to the rigid tubing.



# Series IDFB□E

## Specific Product Precautions 2

Be sure to read this before handling. Refer to front matter 43 for Safety Instructions and pages 6 to 8 for Air Preparation Equipment Precautions.

### Protection Circuit

#### ⚠ Caution

When the air dryer is operated under the following stated conditions, a protection circuit is activated, the light turns off and operation stops.

- When the compressed air temperature is too high.
- When the compressed air flow rate is too high.
- When the ambient temperature is too high. (104°F (40°C) or higher)
- When the fluctuation of the power supply is beyond the rated voltage  $\pm 10\%$ .
- When the dryer is drawing in high temperature air that is discharged from an air compressor or other dryer.
- The ventilation port is obstructed by a wall or clogged with dust.

### Compressor Air Delivery

#### ⚠ Caution

Use the air compressor with an air delivery of 3.5 SCFM (6 m<sup>3</sup>/h) or larger for the IDFB3E to 75E series.

Since the auto drain of the IDFB3E to 75E series is designed in such a way that the valve remains open unless the air pressure rises to 22 psi (0.15 MPa) or higher, air will blow out from the drain discharge port when the air compressor starts up until the pressure increases. Therefore, if the air compressor has a small air delivery, the pressure may not be sufficient.

### Auto Drain

#### ⚠ Caution

The auto drain may not function properly, depending on the quality of the compressed air. Check the operation once a day.

### Cleaning of Ventilation Area

#### ⚠ Caution

Remove dust from the ventilation area once a month using a vacuum cleaner or an air blow nozzle.

### Time Delay for Restarting

#### ⚠ Caution

Allow at least three minutes before restarting the dryer. If the air dryer is restarted within three minutes after being stopped, the protection circuit will be activated, operating light will turn off and the dryer will not be activated.

### Modifying the Standard Specifications

#### ⚠ Caution

Do not modify the standard product using any of the optional specifications once the product has been supplied to a customer. Check the specifications carefully before selecting an air dryer.

HAA
HAW
AT
IDF
IDU
IDFA
IDFB
IDH
ID
IDG
IDK
AMG
AFF
AM
AMD
AMH
AME
AMF
ZFC
SF
SFD
LLB
AD□
GD