Bar Type / Nozzle Type Ionizer

 (RoHS)

IZT40/41(-L)/42(-L)/43(-L) Series


Space saving

Height 37 mm x Width 30 mm

Nozzle type IZT43 Series

Height 32 mm x Width 16 mm



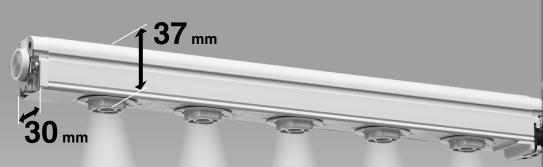



Potential amplitude: 25 V or less*1

Rapid static neutralization:

Fastest time **0.1** s^{*2}

Static neutralization is possible even when air is not being supplied.

IO-Link Compatible

- ON/OFF with a single communication line*1 (Periodic transmission of set values and status for up to 4 channels)
- Reading of the device information and parameter batch settings are possible.
- *1 Wiring with an auxiliary power line is required separately.

Series		Туре	Application	IO-Link
	IZT42 Dual AC		For reducing the potential amplitude	•
Bar	IZT41	AC	For maintaining a constant offset voltage	•
	IZT40	Standard	Simple operation by just turning the power on	_
Nozzle	IZT43	AC	For maintaining a constant offset voltage	•

^{*1} IZT42 installation height: 300 mm

Conditions: Discharge time from 1000 V to 100 V

Object to be neutralized: Charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF)

Installation distance: 100 mm (High speed static neutralization cartridge, Tungsten emitter with air purge)

Bar length: 1120 mm

IZS40/41/42

ΖŁ

ZD10/IZE1

^{*2} IZT40, 41

Dual AC Type IZT42 Series (Potential amplitude reduction specification)



Potential amplitude: 25 V or less*

Rapid static neutralization: **0.1** s^{*2}

- *1 IZT42 installation height: 300 mm
- *2 IZT40, 41


Conditions: Discharge time from 1000 V to 100 V

Object to be neutralized: Charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) Installation distance: 100 mm (High speed static neutralization cartridge, Tungsten emitter with air purge)


Bar length: 1120 mm

The potential amplitude can be reduced with SMC's original dual AC type ionizer.

Static neutralization in consideration of damage to a device which is sensitive to electrostatic discharge (ESD) can be achieved. The potential amplitude applied to the applicable workpiece is reduced even if the workpiece is mounted within close proximity of the ionizer.

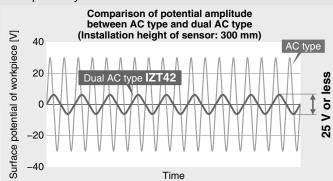


Application Examples For the static neutralization of glass substrates



Prevents the breakage of glass substrates by the static electricity generated when the substrate is lifted from the surface plate


For the static neutralization of electric substrates



- · Prevents element disruption due to discharge
- · Prevents the adhesion of dust


Dual AC type IZT42

+ ions and - ions are discharged at the same time to allow the + and - ions to reach the workpiece evenly, thereby reducing the potential amplitude.

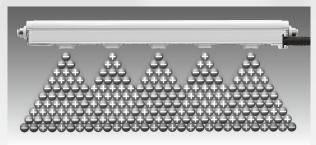

AC type IZT40, 41, 43

+ ion and - ion layers reach the workpiece alternately, which increases the potential amplitude.



AC Type IZT41, 43 Series



With auto balance function

The controller can be used with either type.






- Emitter contamination detection continually displayed and output
- Individual ON/OFF command from an external input signal

With auto balance function

The sensor is installed within the ionizer body and may be mounted anywhere.

The offset voltage (ion balance) in the static neutralization area is controlled so that the voltage is maintained at a constant value by monitoring the ions emitted from the ionizer using the ground line.

Effect of auto balance (Image)

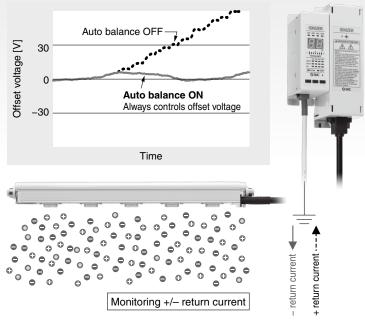



Standard Type IZT40 Series

Simple operation: Can be controlled by powering the ionizer ON





0/41(-L)/ 2(-L)/43(-L)

IZN10E

ΙZF


IZG10

ZVB


IZD10/IZE11


IZH10

Antistatic Equipment

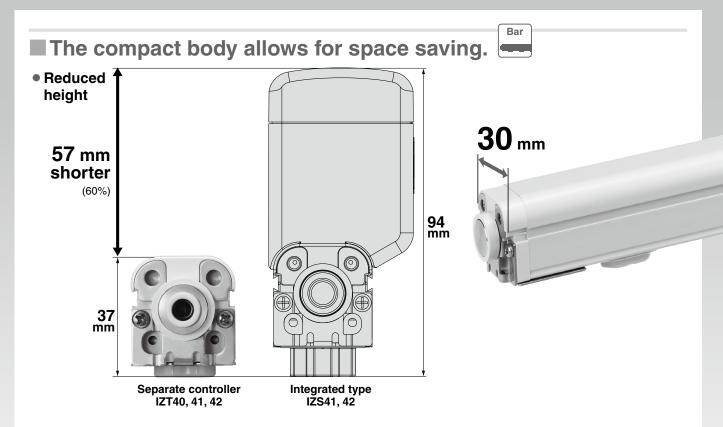

Can be mounted in narrow spaces

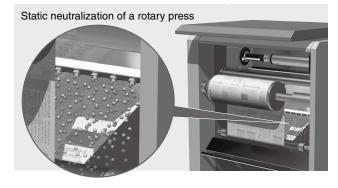

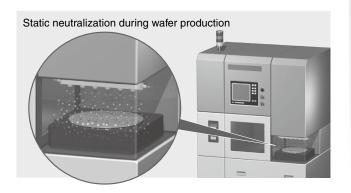

■ Space saving




Thickness 16 mm x Width 53 mm x Height 32 mm

For the removal of dust and static neutralization by air blow

For the static neutralization of plastic bottles and particle elimination



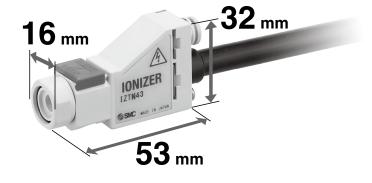




Nozzle



Bar Nozzle

Mixed bar and nozzle connection is possible.

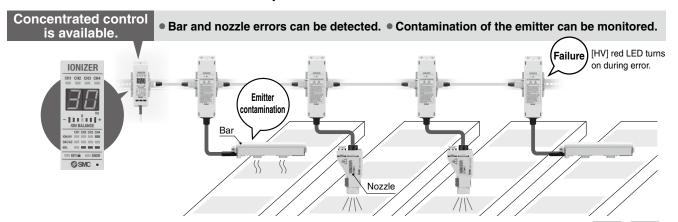


A flexible layout can be achieved due to the various module connection methods.

261 mm*1

High voltage power

supply module

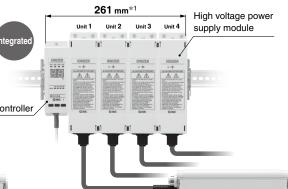

*1 For IZT40, 41, 43

Max. installation distance between controller and bar/nozzle: 15 m



Nozzle

The simple installation of each module is possible by connector connection.

Separate cable

Select from m, 2 m, or 3 m.


Power supply cable
Select from
3 m, 5 m, 10 m, or 15 m.
1 to 20 m: Available as a special orde


Separate

88


Controller

 The connector connection of cables is possible for each module after installation.

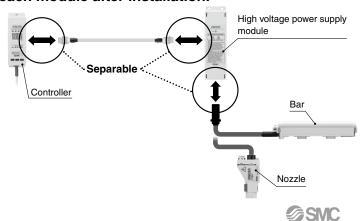

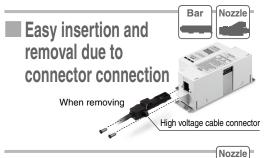


For the insertion and removal of high voltage cables




■ Various low maintenance cartridges can be selected according to the application.



• Minimizes the contamination of emitters by discharging compressed air at the surface of the emitters

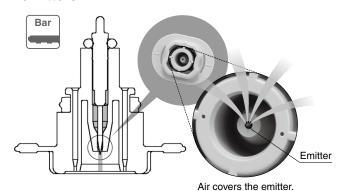

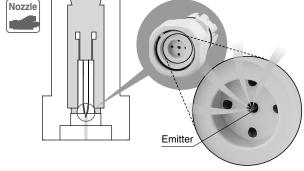


Air covers the emitter.

Emitter cartridge type

High speed static neutralization cartridge

Long range static neutralization and dust removal


1 cartridge equipped with 2 assist air nozzles allows for high speed static neutralization by transferring ionized air produced in the emitter to the workpiece.

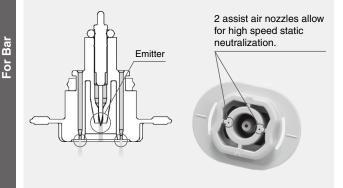



Energy saving static neutralization cartridge

Short range static neutralization

Reducing the number of assist nozzles by half for static neutralization, which does not require a high volume of assist air due to the close distance to the object to be neutralized, allows for energy savings by reducing air consumption.

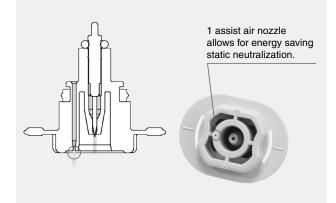

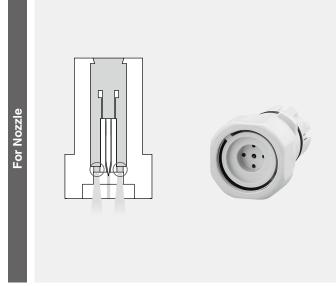

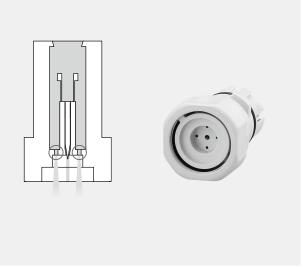


<For Nozzle> The external shape of the high speed static neutralization cartridge and that of the energy saving static neutralization cartridge is the same. However, as shown in the image above, the diameter of the holes differs.



Emitter material type

Tungsten/Single crystal silicon (for silicon wafers)








Silicon (Emitter cartridge color: Gray)





Tungsten (Emitter cartridge color: White)


Energy saving high-efficiency cartridge

Assist air amplified by the sucking in of ambient air (the ejector

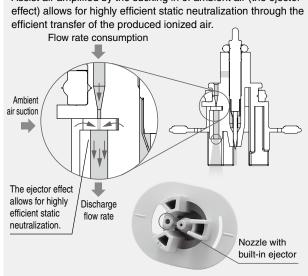


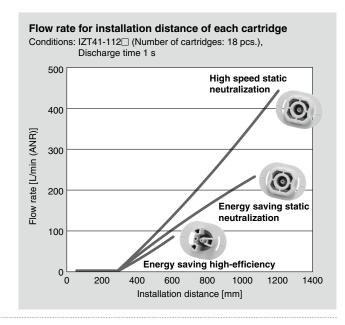

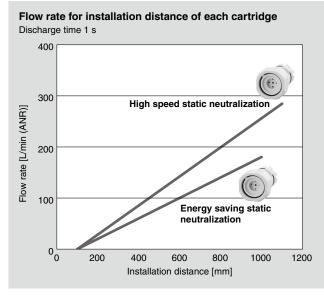

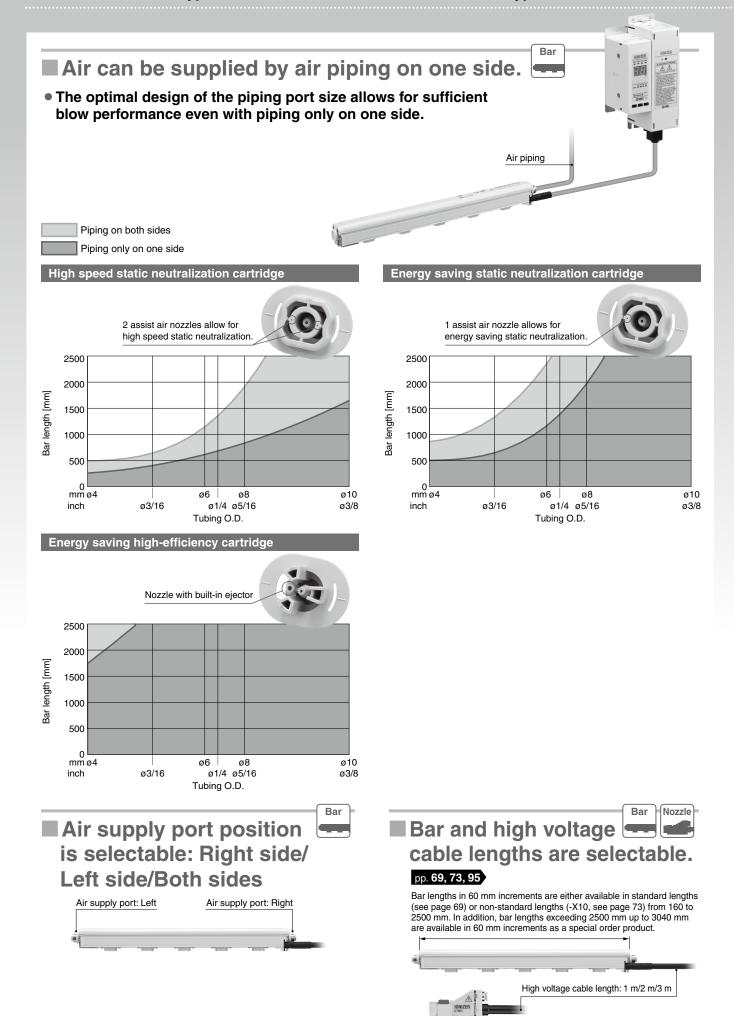



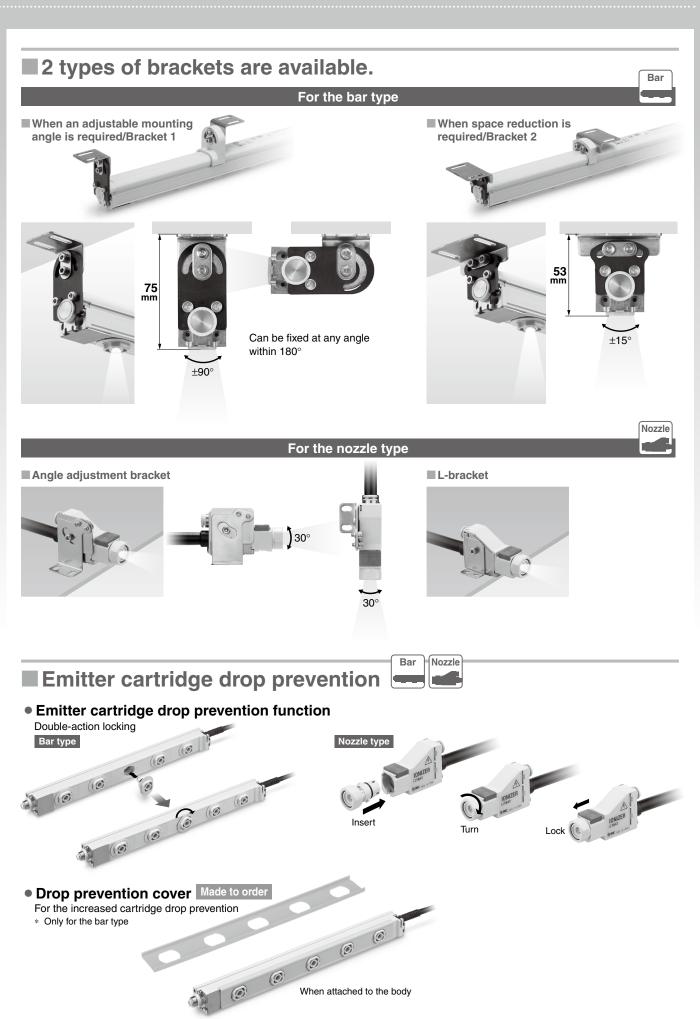


SMC



IO-Link is an open communication interface technology between the sensor/actuator and the I/O terminal that is an international standard: IEC 61131-9.

Visualization of operation and equipment status/Remote monitoring and control by communication

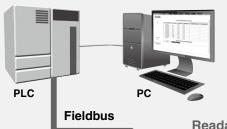

Configuration File (IODD File*1)

· Manufacturer · Product part no. · Set value

*1 IODD File:

IODD is an abbreviation of IO Device Description. This file is necessary for setting the device and connecting it to a master. Save the IODD file on the PC to be used to set the device prior to use.

Separate Controller Ionizer
Bar Type Ionizer *IZT41-L/42-L Series*Nozzle Type Ionizer *IZT43-L Series*

IZT43

IZT41

Readable device data:

- \cdot Ion generation ON/OFF signal and offset voltage data
- · Auto balance ON/OFF signal
- · Device information:
- Manufacturer, Product part number, etc.
- · Normal or abnormal device status





0

0.-.0

Automatic setting function [Data storage function]

When replacing the controller with another of the same type (the same device ID), the parameters (set values) stored in the IO-Link master are automatically copied (set) to the new controller.



Settings are automatically copied when the device is replaced. setting time and setting errors

Process Data

Device settings

can be set by

upper level

equipment.

· Parameter values

Bit offset	10)3	10)2	1	01	10	00	9	9	9	8	9	7	9	6
Item	CH	ł1:	CH	12:	CI	H3:	CH	1 4:	CH	11:	CH	12:	CH	H3:	CH	l4:
nem	Initial se	t status	Initial se	t status	Initial s	et status	Initial se	t status	Ion ger	eration	Ion generation		Ion generation		Ion generation	
Bit offset	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80
Item			Reser	vation					CH1: I	on bala	ance (1	0-bit si	gned ir	iteger)		
Bit offset	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64
Item			Reser	vation					CH2: I	on bala	ance (1	0-bit si	gned ir	teger)		
Bit offset	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48
Item	Reservation					CH3: I	on bala	ance (1	0-bit si	gned ir	teger)					
Bit offset	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
Item	Reservation				CH4: Ion balance (10-bit					gned ir	teger)					
Bit offset	31 30 29		29	28 27		7	2	6	2	5	2	4				
Item	Error dia	agnosis	CPU (Cont	failure roller)		pply failure troller)			Non-conr high volta supply	ge power		Reservation				
Bit offset	2	3	2	2	2	21	2	0	1	9	18		17		1	6
Item	CH CPU f		CPU t			⊣3: failure	CPU 1	l4: ailure	CH1: CH2: High voltage High voltage failure failure		oltage	CH3: High voltage failure		CH High v fail	oltage	
Bit offset	1.	5	1	4	1	3	1	2	1	1	1	0	(9	8	3
Item	CH Inter		CH Inte			H3: ernal	CH Inte		CH	1 1:	CH	12:	CH	1 3:	CH	14:
	communica								Fan f	ailure	Fan fa	ailure	Fan f	ailure	Fan fa	ailure
Bit offset	7	7	6	3		5		ļ	3	3	2	2		1	()
	CH	11:	CH	12:	C	H3:	CH	14:	CH	11:	CH	12:	CH	13:	CH	14:

It is possible to monitor the offset voltage value for each channel with the cyclic (periodic) data.

It is possible to find problems with the equipment in detail for each channel with the cyclic (periodic) data.

Maintenance

notification

PD_OUT

CH duplication failure

CH duplication failure

CH duplication failure

PD_001																
Bit offset	7	1	7	0	(69		88	6	7	6	6	6	5	6	4
Item	_	OUT Invalid		Reservation						H1: neration	Cl lon ger			13: neration	CH Ion gen	
Bit offset	63	62	61	61 60 59 58				56	55	54	53	52	51	50	49	48
Item	Reservation				CH1: Offset voltage adjustment (10-bit signed integer)											
Bit offset	47	47 46 45 44 43 42			42	41	40	39	38	37	36	35	34	33	32	
Item			Reser	vation				CH2:	Offset v	oltage/	adjustr	nent (1	0-bit si	gned ir	nteger)	
Bit offset	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Item	Reservation					CH3:	Offset v	oltage/	adjustr	nent (1	0-bit si	gned ir	nteger)			
Bit offset	15	15 14 13 12 11 10					9	8	7	6	5	4	3	2	1	0
Item	Reservation						CH4:	Offset v	oltage	adjustr	nent (1	0-bit si	gned ir	nteger)		

CH duplication failure


Maintenance

It is possible to adjust the offset voltage for each channel with the cyclic (periodic) data.



<mod< th=""><th>els and</th><th>Functio</th><th>ns></th><th> IZT42(-L)</th><th>IZT41(-L)</th><th>IZT40</th><th>IZT43(-L)</th></mod<>	els and	Functio	ns>	IZT42(-L)	IZT41(-L)	IZT40	IZT43(-L)
	Ser	ries					
Method of a	applying voltage	9		Dual AC	AC, DC*1	AC, DC*1	AC, DC*1
Auto balance		•	•	_	•		
I/O				NPN/PNP (IZT42)	NPN/PNP (IZT41)		NPN/PNP (IZT43)
1/0		NIZER .		IO-Link (IZT42-L)	IO-Link (IZT41-L)		IO-Link (IZT43-L)
lon balance display		CH2 CH3 CH4	IONIZER O O		•	_	•
High voltag abnormality detection		Hz	A CASTON ATTINION MALAZE MAL	•	•	•	•
Maintenand detection	DAC/AC NDL KE	YA SNSR		•	•	_	•
Low mainte	enance emitter	SMC • T		•	•	•	•
	High speed	For Bar		•	•	•	_
	static neutralization	For Nozzle		<u> </u>	_	_	•
Emitter cartridge	Energy saving	For Bar		•	•	•	_
	static neutralization	For Nozzle		_	_	_	•
	Energy saving high-efficiency	For Bar	1)-	•	•	•	_
One-touch	Metric size			ø4, ø6, ø8, ø10	ø4, ø6, ø8, ø10	ø4, ø6, ø8, ø10	ø6
fitting				ø3/16", ø1/4", ø5/16", ø3/8"	ø3/16", ø1/4", ø5/16", ø3/8"	ø3/16", ø1/4", ø5/16", ø3/8"	ø1/4"
Bracket mo	ounting			•	•	•	•
	dard bar length	(-X10) drop prevention co	over (-X14)	•	•	•	_




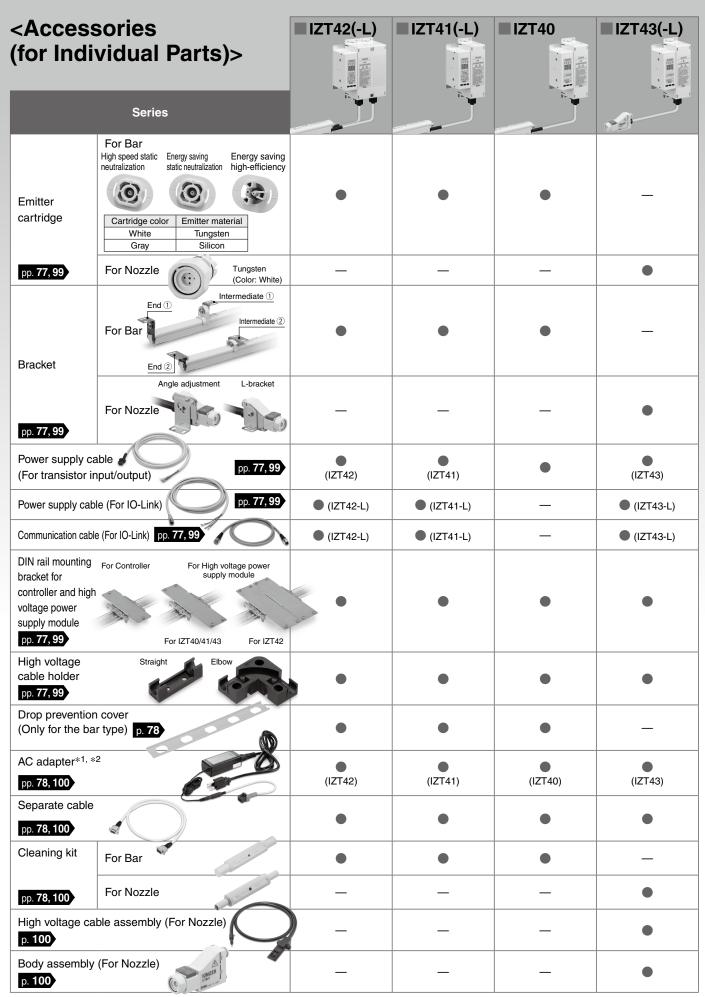

^{*1} Only for use with 1 ionizer bar/nozzle *2 Cannot be used when the input/output specification is IO-Link


<Application Examples: Bar Type>

For the static neutralization of resin frames

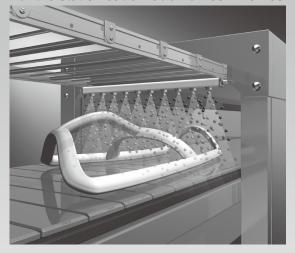


For the static neutralization of film-molded goods

- Prevents goods from adhering to the conveyer
- Prevents the dispersion of finished goods

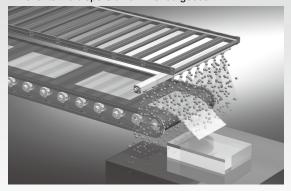


For the static neutralization of packing films

- Prevents the filled substances from adhering to packing films
- Reduces packing mistakes

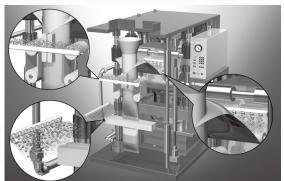


For the static neutralization of glass substrates

 Prevents the breakage of glass substrates by the static electricity generated when the substrate is lifted from the surface plate

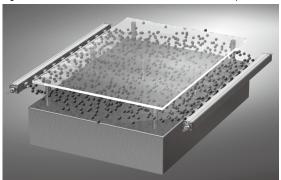




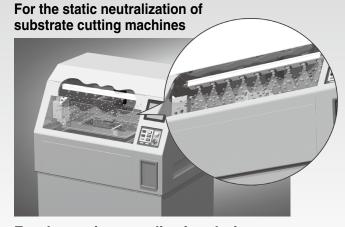


For the static neutralization during wafer transfer

• Prevents breakage due to discharge between wafers and hands

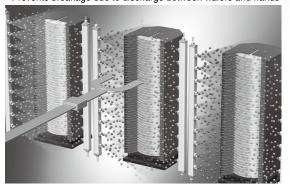

For the static neutralization of lenses

- Removes dust from lenses
- Prevents the adhesion of dust

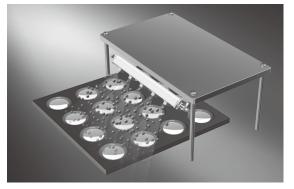



IZS40/41/42

IZT40/41(-L)/ 42(-L)/43(-L

IZN10E

ΙZF


G10

ă

< Application Examples: Nozzle Type>


For the static neutralization of caps

Removes dust from caps and prevents the adhesion of dust

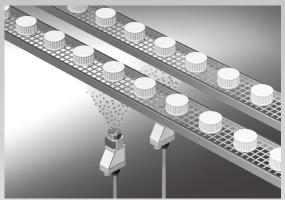


For the static neutralization of films

- Prevents the adhesion of dust
- Prevents winding failure due to wrinkles, etc.

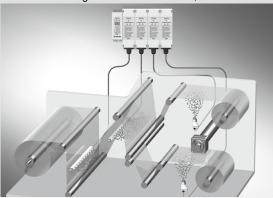


For the static neutralization of parts feeders

• Prevents the clogging of parts feeders

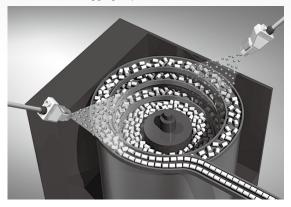

For the removal of dust when detaching from film


· Removes dust generated by static electricity when detaching from film

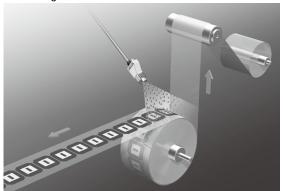




For the spot type static neutralization • Prevents the electrostatic breakdown of electric parts

- Prevents detachment failure

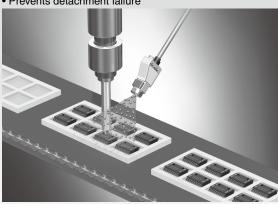


For the static neutralization of electric substrates

• Prevents the electrostatic breakdown of electric parts

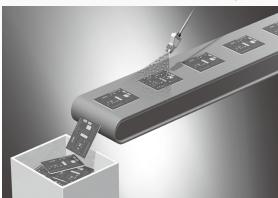


For the prevention of punching press sticking

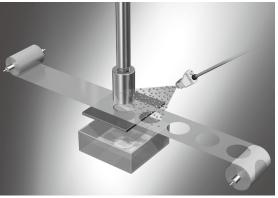


ΖF

CONTENTS

Separate Controller Bar Type/Nozzle Type Ionizer IZT40/41(-L)/42(-L)/43(-L) Series

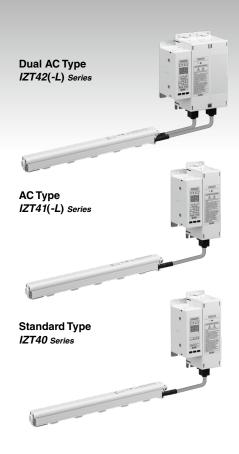

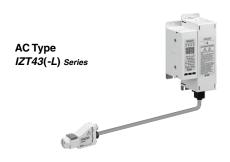

Se	parat	e Co	ontro	oller
UU	parat			

Bar Tv	pe lonizer	IZT40/41(-L)/42(-L) Series
D ui		I— I IV/ I I \	- <i> </i>	, 00110

Technical Data: Static Neutralization Characteristics	
① Installation Distance and Discharge Time	p. 63
② Static Neutralization Range	p. 64
3 Potential Amplitude	p. 67
Pressure — Flow Rate Characteristics ————————————————————————————————————	·p. 68
How to Order	
Bar + High Voltage Power Supply Module + Controller	·p. 69
For Individual Parts (Bar/Controller/High Voltage Power Supply Module)	·p. 71
Made to Order	·p. 73
Specifications	•
Construction	·p. 76
Accessories (for Individual Parts)	·p. 77
Accessories Sold Separately-	·p. 78
Wiring: IZT40, 41(-L), 42(-L)	·p. 79
Wiring Circuit: IZT40	·p. 79
Wiring Circuit: IZT41, 42	·p. 80
Wiring Circuit: IZT41-L, 42-L	·p. 81
Dimensions	
IZT40, 41(-L)	·p. 82
IZT42(-L)	·p. 84
Controller	·p. 85
High Voltage Power Supply Module	·p. 87
Cable	·p. 89

Separate Controller

Nozzle Type Ionizer IZT43(-L) Series

Technical Data: Static Neutralization Characteristics	
① Installation Distance and Discharge Time	p. 93
② Static Neutralization Range	p. 93
③ Pressure — Flow Rate Characteristics	p. 94
How to Order	
Nozzle + High Voltage Power Supply Module + Controller	p. 95
For Individual Parts (Nozzle/Controller/High Voltage Power Supply Module)	p. 96
Specifications	p. 97
Construction	p. 98
Accessories (for Individual Parts)	p. 99
Accessories Sold Separately	p. 100
Wiring: IZT43(-L)	p. 101
Wiring Circuit: IZT43-L	
Wiring Circuit: IZT43	p. 102
Dimensions	
IZT43(-L)	p. 103
Controller	p. 105
High Voltage Power Supply Module	p. 107
Cable	p. 108


Specific Product Precautions

IZT40/41(-L)/42(-L) Series Technical Data

Static Neutralization Characteristics

* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

① Installation Distance and Discharge Time (Discharge Time from 1000 V to 100 V)

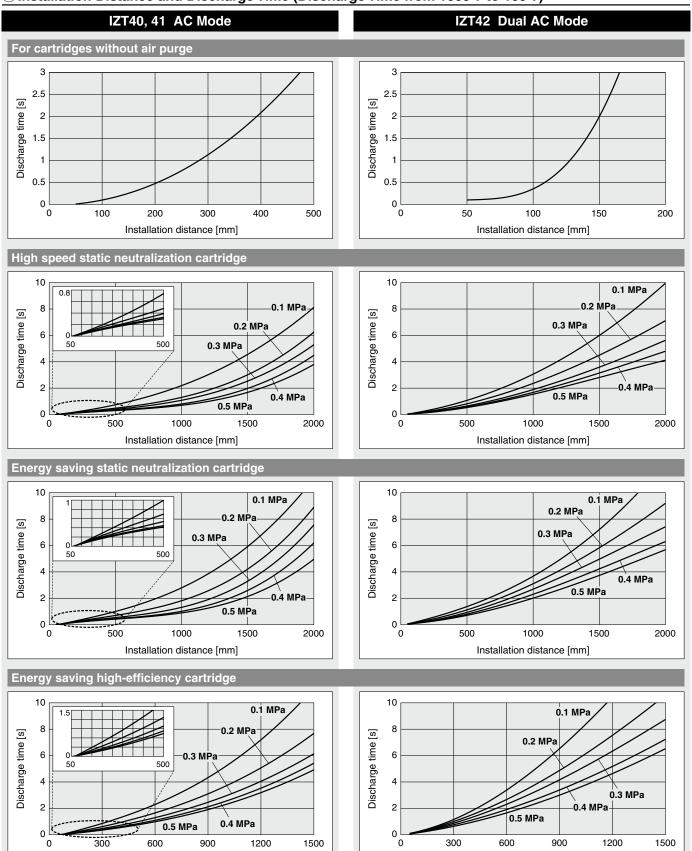

Installation distance [mm]

Installation distance [mm]

Technical Data | IZT40/41(-L)/42(-L) Series

Static Neutralization Characteristics

* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.


② Static Neutralization Range (Discharge Time from 1000 V to 100 V)


IZT40, 41 Ion Generation Frequency: 30 Hz

SMC

1) For cartridges without air purge

For IZT40-□D, L, V For IZT41-□D, L, V

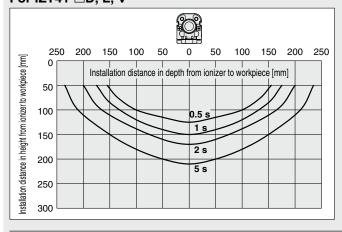


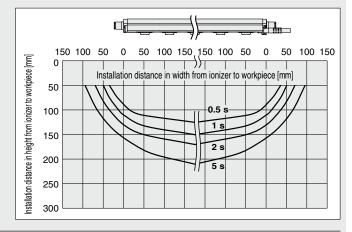


2) High speed static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT40-□D

For IZT41-□D

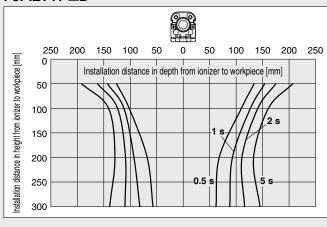


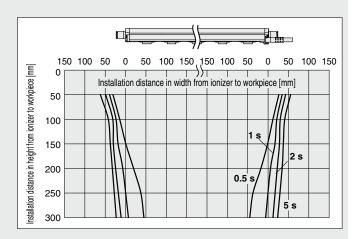


3) Energy saving static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT40-□L

For IZT41-□L

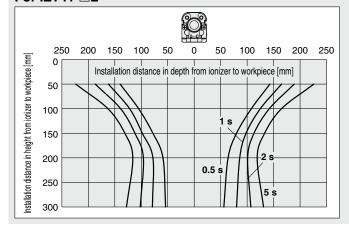

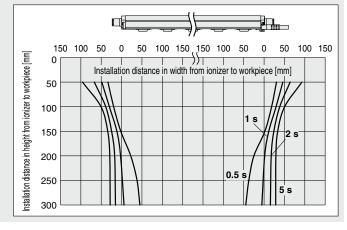

Static Neutralization Characteristics

* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.


② Static Neutralization Range (Discharge Time from 1000 V to 100 V)


IZT40, 41 Ion Generation Frequency: 30 Hz

4) Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa

For IZT40-□V

For IZT41-□V

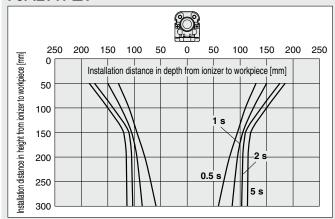


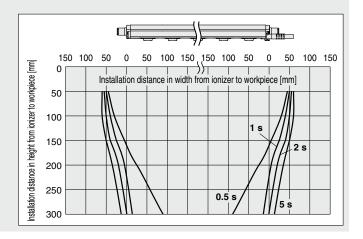


IZT42 Ion Generation Frequency: 30 Hz

1) For cartridges without air purge


For IZT42-□D, L, V

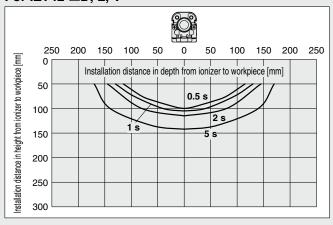


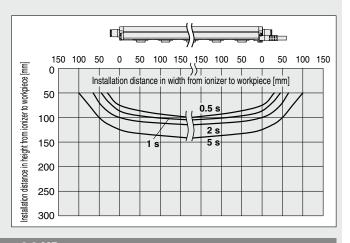

2) High speed static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT42-□D

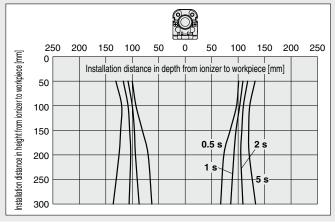

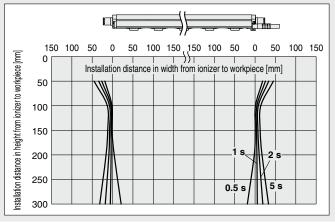

Technical Data | IZT40/41(-L)/42(-L) Series

Static Neutralization Characteristics


* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.


② Static Neutralization Range (Discharge Time from 1000 V to 100 V)

IZT42 Ion Generation Frequency: 30 Hz

3) Energy saving static neutralization cartridge, Supply pressure: 0.3 MPa




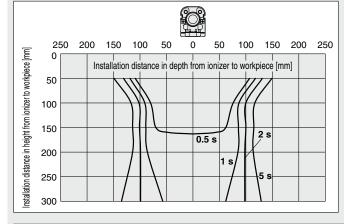


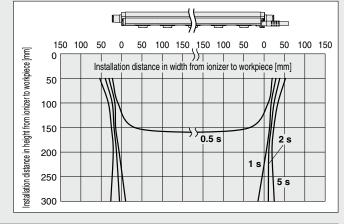

4) Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa

For IZT42-□V

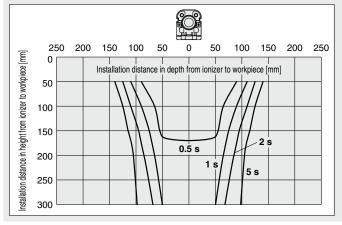


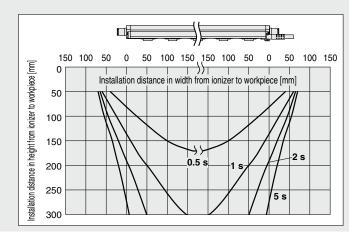

Static Neutralization Characteristics

Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

③ Potential Amplitude

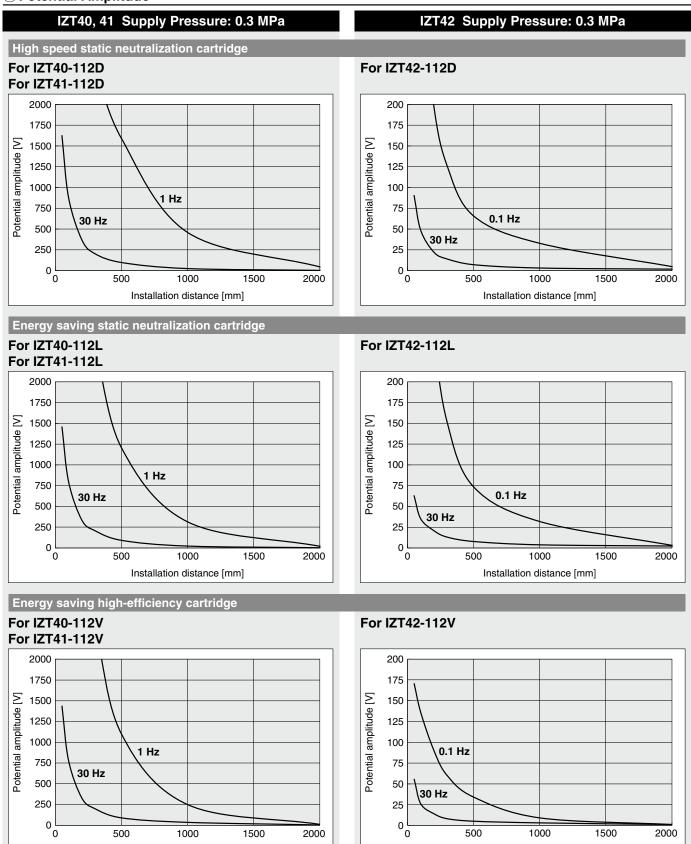

Installation distance [mm]


Installation distance [mm]


Technical Data IZT40/41(-L)/42(-L) Series


Static Neutralization Characteristics

Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

4 Pressure — Flow Rate Characteristics

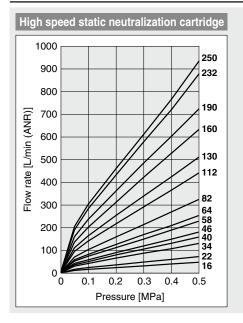

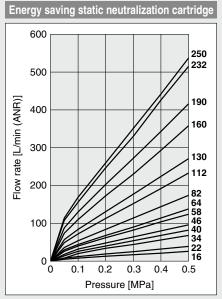

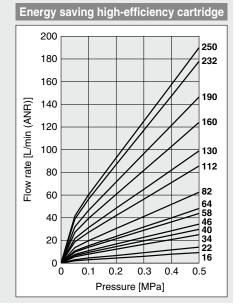


How to measure

a) Air supply from one side

IZT40 | IZT41 | -10

[41 -16, 22, 34, 40, 46, 58 Connecting tube: O.D. Ø6 x I.D. Ø4

IZT42



b) Air supply from both sides

IZT40 | IZT41 | -64, 82, 112 | Connecting tube: O.D. Ø6 x I.D. Ø4


IZT42 ☐ IZT40 ☐

IZT41 -130, 160, 190 Connecting tube: O.D. Ø8 x I.D. Ø5

IZT40

IZT41 -232, 250 Connecting tube: O.D. Ø10 x I.D. Ø6.5

IZT42

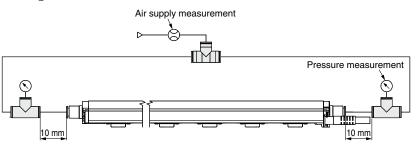






Separate Controller Bar Type Ionizer

IZT40/41(-L)/42(-L) Series

How to Order

Bar + High voltage power supply module + Controller

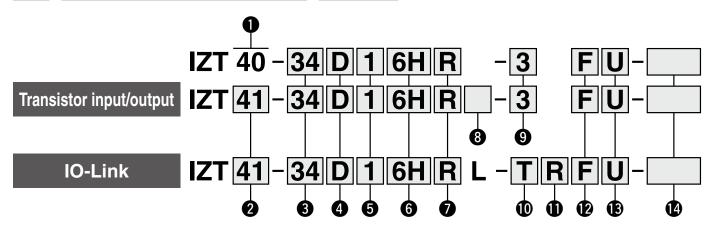

Model

_	
Symbol	Model
40	Standard type

2 Model

Symbol	Model
41	AC type
42	Dual AC type

5 High voltage cable length

Symbol	High voltage cable length [m]							
1	1							
2	2							
3	3							

 The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders ⇒ Refer to page 77.

Cumbal	IZT	40	IZT	41	IZT	42
Symbol	Straight	Elbow	Straight	Elbow	Straight	Elbow
Symbol Straight Elbert 1 1 1		1	1	1	2	2
2	2	1	2	1	4	2
3	3	1	3	1	6	2

3 Bar length

Symbol	Length [mm]	Symbol	Length [mm]
16	160	82	820
22	220	112	1120
34	340	130	1300
40	400	160	1600
46	460	190	1900
58	580	232	2320
64	640	250	2500

Metric size

6 One-touch fitting

Symbol

4H	ø4 Straight	
6H	ø6 Straight	
8H	ø8 Straight	
AH	ø10 Straight	
4L	ø4 Elbow	
6L	ø6 Elbow	
8L	ø8 Elbow	
AL	ø10 Elbow	
Symbol	Inch size	
5H	ø3/16" Straight	
7H	ø1/4" Straight	
_	ø1/4" Straight ø5/16" Straight	
7H	<u> </u>	
7H 9H	ø5/16" Straight	
7H 9H BH	ø5/16" Straight ø3/8" Straight	
7H 9H BH 5L	ø5/16" Straight ø3/8" Straight ø3/16" Elbow	

* Refer to the recommended piping port size on the next page for selecting a One-touch fitting.

4 Emitter cartridge type/ Emitter material

Symbol	Туре	Material
D	High speed static	Tungsten
E	neutralization cartridge	Silicon
L	Energy saving static	Tungsten
M	neutralization cartridge	Silicon
V	Energy saving	Tungsten
S	high-efficiency cartridge	Silicon

7 Plug position

Symbol	Plug position
Nil	Without plug
Q	High voltage cable side
R	Opposite side of the high voltage cable

1 Input/Output

Symbol	Input/Output
Nil	NPN
Р	PNP

* The input/output function cannot be used when an AC adapter is being used.





High voltage power supply module

Controller

Dual AC type

AC type

AC type

Standard type

Power supply cable length

Symbol	Length [m]
3	3
5	5
10	10
15	15
N	None

 To use an AC adapter, specify "N", and select the AC adapter sold separately.

Power supply cable entry direction/length

Symbol	Entry direction	Length [m]	
N	No	None	
J		3	
K	Straight	5	
M		10	
S		3	
Т	Angled	5	
Z		10	

Communication cable entry direction/length

Symbol	Entry direction	Length [m]
N	None	
E	Straight	0.5
G		1
Н		2
J		3
K		5
M		10
Р		0.5
Q	Angled	1
R		2
S		3
Т		5
Z		10

12 Bar bracket ⇒ Refer to page 77.

Symbol	Туре
Nil	Without bracket
В	With bracket 1
F	With bracket 2

 The number of intermediate brackets differs depending on the bar length. (Refer to the table below.)

Number of brackets

Bar length [mm]	End bracket	Intermediate bracket
160 to 760		None
820 to 1600	2	1
1660 to 2380	2	2
2440 to 2500		3

DIN rail mounting bracket for controller and high voltage power supply module

 \Rightarrow Refer to page 77.

Symbol	For controller	For high voltage power supply module
Nil	None	None
U	Included	Included
W	Included	None
Υ	None	Included

Made to order ⇒ Refer to page 73.

Symbol	Description	
-X10	Non-standard bar length	
-X14	Model with drop prevention cover	

Recommended piping port size for the IZT4 High speed static neutralization cartridge

iligii speet	u static net	Static fleutralization cartridge													
One-touch	Applicable						Ba	ır lenç	gth [m	m]					
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4	0	0	•	•	•	_	_	_	_	_	_	_	_	_
6H/6L	ø 6	0	0	0	0	0	0	•	•	•	_	_	_	_	
8H/8L	ø 8	0	0	0	0	0	0	0	0	•	•	•	•	_	_
AH/AL	ø 10	0	0	0	0	0	0	0	0	0	0	0	•	•	•
5H/5L	ø 3/16 "	0	0	0	0	•	•	•	_	—	_	_	_	_	_
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	•	•	•	_	_	_	_
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	•	•	•	•	_	_
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	•	•	

○: With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving static neutralization cartridge

Lileigy Sa	villy static	Heut	anzo	ILIOII	cartii	uye									
One-touch	Applicable						Ba	r lenç	th [m	<u>m]</u>					
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4	0	0	0	0	0	•	•	•	_	_	_	_	_	_
6H/6L	ø 6	0	0	0	0	0	0	0	0	0	•	•	•	•	_
8H/8L	ø 8	0	0	0	0	0	0	0	0	0	0	0	0	•	•
AH/AL	ø10	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	ø 3/16 "	0	0	0	0	0	0	0	•	•	•	_	_	_	_
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	0	0	0	•	•	•	•
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	0	0	0	0	•	•
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0

O: With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving high-efficiency cartridge

Ellergy Sa	villy illgil-c	HILLIC	riicy	cartii	uye										
One-touch	Applicable						Ba	ır lenç	gth [m	m]					
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4	0	0	0	0	0	0	0	0	0	0	0	•	•	•
6H/6L	ø 6	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8H/8L	ø 8	0	0	0	0	0	0	0	0	0	0	0	0	0	0
AH/AL	ø10	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	ø 3/16 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0


○: With piping only on one side ●: With piping on both sides




For Individual Parts

How to Order







Model

Symbol	Model
40	Standard type (For IZT40), AC type (For IZT41)
42	Dual AC type (For IZT42)

2 Bar length

Length [mm]	Symbol	Length [mm]
160	82	820
220	112	1120
340	130	1300
400	160	1600
460	190	1900
580	232	2320
640	250	2500
	160 220 340 400 460 580	160 82 220 112 340 130 400 160 460 190 580 232

3 Emitter cartridge type

Symbol	Туре	Material
D	High speed static	Tungsten
E	neutralization cartridge	Silicon
L	Energy saving static	Tungsten
M	neutralization cartridge	Silicon
V	Energy saving	Tungsten
S	high-efficiency cartridge	Silicon

4 High voltage cable length

Symbol	High voltage cable length [m]
1	1
2	2
3	3

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders

⇒ Refer to page 77.

Cumbal	IZT	40	IZT	41	IZT	42
Symbol	Straight	Elbow	Straight	Elbow	Straight	Elbow
1	1	1	1	1	2	2
2	2	1	2	1	4	2
3	3	1	3	1	6	2

5 One-touch fitting

One-touch litting						
Symbol	Metric size					
4H	ø4 Straight					
6H	ø6 Straight					
8H	ø8 Straight					
AH	ø10 Straight					
4L	ø4 Elbow					
6L	ø6 Elbow					
8L	ø8 Elbow					
AL	ø10 Elbow					

Symbol	Inch size
5H	ø3/16" Straight
7H	ø1/4" Straight
9H	ø5/16" Straight
BH	ø3/8" Straight
5L	ø3/16" Elbow
7L	ø1/4" Elbow
9L	ø5/16" Elbow
BL	ø3/8" Elbow

- * Refer to the table below for selecting a One-touch fitting.
- * The position of the One-touch fitting and the plug cannot be changed after the delivery of the product.

6 Plug position

Symbol	Position
Nil	Without plug
Q	High voltage cable side
R	Opposite side of the high voltage cable

7 Bar bracket ⇒ Refer to page 77.

Symbol	Type
Nil	Without bracket
В	With bracket 1
F	With bracket 2

* The number of intermediate brackets differs depending on the bar length. (Refer to the table below.)

Number of brackets

Bar length	End bracket	Intermediate bracket
160 to 760		None
820 to 1600	2	1
1660 to 2380	2	2
2440 to 2500		3

8 Made to order ⇒ Refer to page 73.

Symbol	Description
-X10	Non-standard bar length
-X14	Model with drop prevention cover

Recommended piping port size for the IZT4□ High speed static neutralization cartridge

One-touch	Applicable	Bar length [mm]													
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4 mm	0	0	•	•	•	_	_	_	_	_	_	_	_	_
6H/6L	ø 6 mm	0	0	0	0	0	0	•	•	•	_	_	_	_	_
8H/8L	ø 8 mm	0	0	0	0	0	0	0	0	•	•	•	•	_	_
AH/AL	ø 10 mm	0	0	0	0	0	0	0	0	0	0	0	•		•
5H/5L	ø 3/16 "	0	0	0	0	•	•	•	_	_	_	_	_	_	_
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	•	•	•	_	_	_	_
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	•		•	•	_	_
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	•	•	•

O: With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving static neutralization cartridge

Literay 3a	rgy saving static fleutralization cartriage														
One-touch	Applicable		Bar length [mm]												
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4 mm	0	0	0	0	0	•	•	•	_	_	_	_	_	_
6H/6L	ø 6 mm	0	0	0	0	0	0	0	0	0	•	•	•	•	_
8H/8L	ø 8 mm	0	0	0	0	0	0	0	0	0	0	0	0	•	•
AH/AL	ø 10 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	ø 3/16 "	0	0	0	0	0	0	0	•	•	•	_	_	_	_
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	0	0	0	•	•	•	•
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	0	0	0	0	•	•
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0

O: With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving high-efficiency cartridge

inorgy carmy man emercinely carmage															
One-touch	Applicable	le Bar length [mm]								m]					
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4 mm	0	0	0	0	0	0	0	0	0	0	0	•	•	•
6H/6L	ø 6 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8H/8L	ø 8 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
AH/AL	ø 10 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	ø 3/16 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0

○: With piping only on one side ●: With piping on both sides



Individual Parts Combinations


	Bar/	ZTB	High voltage	power supply	module/ IZTP	Controller/IZTC		
	40	42	40	41	42	40	41	
IZT40	•		•			•		
IZT41	•			•			•	
IZT42		•			•		•	


⚠ Caution

The transistor input/output specification and the IO-Link specification cannot be installed in combination.

IZS40/41/42

ΖŁ

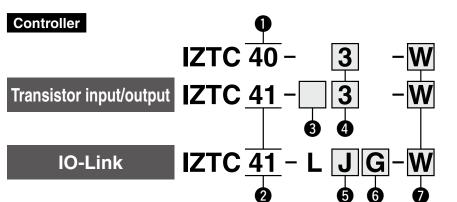

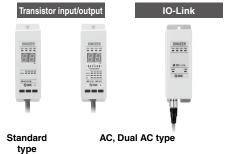

Model

Symbol	Model
40	Standard type

<u> </u>	Mc	odel

Symbol	Model
41	AC type, Dual AC type

3 Input/Output

	-
Symbol	Input/Output
Nil	NPN
Р	PNP

4 Power supply cable length

Symbol	Length [m]				
3	3				
5	5				
10	10				
15	15				
N	None				

5 Power supply cable entry direction/length

Symbol	Entry direction	Length [m]				
N	No	one				
J		3				
K	Straight	5				
M		10				
S		3				
Т	Angled	5				
Z		10				

6 Communication cable entry direction/length


Symbol	Entry direction	Length [m]
N	No	ne
E		0.5
G		1
Н	Ctroight	2
J	Straight	3
K		5
M		10
Р		0.5
Q		1
R	Analad	2
S	Angled	3
Т		5
Z		10

7 DIN rail mounting bracket

⇒ Refer to page 77.

Symbol	Туре
Nil	None
W	Included

High voltage power supply module

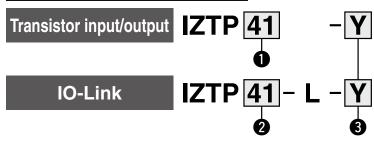



Model

Symbol	Model
40	Standard type (For Bar)
41	AC type (For Bar)
42	Dual AC type (For Bar)
43	AC type (For Nozzle)

2 Model

Symbol	lymbol Model				
41	AC type (For Bar)				
42	Dual AC type (For Bar)				
43	AC type (For Nozzle)				

3 DIN rail mounting bracket


⇒ Refer to page 77.

Symbol	Туре
Nil	None
Υ	Included

IZD10/IZE1

Made to Order

Symbol	Description	Specifications			
-X10	Non-standard bar length	Manufacturable bar length (Symbol): 10 + 6 x n (n: Integer from 1 to 39) (For n = 1, 2, 4, 5, 6, 8, 9, 12, 17, 20, 25, 30, and 37, use a standard model.)			

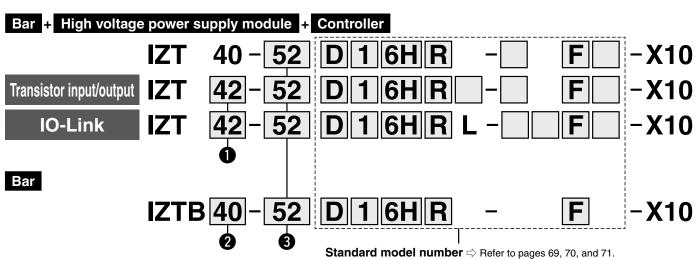


1 Type
41
42

40 42 3 Bar length

ОВа	lengui						
Symbol	Bar length [mm]						
28	280	106	1060	166	1660	214	2140
52	520	118	1180	172	1720	220	2200
70	700	124	1240	178	1780	226	2260
76	760	136	1360	184	1840	238	2380
88	880	142	1420	196	1960	244	2440
94	940	148	1480	202	2020		
100	1000	154	1540	208	2080		

Symbol	Description	Specifications					
-X14	Model with emitter cartridge drop prevention cover	The main unit is shipped fitted with a drop prevention cover available as an optional accessory.					
		Drop prevention cover					

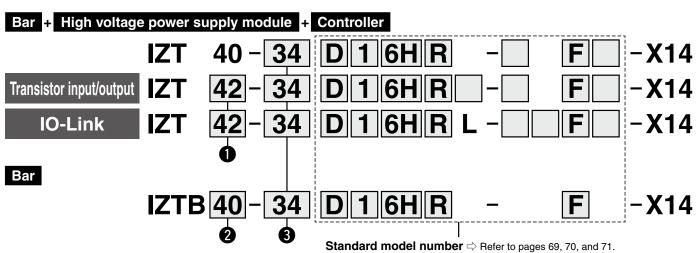

1 Type
41
42

2 Type 40 42

3 Bar length

Ctondoud	Symbol	16	22	34	40	46	58	64	82	112	130	160	190	232	250
Standard	Bar length [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
Non-standard		The bar of non-standard length is available. Refer to "How to Order" above.													



Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

Specifications

Ionizer Specifications

	Ionizer model	IZT40	IZT41(-L)	IZT42(-L)				
Ion generation method		Corona discharge type						
Method of	applying voltage	AC, DC*1 Dual AC						
Applied vo	Itage	±7000 V ±6000 V						
Offset volta	age* ²	Within ±30 V						
	Fluid	Air (Clean, dry air)						
	Operating pressure		0.5 MPa or less					
Air purge	Proof pressure	0.7 MPa						
	Connecting tube size (One side can be plugged.)		Metric size: ø4, ø6, ø8, ø10 Inch size: ø3/16", ø1/4", ø5/16", ø3/8"					
Current co	nsumption	0.7 A or less (+0.6 A or less per ionizer when connected)	0.8 A or less (+0.7 A or less per ionizer when connected)	1.4 A or less (+1.3 A or less per ionizer when connected)				
Power sup	ply voltage		24 VDC ±10%					
NPN specification			Voltage range:	t to DC (-) 5 VDC or less tion: 5 mA or less				
signal*3	PNP specification	_	Connected to DC (+) Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less					
Output	NPN specification	_	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC					
signal* ³	PNP specification		Residual volta	rrent: 100 mA ige: 1 V or less nt at 100 mA)				
IO-Link dev	vice*4	_	Voltage range: 18 to 30 VDC Current consumption: 100 mA or less * For details, refer to the "IO-Link Communication Specifications" table b					
Function		High voltage abnormality detection (lon generation stops when an abnormality is detected.)						
Effective st	tatic neutralization distance		50 to 2000 mm					
Ambient and fluid	Controller, High voltage power supply module		0 to 40°C					
temperatures	Bar		0 to 50°C					
Ambient hu	umidity	35 to 80%RH (No condensation)						
	Controller	Cove	r: ABS, Aluminum, Switch: Silicone rub	ober*3				
Material	High voltage power supply module		ABS, Aluminum					
u.criai	Bar	Cover: ABS, Emitter cartridge: PBT, Emitter: Tungsten or Single crystal silicon, High voltage cable: Silicone rubber, PVC						
Standards/	/Directive	CE (EMC directive, RoHS directive), UKCA						
4 A l	thodo or anodo to DC	1	, , , , , , , , , , , , , , , , , , , ,					

- *1 Apply cathode or anode to DC.
- *2 When air purge is performed between a charged object and an ionizer at a distance of 300 mm
- *3 For transistor input/output specification products
- *4 For IO-Link compatible products

IO-Link Communication Specifications

IO-Link type	Device
IO-Link version	V1.1
Configuration file format	IODD file*1
Communication speed	COM2 (38.4 kbps)
Min. cycle time	8.0 ms
Process data length	Input data: 13 bytes, Output data: 9 bytes
On request data communication	Yes
Data storage function	Yes
Event function	Yes
Vendor ID	131 (0 x 0083)
Device ID	581 (0 x 000245)

 $^{*1 \ \} The \ configuration \ file \ can \ be \ downloaded \ from \ the \ SMC \ website: https://www.smcworld.com$



Specifications

Weight		[9]
	Controller	High voltage power supply module
IZT40	210 (230)	680 (690)
IZT41(-L)	210 (230)	680 (690)
IZT42(-L)	210 (230)	1350 (1360)

 $[\]ast\,$ The values in () are for IO-Link compatible products.

Number of Emitter Cartridges/Bar Weight

[g]

Bar length symbol		16	22	34	40	46	58	64	82	112	130	160	190	232	250
Number of emitter cartridges (pcs.)		2	3	5	6	7	9	10	13	18	21	26	31	38	41
IZT40	High voltage cable (1 m)	360	420	530	590	650	760	820	990	1270	1440	1720	2010	2410	2580
IZT41	High voltage cable (2 m)	490	550	660	720	780	890	950	1120	1400	1570	1850	2140	2540	2710
(Common for bars)	High voltage cable (3 m)	610	670	780	840	900	1010	1070	1240	1520	1690	1970	2260	2660	2830
	High voltage cable (1 m)	520	580	690	750	810	920	980	1150	1430	1600	1880	2170	2570	2740
IZT42	High voltage cable (2 m)	770	830	940	1000	1060	1170	1230	1400	1680	1850	2130	2420	2820	2990
	High voltage cable (3 m)	1010	1070	1180	1240	1300	1410	1470	1640	1920	2090	2370	2660	3060	3230


AC Adapter (Sold Separately) ⇒ Refer to page 78.


IZT40-CG1, IZT40-CG2
100 to 240 VAC, 50/60 Hz
1.9 A
0 to 40°C
35 to 65%RH (No condensation)
375 g
IEC 62368-1

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

Construction

End bracket
Intermediate bracket
Power supply cable
Communication cable

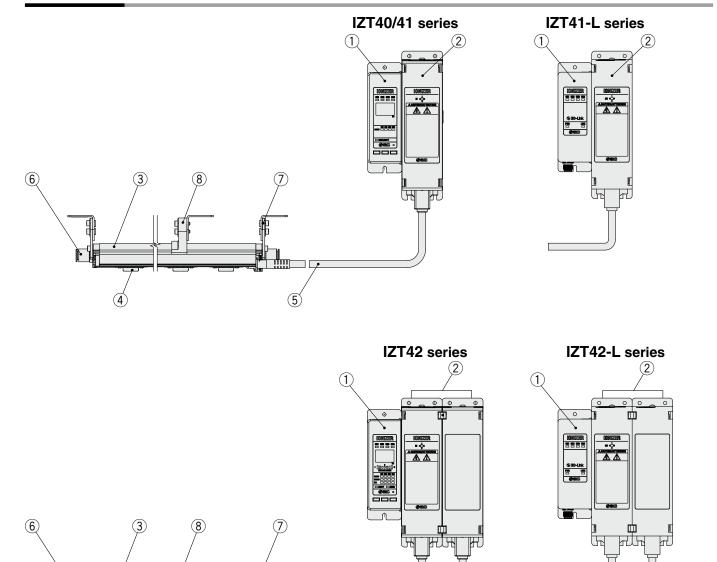

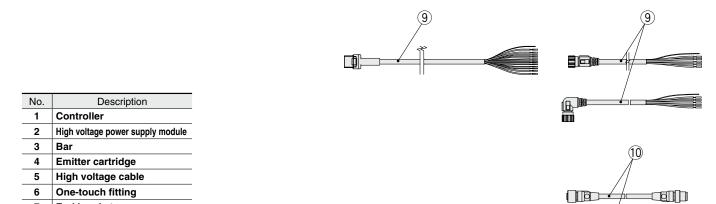

SMC

76

L)/ IZS40/41/42

IZN10E

ΙZΕ

01521

7 N B

IZD10/IZE11

IZH10


Antistatic Equipment

Accessories (for Individual Parts)

Emitter cartridge (For IZT40, 41(-L), 42(-L))

IZT40-ND

High speed static neutralization





Symbol Material Type High speed static Tungsten neutralization cartridge Silicon Energy saving static Tungsten neutralization cartridge М Silicon





Cartridge color	Emitter material
White	Tungsten
Gray	Silicon

IZS40-N|V

Energy saving high-efficiency

Emitter cartridge type/Emitter material



Symbol	Type	Material
V	Energy saving	Tungsten
S	high-efficiency cartridge	Silicon

Cartridge color	Emitter material
White	Tungsten
Gray	Silicon

Bar bracket (For IZT40, 41(-L), 42(-L))

IZT40-B E1

Bar bracket

Symbol	Туре
E1 End bracket 1	
E2	End bracket 2
M1 Intermediate bracket	
M2	Intermediate bracket 2

* Refer to the table below for selecting a bracket.

Bracket combinations


	Intermediate bracket 1	Intermediate bracket 2
End bracket 1	○ (Adjustment angle ±90°)	×
End bracket 2	×	O (Adjustment angle ±15°)

O: Available X: Not available

* The number of intermediate brackets required, as listed below, depends on the bar length. 2 end brackets are always required regardless of the bar length.

Number of brackets

Number of Brackets					
Bar length	End bracket	Intermediate bracket			
160 to 760		None			
820 to 1600	2	1			
1660 to 2380	2	2			
2440 to 2500		3			



Power supply cable (IZT40, 41, 42)

IZT40 - CP

Cable specifications ⇒ Refer to page 89.

◆ Power supply cable length



Symbol	Length [m]
3	3
5	5
10	10
15	15

IO-Link power supply cable (IZT41-L, 42-L)

IZT41-CPJ



Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
J		3
K	Straight	5
M		10
S		3
Т	Angled	5
Z		10

IO-Link communication cable (IZT41-L, 42-L)

IZT41-CEG



Communication cable entry direction/length

Symbol	Entry direction	Length [m]
E		0.5
G		1
Н	Ctroight	2
J	Straight	3
K		5
M		10
Р		0.5
Q		1
R	Angled	2
S	Angled	3
Т		5
Z		10

DIN rail mounting bracket for controller and high voltage power supply module

IZT40 - B 1

DIN rail mounting bracket

Symbol	Туре
1	For Controller
2	For High voltage power supply module
3	For High voltage power supply module for IZT42

For Controller

For High voltage power supply module







IZT40-B1

IZT40-B2

IZT40-B3

High voltage cable holder

IZT40 - E 1

High voltage cable holder

····gi	i voitage cable fiolat
Symbol	Туре
1	Straight
2	Elbow





IZT40-E1

IZT40-E2

Antistatic Equipment

Accessories Sold Separately

Drop prevention cover (For IZT40, 41(-L), 42(-L))

IZS40-E2


Number of fixed emitter cartridges

Symbol	Туре
2	2 pcs.
3	3 pcs.
4	4 pcs.
5	5 pcs.


Standard bar length

Bar length	Number of required drop prevention covers			
symbol	IZS40-E2	IZS40-E3	IZS40-E4	IZS40-E5
16	1	_	_	_
22	_	1	_	_
34	_	_	_	1
40	_	2	_	_
46	_	1	1	_
58	_	_	1	1
64	_	_	_	2
82	_	1	_	2
112	_	1	_	3
130	_	2	_	3
160	_	2	_	4
190	_	2	_	5
232	_	1	_	7
250	_	2	_	7

* Please contact SMC for the non-standard bar length.



Specify "-X14" at the end of the standard model number when ordering a drop prevention cover attached to the body.



AC adapter (IZT40, 41, 42)

IZT40-CG

AC cord selection

Symbol	Type
1	With AC cord
2	Without AC cord

- * An AC cord is only for use in Japan. (Rated voltage 125 V, Plug JIS C 8303, Inlet IEC 60320-C6) The external input/output function cannot be used when an AC adapter is being used.
- * Cannot be used for the IO-Link specification



AC adapter

Separate cable (IZT40, 41, 42)

IZT40-CF

Cable length

Symbol	Length [m]
1	1
2	2
3	3



Cleaning kit (For IZT40, 41, 42)

IZS30 - M2

State of the

Replacement felt pad: IZS30-A0201

Replacement rubber grindstone: IZS30-A0202

Wiring: IZT40, 41(-L), 42(-L)

IZT40

Cable color	Signal name	Signal direction	Description
Brown	DC (+)	IN	Connects to the power supply to operate the product
Blue	DC (-)	IN	Connects to the power supply to operate the product
Green	F.G.	_	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential for the offset voltage. If not grounded, sufficient performance cannot be obtained and equipment failure may result.
Pink	Ion generation stop signal CH1	_	_
Gray	Ion generation stop signal CH2	_	_
Yellow	Ion generation stop signal CH3	_	_
Purple	Ion generation stop signal CH4	_	_
White	Maintenance detection signal	_	_
Black	Error signal	_	_
Orange	Unused	_	_

IZT41, 42

Cable color	Signal name	Signal direction	Description
Brown	DC (+)	IN	Connects to the power supply to operate the product
Blue	DC (-)	IN	Connects to the power supply to operate the product
Green	F.G.	_	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential for the offset voltage. If not grounded, sufficient performance cannot be obtained and equipment failure may result.
Pink	Ion generation stop signal CH1	IN	Signal input to turn ion generation of each bar (CH1 to 4) ON/OFF
Gray	Ion generation stop signal CH2	IN	NPN specification: Stops generating ions by connecting to 0 V (Starts generating ions when disconnected)
Yellow	Ion generation stop signal CH3	IN	PNP specification: Stops generating ions by connecting to +24 VDC (Starts generating ions when
Purple	Ion generation stop signal CH4	IN	disconnected)
White	Maintenance detection signal	OUT (A contact)	Turns ON when emitters need cleaning
Black	Error signal	OUT (B contact)	Turns OFF in case of power supply failure, high voltage failure, CPU failure, communication failure, cooling fan motor failure, output signal overcurrent, or inconsistent or CH setting duplication or non-connection of high voltage power supply module (ON when there is no problem)
Orange	_	_	

IZT41-L, 42-L: IO-Link Power Supply Cable

No.	Cable color	Signal name	Description		
1	Brown DC (1)				
2	Brown	DC (+)	Commande to the manuar arranks to an exist the invitor		
3	Blue	DC (-)	Connects to the power supply to operate the ionizer		
4	Diue				
5	Green	F.G.	Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential for ionizer.		


IZT41-L, 42-L: IO-Link Communication Cable

No.	Signal name	Description
1	L+	Power supply for IO-Link
2	_	_
3	L-	Power supply for IO-Link
4	C/Q	_
5	_	_

Frequencies


Series	IZT40	IZT41(-L)	IZT42(-L)
Controller	IZTC40	IZTC	41(-L)
	1	1	0.1
	3	3	0.5
	5	5	1
	8	8	3
Frequency [Hz]	10	10	5
	15	15	8
	20	20	10
	30	30	15
	DC+	DC+	20
	DC-	DC-	30


Wiring Circuit: IZT40

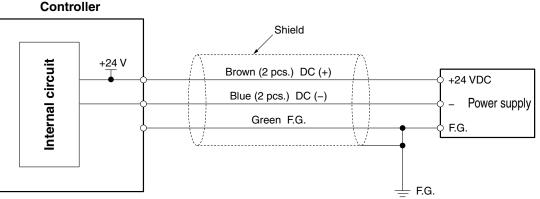

SMC


^{*} Refer to the power supply cable dimensions on page 89 for the cable specifications.

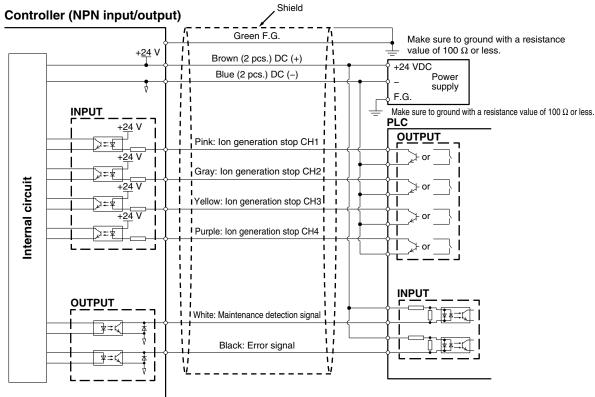

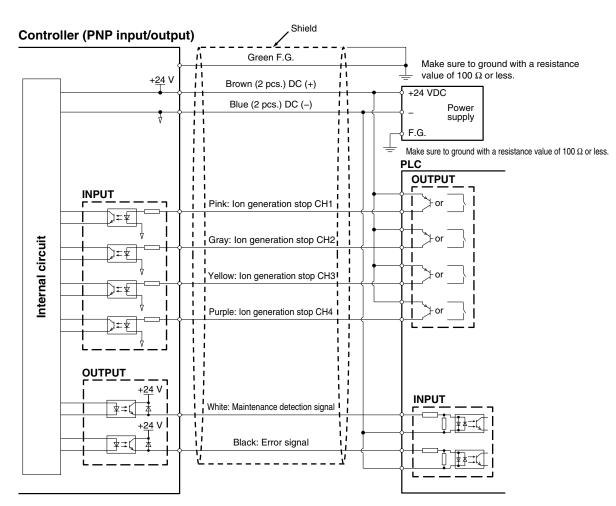


Wiring Circuit: IZT41-L, 42-L

Controller (IO-Link)

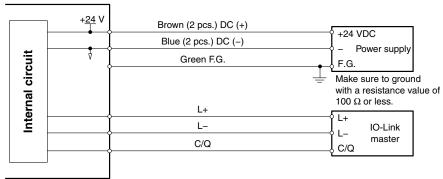





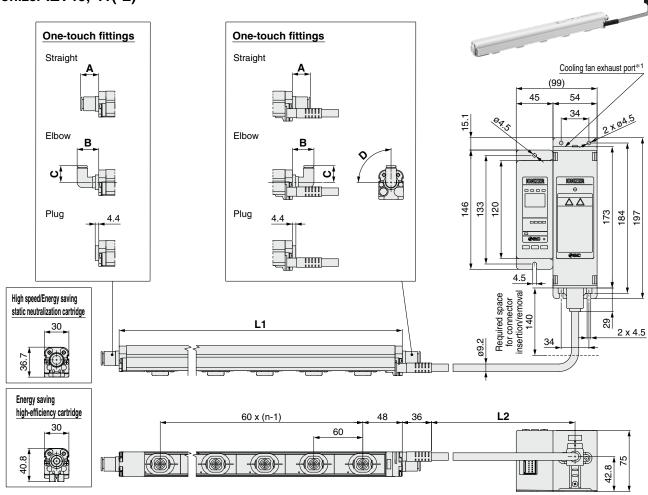

^{*1} Refer to Mounting (12) in the Specific Product Precautions (page 113).

No. of Emitter Cartridges n, Bar Length L1

n [pcs.]	L1 [mm]
2	160
3	220
5	340
6	400
7	460
9	580
10	640
13	820
18	1120
21	1300
26	1600
31	1900
38	2320
41	2500
	2 3 5 6 7 9 10 13 18 21 26 31 38

High Voltage Cable Length L2

Symbol	L2 [mm]
1	1000
2	2000
3	3000


One-touch Fittings


Straight		[mm]
	Applicable tubing O.D.	Α
Metric	ø4	13
	ø6	13
	ø8	15
	ø10	22
Inch	ø3/16"	15
	ø1/4"	14
	ø5/16"	15
	ø3/8"	23

Elbow				[mm]
	Applicable tubing O.D.	В	С	D
Metric	ø4	25	19	90°
	ø6	27	21	75°
	ø8	29	24	73°
	ø10	37	27	71°
Inch	ø3/16"	26	20	90°
	ø1/4"	27	21	75°
	ø5/16"	29	24	73°
	ø3/8"	36	27	71°


Dimensions

End bracket IZT40-BE1 Intermediate bracket IZT40-BM1

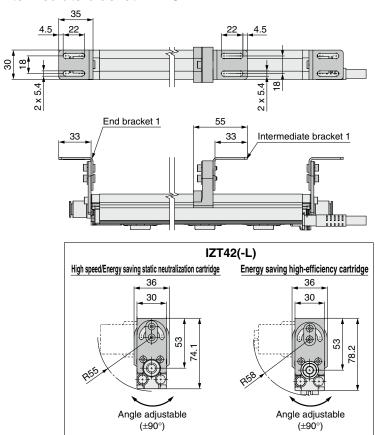


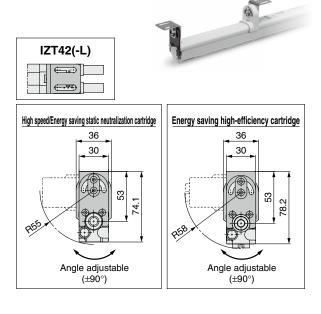



End bracket IZT40-BE2 Intermediate bracket IZT40-BM2

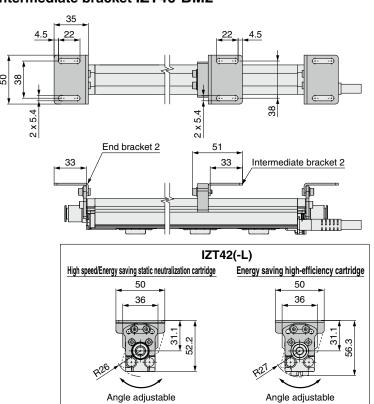


(±15°)




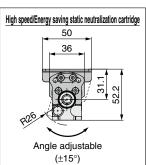

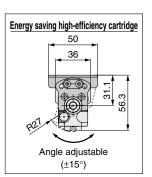





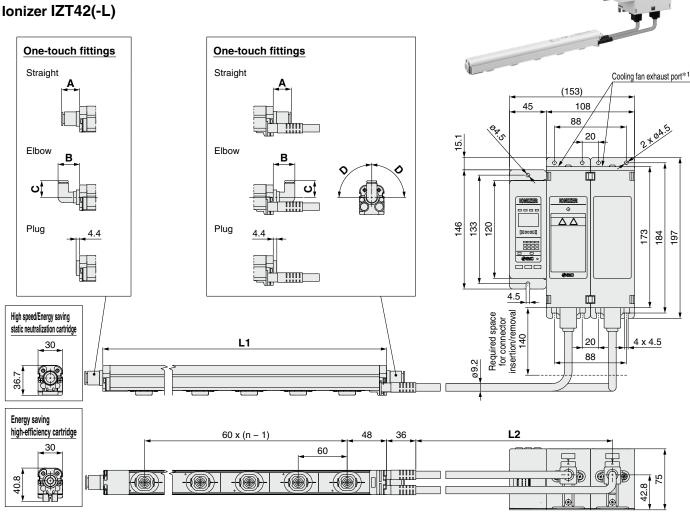

^{*1} Refer to Mounting (12) in the Specific Product Precautions (page 113).

No. of Emitter Cartridges n, Bar Length L1

Part no.	n [pcs.]	L1 [mm]
IZT□-16	2	160
IZT□-22	3	220
IZT□-34	5	340
IZT□-40	6	400
IZT□-46	7	460
IZT□-58	9	580
IZT□-64	10	640
IZT□-82	13	820
IZT□-112	18	1120
IZT□-130	21	1300
IZT□-160	26	1600
IZT□-190	31	1900
IZT□-232	38	2320
IZT□-250	41	2500

High Voltage Cable Length L2

Symbol	L2 [mm]
1	1000
2	2000
3	3000

One-touch Fittings


Straight	Straight [mm]		
	Applicable tubing O.D.		
	ø4	13	
Metric	ø6	13	
wetric	ø8	15	
	ø10	22	
	ø3/16"	15	
Inch	ø1/4"	14	
Inch	ø5/16"	15	
	ø3/8"	23	


Elbow				[mm]
	Applicable tubing O.D.	В	С	D
	ø4	25	19	90°
Metric	ø6	27	21	75°
wetric	ø8	29	24	73°
	ø10	37	27	71°
	ø3/16"	26	20	90°
Inch	ø1/4"	27	21	75°
IIICII	ø5/16"	29	24	73°
	ø3/8"	36	27	71°


IZT40/41(-L)/42(-L) Series

Dimensions


Controller IZT40, 41, 42

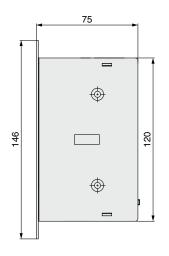


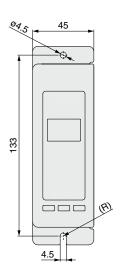

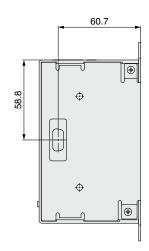







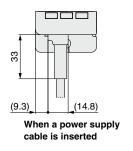


When a DIN rail mounting bracket (IZT40-B1) is used

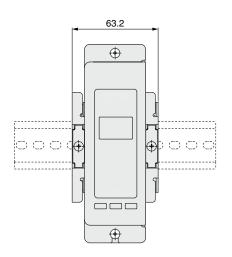


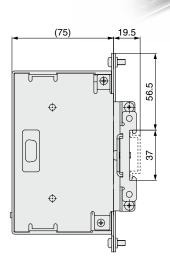


Dimensions


Controller IZT41-L, 42-L

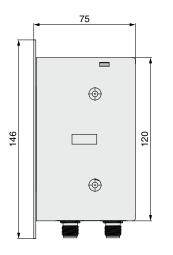


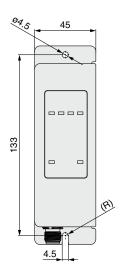


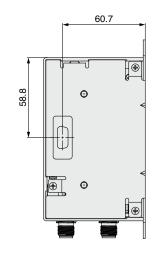






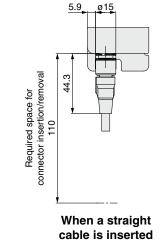


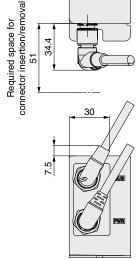

When angled cables are inserted

When a DIN rail mounting bracket (IZT40-B1) is used

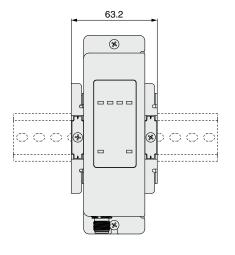

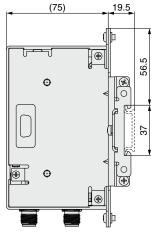

Antistatic Equipment

IZS40/41/42


ĬΖF


IZD10/IZE11


IZT40/41(-L)/42(-L) Series

Dimensions


High voltage power supply module for IZT40, 41(-L)

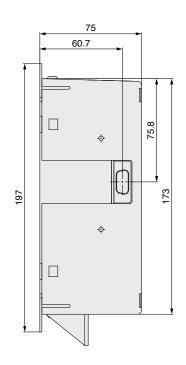

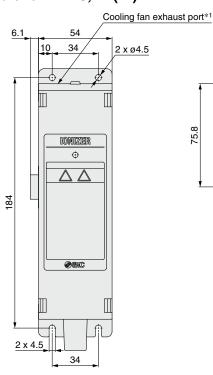


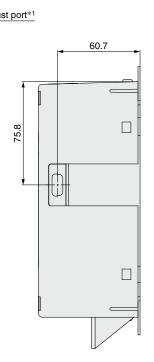







*1 Refer to Mounting (12) in the Specific Product Precautions (page 113).



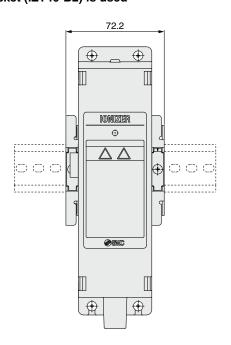


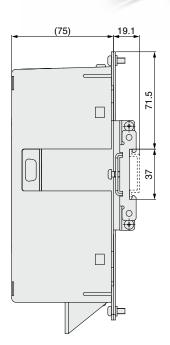




Dimensions

High voltage power supply module for IZT42(-L)

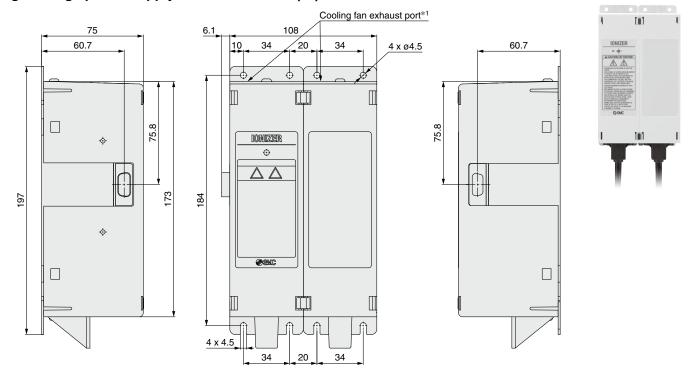

*1 Refer to Mounting (12) in the Specific Product Precautions (page 113).



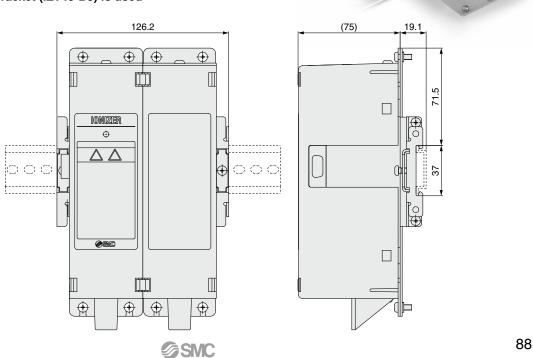

IZS40/41/42

ĬΖ

IZG10


IZD10/IZE1

Antistatic Equipment

IZT40/41(-L)/42(-L) Series

Dimensions






Cable Length L3

Cabic Edingui	
Part number	L3 [mm]
IZT40-CP3	2950
IZT40-CP5	5000
IZT40-CP10	9800
IZT40-CP15	15000

Cable Specifications

No. of cable wires/Size		12 cores/AWG20 (4 cores), AWG28 (8 cores)
Conductor	Nominal cross section	0.54 mm² (4 cores), 0.09 mm² (8 cores)
Conductor	O.D.	0.96 mm (4 cores), 0.38 mm (8 cores)
Insulator O.D.	7	1.4 mm Brown, Blue
	O.D.	0.7 mm White, Green, Pink, Purple, Gray, Yellow, Orange, Black
Chaath	Material	Lead-free PVC
Sheath	O.D.	6.2 mm

IO-Link power supply cable IZT41-L, 42-L

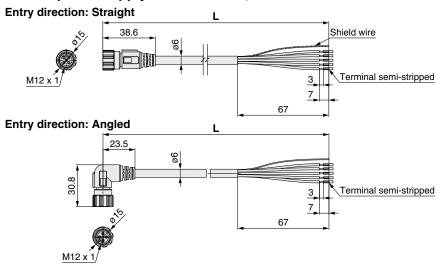


Power Supply Cable Length L

Symbol	Entry direction	Length [m]
IZT41-CPJ	Straight	3
IZT41-CPK		5
IZT41-CPM		10
IZT41-CPS	Angled	3
IZT41-CPT		5
IZT41-CPZ		10

Power Supply Cable Specifications

No. of cable wires/Size		5 cores/AWG22
Conductor	Nominal cross section	0.3 mm ²
	O.D.	0.76 mm
Insulator	O.D.	1.3 mm
Sheath	Material	PVC (Lead-free)
	O.D.	6.0 mm

IO-Link communication cable IZT41-L, 42-L

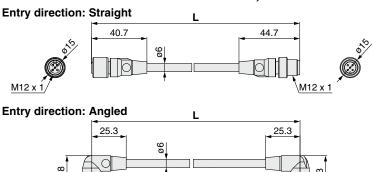

Communication Cable Length L

Symbol	Entry direction	Length [m]
IZT41-CEE		0.5
IZT41-CEG		1
IZT41-CEH	Straight	2
IZT41-CEJ	Straight	3
IZT41-CEK		5
IZT41-CEM		10
IZT41-CEP		0.5
IZT41-CEQ		1
IZT41-CER	Anglad	2
IZT41-CES	Angled	3
IZT41-CET		5
IZT41-CEZ		10


Communication Cable Specifications

No. of cable wires/Size		5 cores/AWG22
Conductor	Nominal cross section	0.3 mm ²
	O.D.	0.76 mm
Insulator	O.D.	1.5 mm
Sheath	Material	PVC (Lead-free)
	O.D.	6.0 mm



Dimensions


Separate cable IZT40-CF□




Cable Length L4


Part number	L4 [mm]
IZT40-CF1	1000
IZT40-CF2	2000
IZT40-CF3	3000


When a separate cable is used

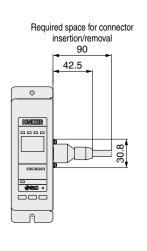

53.7

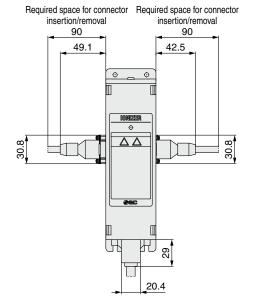



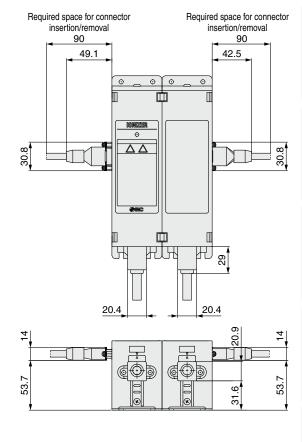


IZT40/41(-L)/42(-L) Series


Dimensions

High voltage cable holder Straight IZT40-E1

Cross-sectional view A-A

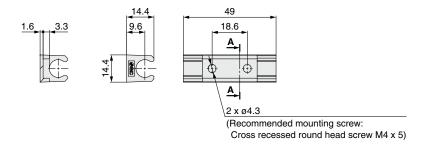

Elbow IZT40-E2

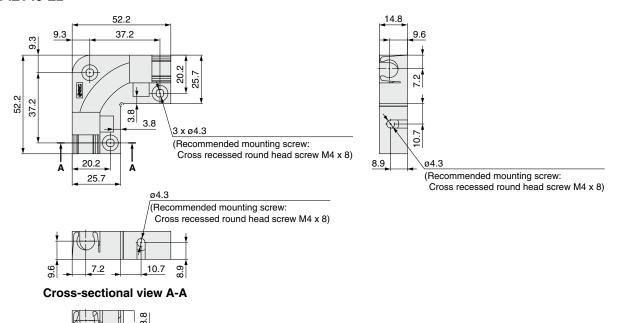


IZT43(-L) Series **Technical Data**

Static Neutralization Characteristics


Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm, X 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

1 Installation Distance and Discharge Time (Discharge Time from 1000 V to 100 V)


Static Neutralization Range (Discharge Time from 1000 V to 100 V)

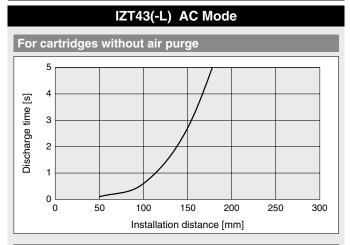


High speed static neutralization cartridge

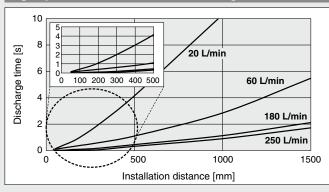

Energy saving static neutralization cartridge

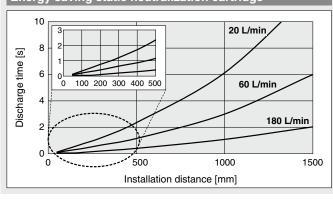


IZT43(-L) Ion Generation Frequency: 30 Hz

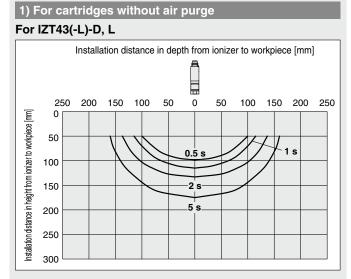


2) High speed static neutralization cartridge, Supply pressure: 0.5 MPa 3) Energy saving static neutralization cartridge, Supply pressure: 0.5 MPa

For IZT43(-L)-D

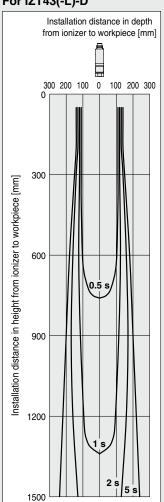

For IZT43(-L)-L

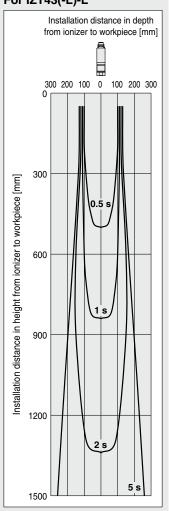





Technical Data IZT43(-L) Series

Static Neutralization Characteristics

* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

③ Pressure — Flow Rate Characteristics

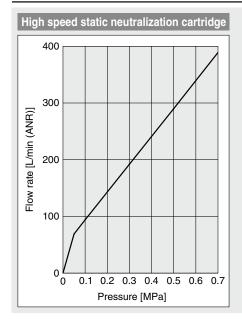


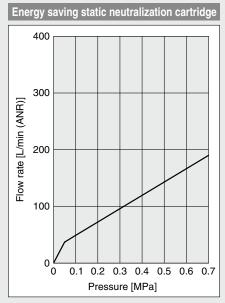

How to measure

a) Air supply

IZT43(-L)-D, L Connecting tube: O.D. Ø6 x I.D. Ø4



Separate Controller

Nozzle Type Ionizer






High voltage power

How to Order

Nozzle + High voltage power supply module + Controller

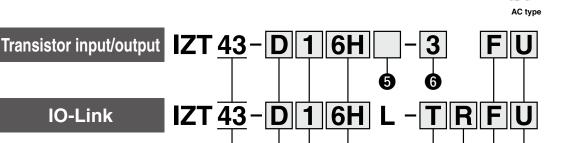

IO-Link

Model 1

Symbol

3 5 10

15

Symbol	Model
43	AC type

Emitter cartridge type

Symbol	Туре
D	High speed static neutralization cartridge
L	Energy saving static neutralization cartridge

6 Power supply cable length

3 High voltage cable length

Symbol	Length [m]		
1	1		
2	2		
3	3		

The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders ⇒ Refer to page 99

Fileson to page out		
Symbol	mbol Straight Elbow	
1	1	1
2	2	1
3	3	1

Power supply cable entry direction/length

Symbol	Entry direction	Length [m]	
N	None		
J		3	
K	Straight	5	
M		10	
S		3	
Т	Angled	5	
Z		10	

4 One-touch fitting

Symbol	Metric size		
6H	ø6 Straight		
6L	ø6 Elbow		
Symbol	Inch size		
7H	ø1/4" Straight		
_			

5 Input/Output

	Symbol	Input/Output		
NII NPN		NPN		
	Р	PNP		

8 Communication cable entry direction/length

Symbol	Entry direction Length [m]		
N	None		
E		0.5	
G		1	
Н	Straight	2	
J	Straight -	3	
K		5	
M		10	
Р		0.5	
Q		1	
R	Angled	2	
S		3	
T		5	
Z		10	

To use an AC adapter, specify "N", and select the AC adapter sold separately.

Length [m]

10

15 None

Nozzle bracket ⇒ Refer to page 99.

O TITELLE MILLION , THE PROJECTION		
Symbol Type		
Nil Without bracket		
В	L-bracket	
F	Angle adjustment bracket	

DIN rail mounting bracket for controller and high voltage power supply module

→ Heler to page 99.				
Symbol For Controller For High voltage power supply modi				
Nil	Nil None None			
U	Included	Included Included		
W	Included None			
Υ	None	Included		

ΖŁ

For Individual Parts

How to Order

Combinations

	Nozzle/ IZTN	High voltage power supply module/IZTP	Controller/ IZTC	
	43	43	41	
IZT43	•	•	•	



AC type

Nozzle

IZTN 43-	- D	1	6H	- F
•	2	6	4	6

Model

	U Wodel	
Symbol	Model	
43	AC type	

2 Emitter cartridge type

	<u>0</u>	
Symbol	Type	
D	High speed static neutralization	
U	cartridge	
	Energy saving static neutralization	
_	cartridge	

3 High voltage cable length

Symbol	High voltage cable length [m]
1	1
2	2
3	3

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders ⇒ Refer to page 99.

Time of the same and the same a		
Symbol	IZT	43
	Straight	Elbow
1	1	1
2	2	1
3	3	1

⚠ Caution

The transistor input/output specification and the IO-Link specification cannot be installed in combination.

4 One-touch fitting

Transistor input/output


Symbol	Metric size	
6H	ø6 Straight	
6L	ø6 Elbow	
Symbol	Inch size	
Symbol 7H	Inch size ø1/4" Straight	

5 Nozzle bracket ⇒ Refer to page 99.

Symbol	Type
Nil	Without bracket
В	L-bracket
F	Angle adjustment bracket

IO-Link

Controller

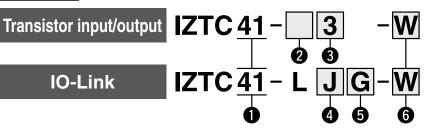

Model 1

Symbol	Model
41	AC type, Dual AC type

4 Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
N	No	ne
J		3
K	Straight	5
M	-	10
S		3
T	Angled	5
Z		10

2 Input/Output

<u> </u>	
Symbol	Input/Output
Nil	NPN
Р	PNP

5 Communication cable entry direction/length

		.,
Symbol	Entry direction	Length [m]
N	None	
E		0.5
G		1
Н	Straight	2
J		3
K		5
M		10
Р		0.5
Q	Angled	1
R		2
S		3
		5
Z		10

Power supply cable length

Tower supply cubic length		
Symbol	Length [m]	
3	3	
5	5	
10	10	
15	15	
N	None	


AC, Dual AC type

6 DIN rail mounting bracket

⇒ Refer to page 99.

Symbol	Type
Nil	None
W	Included

High voltage power supply module





• mouor	
Symbol	Model
43	AC type (For Nozzle)

2	DIN	rail mounting bracket ⇒ Refer to page 9

Dily rail illouriting bracket -/ heler to page s		
Symbol	Type	
Nil	None	
V	Included	





Specifications

Ionizer Specifications

In representation weather		
Ion generation method		Corona discharge type
Method of applying voltage		AC, DC*1
Applied voltage		±6000 V
Offset voltage*2		±30 V or less
	Fluid	Air (Clean, dry air)
Air purge	Operating pressure	0.7 MPa or less
All purge	Connecting tube size	Metric size: ø6 Inch size: ø1/4"
Current co	nsumption	0.4 A or less (+0.4 A or less per ionizer when connected)
Power sup	ply voltage	24 VDC ±10%
Input	NPN specification	Connected to DC (-) Voltage range: 5 VDC or less Current consumption: 5 mA or less
signal*3	PNP specification	Connected to DC (+) Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less
Output signal*3	NPN specification	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC
Signal	PNP specification	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA)
IO-Link device*4		Voltage range: 18 to 30 VDC Current consumption: 100 mA or less * For details, refer to the "IO-Link Communication Specifications" table below.
Function		Auto balance, Maintenance detection, High voltage abnormality detection (Ion generation stops when an abnormality is detected.), and Ion generation stop input
Effective s	tatic neutralization distance	50 to 2000 mm
Ambient and fluid High voltage power supply module temperatures Nozzle		0 to 40°C
Ambient humidity		35 to 65%RH (No condensation)
	Controller	Cover: ABS, Aluminum, Switch: Silicone rubber*3
	High voltage power supply module	ABS, Aluminum
Material	Nozzle	Housing: PBT, Stainless steel, Emitter cartridge: PBT, Emitter: Tungsten, High voltage cable: Silicone rubber, PVC, Stainless steel
Standards/	/Directive	CE (EMC directive, RoHS directive), UKCA
	the de ex exede to DC	

^{*1} Apply cathode or anode to DC.

IO-Link Communication Specifications

IO-Link type	Device
IO-Link version	V1.1
Configuration file format	IODD file*1
Communication speed	COM2 (38.4 kbps)
Min. cycle time	8.0 ms
Process data length	Input data: 13 bytes, Output data: 9 bytes
On request data communication	Yes
Data storage function	Yes
Event function	Yes
Vendor ID	131 (0 x 0083)
Device ID	581 (0 x 000245)

 $^{*1 \ \} The \ configuration \ file \ can \ be \ downloaded \ from \ the \ SMC \ website: https://www.smcworld.com$



^{*2} When air purge is performed between a charged object and an ionizer at a distance of 300 mm

^{*3} Only applicable to transistor input/output specification products

^{*4} Only applicable to IO-Link compatible products

Specifications

Weight		[9]
	Controller	High voltage power supply module
IZT43(-L)	210 (230)	680 (690)

^{*} The values in () are for IO-Link compatible products.


Nozzle Weight [9		[g]
	Nozzle	
	High voltage cable (1 m)	200
IZT43	High voltage cable (2 m)	310
	High voltage cable (3 m)	440


AC Adapter (Sold Separately) ⇒ Refer to page 100.


Model	IZT40-CG1, IZT40-CG2
Input voltage	100 to 240 VAC, 50/60 Hz
Output current	1.9 A
Ambient temperature	0 to 40°C
Ambient humidity	35 to 65%RH (No condensation)
Weight	375 g
Safety standards	IEC 62368-1


Construction

IZT43(-L) series

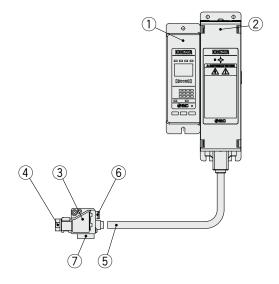






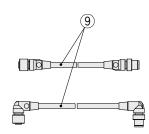

No.	Description
1	Controller
2	High voltage power supply module
3	Nozzle
4	Emitter cartridge
5	High voltage cable
6	One-touch fitting
7	Bracket
8	Power supply cable
9	Communication cable

Accessories (for Individual Parts)

Emitter cartridge (For IZT43(-L))



Emitter cartridge type/ Emitter material


Symbol	Туре	Material
D	High speed static neutralization cartridge	Tungsten
L	Energy saving static neutralization cartridge	Tungsten



Tungsten (Color: White)


Cartridge color	Emitter material
White	Tungsten

Nozzle bracket (For IZT43(-L))



Nozzle bracket

Symbol	Type
L1	L-bracket
L2	Angle adjustment bracket

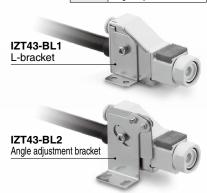

Power supply cable (IZT43)

IZT40-CP3

Cable specifications

⇒ Refer to page 108.

Power supply cable length



Length [m]
3
5
10
15

IO-Link power supply cable (IZT43-L)

IZT41-CP J



Power supply cable entry direction/length

Tonor cuppiy cable citaly allocate.				
Symbol	Entry direction	Length [m]		
J		3		
K	Straight	5		
M		10		
S		3		
Т	Angled	5		
Z		10		

IO-Link communication cable (IZT43-L)

IZT41-CEG



Communication cable entry direction/length

Symbol	Entry direction	Length [m]
E		0.5
G		1
Н	Straight	2
J		3
K		5
M		10
Р	Angled	0.5
Q		1
R		2
S		3
Т		5
Z		10

DIN rail mounting bracket for controller and high voltage power supply module

IZT40-B 1

DIN rail mounting bracket

Symbol	Туре
1	For Controller
2	For High voltage power supply module

For Controller

For High voltage power supply module





IZT40-B1

IZT40-B2

High voltage cable holder

IZT40-E 1

High voltage cable holder

Symbol	Type
1	Straight
2	Elbow





IZT40-E1

IZT40-E2

Emitter cartridge type

Symbo	Туре	
D	High speed static neutralization cartridge	
L	Energy saving static neutralization cartridge	



One-touch fitting			
Symbol	Metric size		
6H	ø6 Straight		
61	ø6 Flhow		

-	
Symbol	Inch size
7H	ø1/4" Straight
7L	ø1/4" Elbow

High voltage cable assembly (For IZT43(-L))



High voltage cable length

Symbol	Length [m]
1	1
2	2
3	3



AC adapter (IZT43)

IZT40-CG 1

AC adapter

	•
Symbol	Туре
1	With AC cord
2	Without AC cord

- * An AC cord is only for use in Japan. (Rated voltage 125 V, Plug JIS C 8303, Inlet IEC 60320-C6) The external input/output function cannot be used when an AC adapter is being used.
- * Cannot be used for the IO-Link specification



AC adapter

Separate cable (IZT43)

IZT40-CF 1

Cable length

Symbol	Length [m]			
1	1			
2	2			
3	3			



Cleaning kit (For IZT43)

IZT43 - M2



Replacement felt pad: IZT43-A003

Replacement rubber grindstone: IZT43-A004

Wiring: IZT43(-L)

IZT43

Cable color	Signal name	Signal direction	Description
Brown	DC (+)	IN	Occurs to be the an entire constitute an entire the constitute
Blue	DC (-)	IN	Connects to the power supply to operate the product
Green	F.G.	_	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential for the offset voltage. If not grounded, sufficient performance cannot be obtained and equipment failure may result.
Pink	Ion generation stop signal CH1	IN	
Gray	Ion generation stop signal CH2	IN	Signal input to turn ion generation of each bar (CH1 to 4) ON/OFF
Yellow	Ion generation stop signal CH3	IN	NPN specification: Stops generating ions by connecting to 0 V (Starts generating ions when disconnected) PNP specification: Stops generating ions by connecting to 24 VDC (Starts generating ions when disconnected)
Purple	Ion generation stop signal CH4	IN	The oppositional of the option
White	Maintenance detection signal	OUT (A contact)	Turns ON when emitters need cleaning
Black	Error signal	OUT (B contact)	Turns OFF in case of power supply failure, high voltage failure, CPU failure, communication failure, cooling fan motor failure, output signal overcurrent, or inconsistent or CH setting duplication or non-connection of high voltage power supply module (ON when there is no problem)
Orange	_	_	_

IZT43-L: IO-Link Power Supply Cable

	11,7			
	No.	Cable color	Signal name	Description
	1	Brown	DC (+)	Compared to the manager supply to an array to the grand set
	2			
ſ	3	Blue	DC (-)	Connects to the power supply to operate the product
	4			
	5	Green	F.G.	Frame ground of the product. Make sure to ground with a resistance value of $100~\Omega$ or less to use it as a reference electric potential for the offset voltage. If not grounded, sufficient performance cannot be obtained and equipment failure may result.

^{*} Refer to the power supply cable dimensions on page 108 for the cable specifications.

IZT43-L: IO-Link Communication Cable


N	0.	Signal name	Description
-	1	L+	Power supply for IO-Link
2	2		
3	3	L-	Power supply for IO-Link
4	4	C/Q	_
Ę	5		_

Frequencies

Series	IZT43(-L)
Controller	IZTC41(-L)
	1
	3
	5
	8
Frequency	10
[Hz]	15
	20
	30
	DC+
	DC-

Wiring Circuit: IZT43-L

Controller (IO-Link)

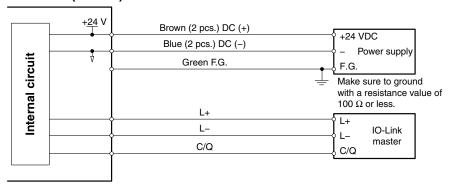

Shield

IZS40/41/42

IZN10

ΙZF

1ZG10


7 N B

IZD10/IZE11

102

Dimensions

Ionizer IZT43(-L)

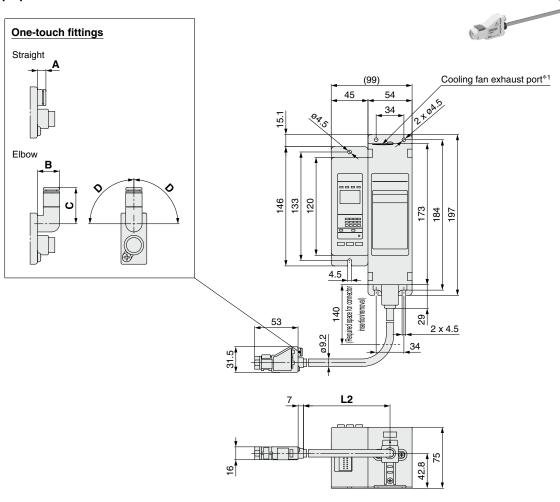

*1 Refer to Mounting (12) in the Specific Product Precautions (page 113).


High Voltage Cable Length L2


ingh voltage oable Echgui Ez			
Symbol	L2 [mm]		
1	1000		
2	2000		
3	3000		

One-touch Fittings


Straight [mm]				
	Applicable tubing O.D.	Α		
Metric	ø6	7		
Inch	ø1/4"	10		


Elbow [mm					
	Applicable tubing O.D.	В	С	D	
Metric	ø6	14	23	105°	
Inch	ø1/4"	14	26	105°	

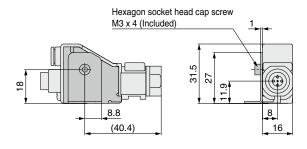





Angle adjustment bracket IZT43-BL2

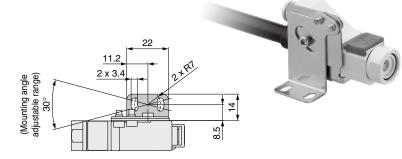

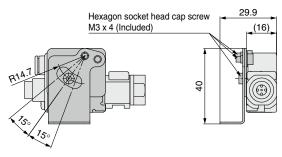



When adjusting the angle

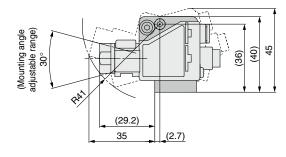

IZN10E

ΙZF

IZG10

α


IZD10/IZE11


IZH10


Antistatic Equipment

Dimensions


Controller IZT43

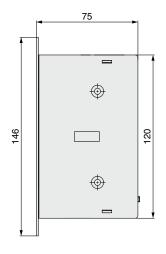


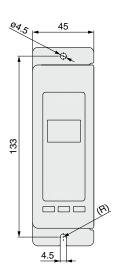

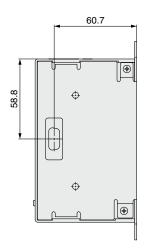







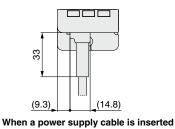



When a DIN rail mounting bracket (IZT40-B1) is used

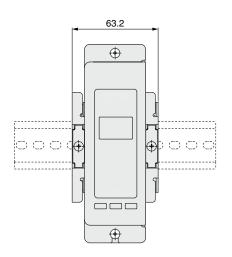


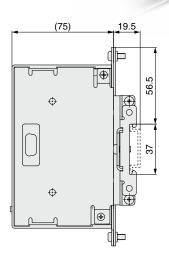


Controller IZT43-L

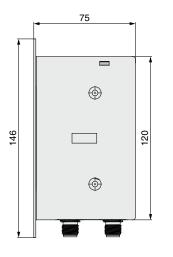


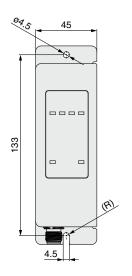


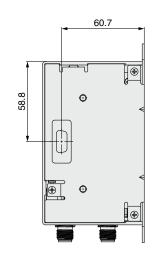






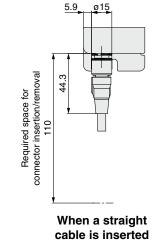


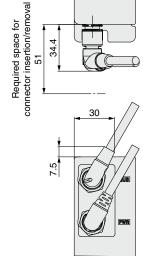

When angled cables are inserted

When a DIN rail mounting bracket (IZT40-B1) is used

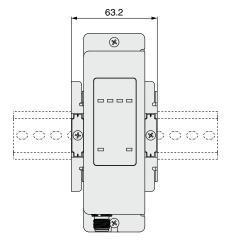

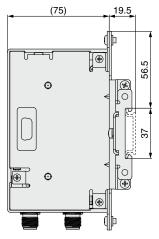

SMC

IZS40/41/42

|ZT40/41(-L)/ |42(-L)/43(-

IZN10E

ΙZF

0157

ď


IZD10/IZE11


ZH10


Antistatic Equipment

Dimensions


High voltage power supply module for IZT43(-L)

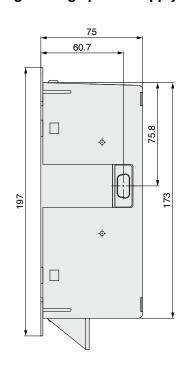

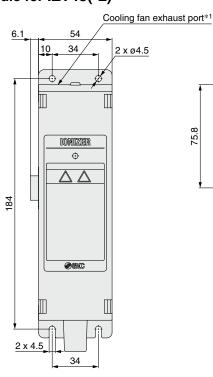

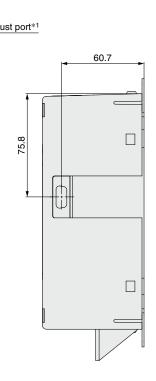







*1 Refer to Mounting (12) in the Specific Product Precautions (page 113).




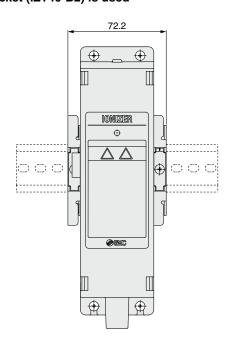


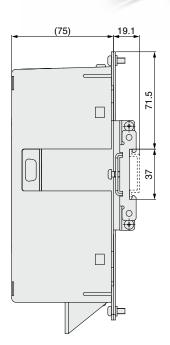



Dimensions






Cable Length L3


Part number	L3 [mm]
IZT40-CP3	2950
IZT40-CP5	5000
IZT40-CP10	9800
IZT40-CP15	15000

Cable Specifications

	- p	
No. of cable wires/Size		12 cores/AWG20 (4 cores), AWG28 (8 cores)
Conductor	Nominal cross section	0.54 mm ² (4 cores), 0.09 mm ² (8 cores)
Conductor	O.D.	0.96 mm (4 cores), 0.38 mm (8 cores)
Insulator	O.D.	1.4 mm Brown, Blue
irisulator		0.7 mm White, Green, Pink, Purple, Gray, Yellow, Orange, Black
Chaoth	Material	Lead-free PVC
Sheath	O.D.	6.2 mm

IO-Link power supply cable IZT43-L

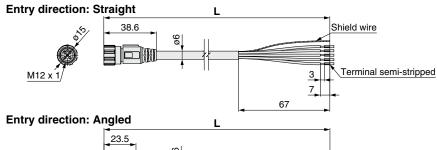

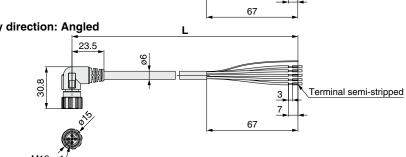


Power Supply Cable Length L


· · · · · · · · · · · · · · · · · · ·	, cance _cg	
Symbol	Entry direction	Length [m]
IZT41-CPJ	Straight	3
IZT41-CPK		5
IZT41-CPM		10
IZT41-CPS	Angled	3
IZT41-CPT		5
IZT41-CPZ		10

Power Supply Cable Specifications

No. of ca	ble wires/Size	5 cores/AWG22
Conductor	Nominal cross section	0.3 mm ²
Conductor	O.D.	0.76 mm
Insulator	O.D.	1.3 mm
Sheath	Material	PVC (Lead-free)
Sileatii	O.D.	6.0 mm

IO-Link communication cable IZT43-L



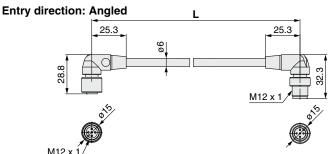

Communication Cable Length L


Communication Cable Longin L				
Symbol	Entry direction	Length [m]		
IZT41-CEE		0.5		
IZT41-CEG		1		
IZT41-CEH	Ctroight	2		
IZT41-CEJ	Straight	3		
IZT41-CEK		5		
IZT41-CEM		10		
IZT41-CEP	Anglad	0.5		
IZT41-CEQ		1		
IZT41-CER		2		
IZT41-CES	Angled	3		
IZT41-CET		5		
IZT41-CEZ		10		
·	·			

Communication Cable Specifications

			- and - checimental	
	No. of cable wires/Size		5 cores/AWG22	
	Conductor	Nominal cross section	0.3 mm ²	
		O.D.	0.76 mm	
	Insulator	O.D.	1.5 mm	
	Sheath	Material	PVC (Lead-free)	
		O.D.	6.0 mm	

Dimensions


Separate cable IZT40-CF□





Cable Length L4


Part number	L4 [mm]			
IZT40-CF1	1000			
IZT40-CF2	2000			
IZT40-CF3	3000			

When a separate cable is used

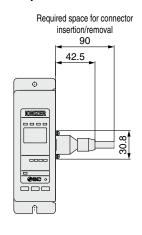

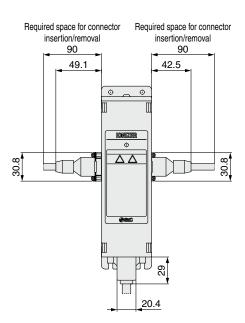






Dimensions

High voltage cable assembly IZT43-A002-□





Cable Length L5

L5 [mm]	
1000	
2000	
3000	


High voltage cable holder Straight IZT40-E1

Cross-sectional view A-A



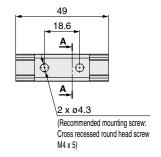

Elbow IZT40-E2

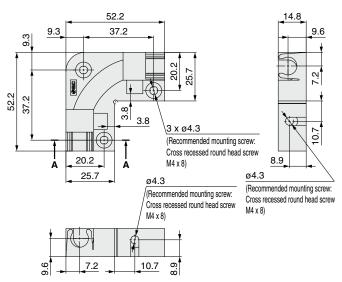

Cross-sectional view A-A





Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Selection

⚠ Warning

- 1. This product is intended to be used with general factory automation (FA) equipment.
 - If considering using the product for other applications (especially those indicated in Warning (4) in the safety instructions), please consult with SMC beforehand.
- 2. Use within the specified voltage and temperature ranges.
 - Using outside of the specified voltage can cause a malfunction, damage, electric shock, or fire.
- Use clean compressed air as fluid. (A compressed air quality of Class 2.4.3, 2.5.3, 2.6.3, or higher according to ISO 8573-1:2010 (JIS B 8392-1:2012) is recommended for operation.)
 - This product is not explosion proof. Never use flammable gases or explosive gases as a fluid and never use this product in the presence of such gases.
 - Please contact us when fluids other than compressed air are used
- 4. This product is not explosion-protected.
 - Never use this product in locations where the explosion of dust is likely to occur or flammable or explosive gases are used. This can cause a fire.

⚠ Caution

- 1. Clean specification is not available with this product.
 - A minute amount of particles are generated due to wearing of the emitters while the product is operating.
 - When bringing into a clean room, confirm the required cleanliness before use.

Mounting

⚠ Warning

- Reserve enough space for maintenance, piping, and wiring.
 - Please take into consideration that the connector connecting part, plug connecting part, and One-touch fittings for supplying air need enough space for the cable and air tubing to be easily attached/detached.
 - To avoid unreasonable stress applied to the connector mounting part, plug connecting part, and One-touch fitting mounting part, bending of the cable or air tubing should be more than the min. bending radius.
 - If the cable is bent in an acute angle or load is applied to the cable repeatedly, it may cause a malfunction, wire breakage, or fire.

[Min. bending radius] Power supply cable: 40 mm

Power supply cable: 48 mm (IO-Link)
Communication cable: 40 mm (IO-Link)
Separate cable (Option): 40 mm
High voltage cable: 30 mm

* Shown above is wiring with the fixed min. allowable bending radius and at a temperature of 20°C. A bend radius should be larger at a temperature lower than 20°C. Regarding the min. bending radius of the air tubing, refer to the operation manual or catalog for air tubing.

2. Installation of the high voltage cable

- Use the specified cable holder (IZT40-E1 or IZT40-E2) for installing high voltage cables.
- Follow the instructions below when installing high voltage cables. If these are not followed, the insulation performance of the high voltage cable will decrease, causing failure of the ionizer, which may lead to an electric shock or fire.
- a. Do not cut the cable.
- b. Keep to the min. bending radius of the cable.
- c. Do not tighten the cable too much with cable ties. Do not deform the cable by placing any object on the cable.
- d. Avoid the problems of cable runaway such as in a cable duct.
- e. Do not twist or damage the cable. If the cable is damaged, it should be replaced.





Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Mounting

. Marning

- 3. Fix the high voltage cable connector using 2 screws included as an accessory.
 - Fix the connector using 2 cross recessed round head screws (M4 x 10 L) with the specified tightening torque. (Refer to the table below.)
- Be sure to fix the high voltage cable plug with a screw.
- 5. Mount on a flat surface and do not apply impact load or excessive external force.
 - If there are irregularities, cracks or height differences, excessive stress will be applied to the housing or brackets, resulting in damage or other trouble.
 - Do not drop or apply a strong shock. Otherwise, damage or an accident can occur.
- Install the product so that the bar does not have an excessive deflection.
 - For a bar length of 820 mm or more, be sure to support the bar at both ends and in the middle by using brackets (IZT40-BM1 or IZT40-BM2). If the bar is held only at the both ends, self-weight of the bar causes deflection, resulting in damage or deformation of the bar.
- 7. Avoid using in a place where noise (electromagnetic wave surge) is generated.
 - If the product is used in an environment where noise is generated, it may lead to a malfunction and deterioration or damage of the internal elements.
 - If the presence of noise is suspected, take preventative measures against noise and avoid crossing wires such as power line and high voltage line.
- 8. Tighten screws with the specified tightening torque.
 - If the mounting screws are tightened in excess of the specified torque range, it may damage the screws or mounted areas.
 - If the tightening torque is insufficient, the screws may become loose. (Refer to the table below.)

Do not touch the emitter directly with fingers or metallic tools.


- Do not touch the emitter with your finger. If the needle sticks to your finger, an electric shock can cause an instantaneous rapid body motion to escape from the shock, causing an injury.
- If the emitter or cartridge is damaged with a tool, the specification will not be met and damage and/or an accident may occur.

⚠ Danger: High Voltage

Caution: High voltage is being supplied to the emitters.

Please do not touch the emitters as there is an electric shock danger with the insertion of contamination into the cartridge.

In addition, one can be injured with evasive actions taken when suddenly removing oneself from the electrical shock danger.

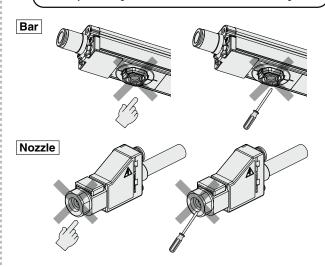

Tightening Torque for Screws

	Description	Part number	Screw	Tightening torque
For Bar	End bracket	IZT40-BE□	For fixed angle M4 x 8 L	0.72 to 0.76 N·m
			For fixed bar M4 x 8 L	0.51 to 0.55 N⋅m
	Intermediate bracket 1	IZT40-BM1	M4 x 16 L	0.72 to 0.76 N⋅m
	Intermediate bracket 2	IZT40-BM2	M4 x 16 L	0.47 to 0.49 N⋅m
	High voltage cable connector	IZTB4□-□□□□□-□-□	M4 x 10 L	0.49 to 0.53 N⋅m
For Nozzle	L-bracket	IZT43-B1	M3 x 4 L	0.61 to 0.65 N⋅m
	Angle adjustment bracket IZ	17T40 D0	For fixed angle M3 x 4 L	0.61 to 0.65 N⋅m
		IZT43-B2	For fixed nozzle M3 x 4 L	0.61 to 0.65 N⋅m
	High voltage cable connector	IZTN43-□□□-□	M4 x 10 L	0.49 to 0.53 N⋅m
	High voltage cable plug		M3 x 5 L	0.11 to 0.15 N⋅m
Controller		IZTC40 IZTC41(-L)	M4 x 30 L	0.22 to 0.24 N·m
Separate cable		IZT40-CF□	Spacer	0.40 to 0.60 N⋅m
			Set screw	0.25 to 0.35 N⋅m
DIN rail mounting bracket		IZT40-B□	M4 x 6 L	1.30 to 1.50 N·m
Cable holder		IZT40-E□	M4 x 8 L (Recommended length)	0.19 to 0.21 N·m




Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Mounting

.⚠Warning


- 10. Do not affix any tape or seals to the controller, high voltage power supply module, bar, and nozzle.
 - If the tape or label contains a conductive adhesive or reflective paint, a dielectric phenomenon may occur due to ions arising from such substances, resulting in electrostatic charging or electric leakage, causing a malfunction, damage, electric shock, or fire.
- 11. Installation should be conducted after turning OFF the power supply and air supply to the controller, high voltage power supply module, bar, and nozzle.
 - If installation or adjustment is performed while the power or air is being supplied to the product, an electric shock, failure, or injury can result.
- 12. The high voltage power supply module uses a fan. A space of 20 mm or more is required from the exhaust port for ventilation. Install the product in a ventilated location so peripheral devices are not affected.

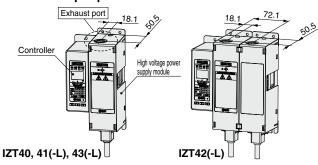

- 13. Do not apply any excessive force to cables, such as repeated bending, tensioning, or placing a heavy object on the cables.
 - It may cause an electric shock, fire, or wire breakage.
- 14. Do not carry the product by holding its cables.
 - It may cause an injury or damage to the product.


⚠ Caution

- 1. To prevent electric leakage, electric shocks, and other issues, be sure to secure a space of 10 mm or more in every direction around the product when installing it.
 - If structures including walls or other ionizers are located between the product and the object to be neutralized, the generated ions will not effectively reach the object, resulting in reduced neutralization speed, erratic offset voltage, etc., which may make it difficult to maintain performance. For maximum neutralization performance, be sure to install the product taking the required installation distance from structures, etc., shown in the figure below into consideration.



- 2. Make sure to confirm the effect of static neutralization after installation.
 - The performance of the product varies depending on the surrounding installation and operating conditions. After installation, verify the effects of static neutralization.
- 3. When installing the IZT41, IZT42, or IZT43 in proximity with an ionizer which operates in DC mode (one polarity, positive or negative), they should be positioned at least 2 meters away from each other.
 - When using the AC mode of the IZT41, IZT42, or IZT43 near the ionizer in DC mode, keep clearance of at least the length shown in the figure below between them. The offset voltage (ion balance) may not be adjusted by the built-in sensor due to the ions discharged from the DC mode ionizer.



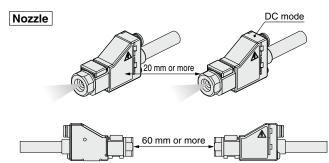

4. Use the specified bracket.



Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Wiring / Piping

⚠ Warning

- Before wiring, ensure that the power supply capacity is larger than the specification and that the voltage is within the specification. Product damage or malfunction can result.
- To maintain product performance, the power supply shall be UL listed Class 2 certified by National Electric Code (NEC) or evaluated as a limited power source provided by UL60950.
- 3. To maintain the product performance, ground the product with a resistance value of 100 Ω or less. If the product is not grounded, it is not possible to secure the performance and may lead to product failure or malfunction.
- 4. Wiring (including insertion and removal of the connector plug (high voltage cable connector, high voltage cable plug)) should never be carried out while the power is being supplied to the product. Otherwise, an electric shock or accident may occur.
- 5. Use the specified cable for connecting the ionizer controller, high voltage power supply module, bar, and nozzle. Do not disassemble or retrofit. Modifying the product may cause accidents such as electric shock, failure, or fire. The product will not be guaranteed if it is disassembled and/or modified.
- 6. Ensure the safety of wiring and surrounding conditions before supplying power.
- 7. Do not connect or disconnect the connector plug (including power source) while the power is being supplied. Failure to follow this procedure may cause product malfunction.
- 8. If the ionizer wiring and high-power lines are routed together, this product may malfunction due to noise. Therefore, use a separate wiring route for this product.
- Confirm that the wiring is correct before operation. Incorrect wiring will lead to product damage or malfunction.
- 10. Flush the piping before use. Before piping this product, please exercise caution to prevent particles, water drops, or oil contents from entering the piping.

Operating Environment / Storage Environment

Marning

- 1. Use within the fluid temperature and ambient temperature ranges.
 - Fluid temperature and ambient temperature ranges are; 0 to 40°C for controller, 0 to 40°C for high voltage power supply module, 0 to 50°C for bar, 0 to 40°C for nozzle, and 0 to 40°C for AC adapter.
 - Do not use the product in locations where the temperature may change suddenly even if the ambient temperature range is within the specified limits, resulting in condensation.

Operating Environment / Storage Environment

⚠ Warning

2. Do not use this product in an enclosed space.

• This product utilizes a corona discharge phenomenon. Avoid using in an enclosed space as ozone and nitrogen oxides exist in such places, even though in marginal quantities.

3. Environments to avoid

- Avoid using and storing this product in the following environments as they may cause a failure, fire, etc.
- a. Environments where the ambient temperature is outside of the product specification
- Environments where the ambient humidity is outside of the product specification
- c. Environments where abrupt temperature changes may cause condensation
- d. Environments where corrosive gases, flammable gases, or other volatile flammable substances are stored
- e. Environments where the product may be exposed to conductive powder such as iron powder or dust, oil mist, salt, organic solvent, machining chips, particles, cutting oil (including water and any liquids), etc.
- f. Environments where ventilated air from an air conditioner is directly applied to the product
- a. Enclosed or poorly ventilated environments
- h. Environments that are exposed to direct sunlight or heat radiation
- Environments where strong electromagnetic noise is generated, such as strong electrical and magnetic fields or supply voltage spikes
- j. Environments where static electricity is generated
- k. Environments where strong, high frequencies are generated
- I. Environments that are subject to potential lightning strikes
- m. Environments where the product may receive direct impact
- n. Environments where the product may be subjected to forces or weight that could cause physical deformation

4. Do not use air containing mist or dust.

- Air containing mist or dust will cause the performance to decrease and shorten the maintenance cycle.
- Install an air dryer (IDF series), air filter (AF/AFF series), and/ or mist separator (AFM/AM series) to obtain clean compressed air (A compressed air quality of Class 2.4.3, 2.5.3, 2.6.3, or higher according to ISO 8573-1:2010 (JIS B 8392-1:2012) is recommended for operation.).
- 5. The controller, high voltage power supply module, bar, nozzle, and AC adapter do not incorporate protection against lightening surges.

6. Effects on implantable medical devices

- The electromagnetic waves emitted from this product may interfere with implantable medical devices such as cardiac pacemakers and cardioverter defibrillators, resulting in the malfunction of the medical device or other adverse effects.
- Please exercise extreme caution when operating equipment which may have an adverse effect on your implantable medical device. Be sure to thoroughly read the precautions stated in the catalog, operation manual, etc., of your implantable medical device, or contact the manufacturer directly for further details on what types of equipment need to be avoided.





Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Maintenance

⚠ Warning

1. Periodically inspect the ionizer and clean the emitters.

- Check the product regularly to make sure it is not operating with undetected failures.
- Maintenance must be performed by an operator who has sufficient knowledge and experience.
- If the product is used for an extended period with dust present on the emitters, the product performance will be reduced.
- An emitter dirt detection function is available with the IZT41, IZT42, and IZT43. When emitter contamination is detected, clean the emitter.
- In cases where the emitter dirt detection function is not used on the IZT41, IZT42, or IZT43, or when the IZT40 is used, perform a neutralizing performance test and set a maintenance cycle for periodic cleaning.
- The emitter contamination level is different depending on the installation environment and supply pressure.
- If the performance is not recovered after cleaning, it is possible that emitters are worn. Replace the emitter cartridge.

▲ Danger: High Voltage

This product contains a high voltage generation circuit. When performing maintenance or inspection, be sure to confirm that the power supply to the ionizer is turned OFF. Never disassemble or modify the ionizer as this may not only impair the product's functionality but could also cause an electric shock or electric leakage.

- When cleaning the emitter or replacing the emitter cartridge, be sure to turn OFF the power supply or air supply to the controller, high voltage power supply module, bar, and nozzle.
 - Never touch the emitters with the power supplied to the controller, high voltage power supply module, bar, and nozzle. An electric shock may cause an injury.
 - If an attempt to replace the emitter cartridges is performed before removing air supply, the emitter cartridges may eject unexpectedly due to presence of the compressed air. Remove supply air before replacing the cartridges.
 - If emitter cartridges are not securely mounted to the bar, they may eject or release when air is supplied to the product.
 - Securely mount or remove the emitter cartridges referencing the instructions shown to the right.
 - Securely mount or remove the emitter cartridges with hands and do not use tools.

Bar type

Emitter cartridge tightening torque: 0.2 to 0.3 N·m

Emitter cartridge tightening torque: 0.1 to 0.2 N·m

Bar

Removal of emitter cartridge



 Rotate the cartridge 90 degrees in the counter-clockwise direction.



2) Pull to remove.


Mounting of emitter cartridge



Insert the cartridge into the bar so that the longer side of the cartridge is mounted at a right angle to the bar.




2) Rotate the cartridge 90 degrees in the clockwise direction, and match the markings on the bar to those on the emitter cartridge and secure.






Nozzle


Removal of emitter cartridge



Mounting of emitter cartridge



- 3. Do not disassemble or modify the product.
 - Disassembling or modifying the product may cause accidents such as an electric shock, failure, or fire.
 - The product will not be guaranteed if it is disassembled and/
- 4. Do not operate the product with wet hands.
 - Never operate the product with wet hands. It may cause an electric shock or other accidents.
- When replacing the high voltage cable for the nozzle, be sure to turn OFF the power supply or air supply to the controller, high voltage power supply module, and nozzle.

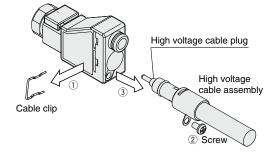






Be sure to read this before handling the products. Refer to page 227 for safety instructions.


Handling

⚠ Caution

- 1. Do not apply excessive external force or impact (100 m/s² or more).
 - Even though the controller, high voltage power supply module, bar, and nozzle do not appear to be damaged, the internal parts may be damaged and cause a malfunction.
- If the bar length exceeds 820 mm, hold both ends and the middle of the bar to avoid a moment load being applied.
 - Handling the product by holding either end of the bar may cause deformation or damage of the product.
- 3. The power cable must be connected and disconnected by hand.
 - The use of tools can result in damage to the product.
 - Hold the connector by hand and pull it out straight.
 - If the connector has a lock mechanism, release the lock and then pull out the connector.
- 4. If smoking, fire, or foul smell occurs in the product, immediately shut OFF the power supply.
- 5. Do not touch part A of the high voltage connector and part B of the high voltage cable plug by hand. Be careful that moisture or foreign matter does not adhere to the connector and plug.
 - Do not touch part A of the high voltage connector and part B of the high voltage cable plug while handling.
 - Keep the high voltage connector and high voltage cable plug free from contamination. Adhesion of moisture, oil, or foreign matter on part A and part B may cause high voltage electric leakage.
 - If moisture, oil, or foreign matter adheres to part A or part B, clean it with ethanol.



High voltage connector



Handling

⚠ Caution

6. Tightening of M12 connector screw

- The screws may become loose if they are not tightened sufficiently.
- Check that they are tightened enough at appropriate intervals during operation.

7. Connection and disconnection of M12 connector

- Do not touch the engagement surface with wet hands.
- Do not pull the cable out by holding the cable.
- Please be careful of the key direction.
- When engaging the connectors, insert the connectors until the entire engagement surface is no longer visible and tighten the screws so as not to damage the thread ridges.

Adjustment / Operation

⚠ Caution

1. For details on programming and address setting, refer to the manual from the PLC manufacturer.

The programming content related to the protocol is designed by the manufacturer of the PLC used.

