3-Screen Display

4-Channel Flow Monitor

New

Up to 4 flow sensors can be connected!







It is possible to change the settings while checking the measured value.

Main screen

Measured value (Current flow value)

Sub screen

Left side Right side
Label (Display item), Set value (Threshold value)

Input Range Selection p. 3

Visualization of Settings

Set value (Threshold value)	P_ 1
Hysteresis value	H_ 1
Peak value	$H_{\perp}H_{\perp}$
Bottom value	HLLo
Channel display	TH !

Applicable Flow Sensor Variations





3-Color Display
Digital Flow Switch for Water
PF3W-Z



3-Color Display
Digital Flow Switch for Water
PF3W



Digital Flow Switch for Deionized Water and Chemical Liquids





PFG200 Series



Visualization of Settings


Item and set value are displayed together. Easy to confirm the displayed item

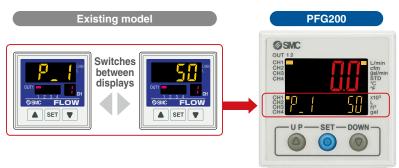


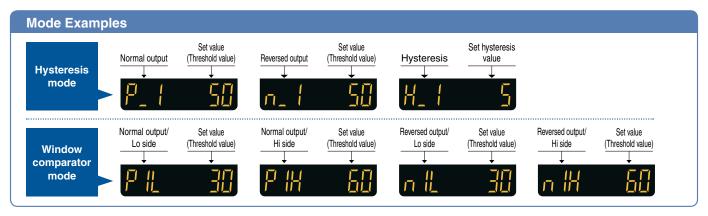

Easy Screen Switching

It is possible to change the settings while checking the measured value.

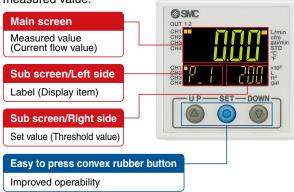


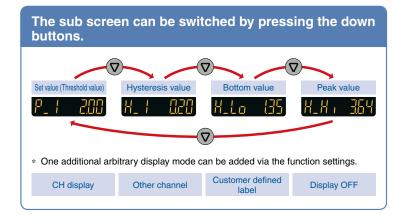


Simple 3-Step Setting

After selecting the channel, when the SET button is pressed and the set value (P_1) is displayed, the set value (threshold value) can be set.


When the SET button is pressed and the hysteresis (H_1) is being displayed, the hysteresis value can be set.

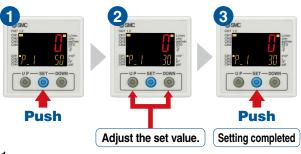

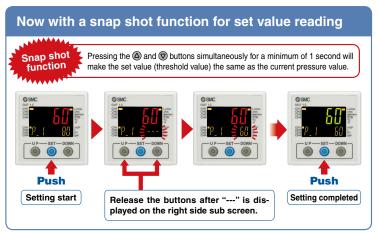




Centralized Control Saves Installation Space.

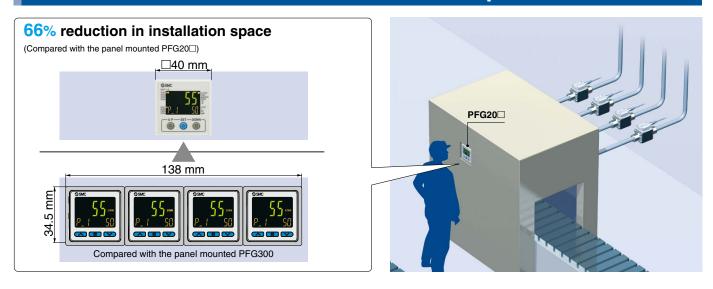


Accumulated Flow Measurement

A single product can manage the accumulated flow in four lines.

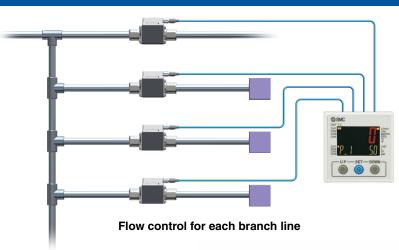



Input Range Selection (for Pressure/Flow rate)

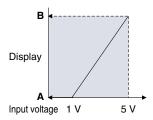

The sensor input range can be set to the required value and displayed. (Voltage input: 1 to 5 V) Pressure switch/Flow switch can be displayed.

A is displayed for 1 V. B is displayed for 5 V.

The range can be set as required.

Refer to pages 9 and 10 for the specification of the sensors which can be connected.

For the individual specifications of each connectable sensor, refer to the **Web Catalog**.

■ For Digital Flow Switch for Air / PF2MC7



	Α	В
PF2MC7501	0	500
PF2MC7102	0	1000
PF2MC7202	0	2000

Set A and B to the values shown in the table on the left

■ For Flow Sensor / PFMV5




Setting of the display for analog voltage

	Α	В
PFMV5 Series	1.00	5.00

Set A and B to the values shown in the table on the left.

Connectors

Connection and removal of wiring is easy.

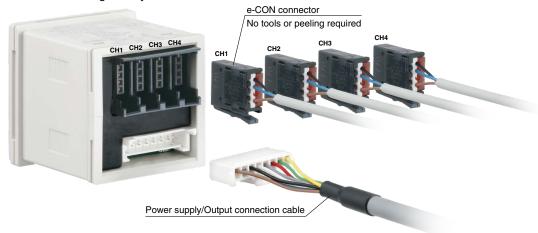

Functions pp. 16 to 18

Peak/Bottom value indication function

This function constantly detects and updates the maximum (minimum) flow when the power is supplied, and allows to hold the maximum (minimum) flow value.

■ Key-lock function

This function prevents operation errors such as accidentally changing setting values.

External input function

The accumulated value, peak value, and bottom value can be reset remotely.

■ Error display function

This function displays error location and content when a problem or error has occurred.

■ Delay time setting

The time from when the instantaneous flow reaches the set value to when the switch output operates can be set.

Zero-cut setting

When the flow display value is close to zero, this function forces the display to zero.

Selection of power-saving mode

Power-saving mode can be selected. It shifts to power-saving mode automatically when there is no button operation for 30 seconds.

Setting of security code

Users can select whether a security code must be entered to release the key lock.

Accumulated value hold

The accumulated value is not cleared even when the power supply is turned OFF.

■ Snap shot function

The current flow rate value can be stored to the switch output ON/OFF set point.

Output check function

It is possible to check the switch output operation and process data value.

■ Channel to channel copy function

The set values can be copied to other channel.

■ Channel select function


Flow value for the selected channel is displayed.

■ Channel scan function

Flow values for each channel are displayed in turn every 2 seconds.



Hub Function

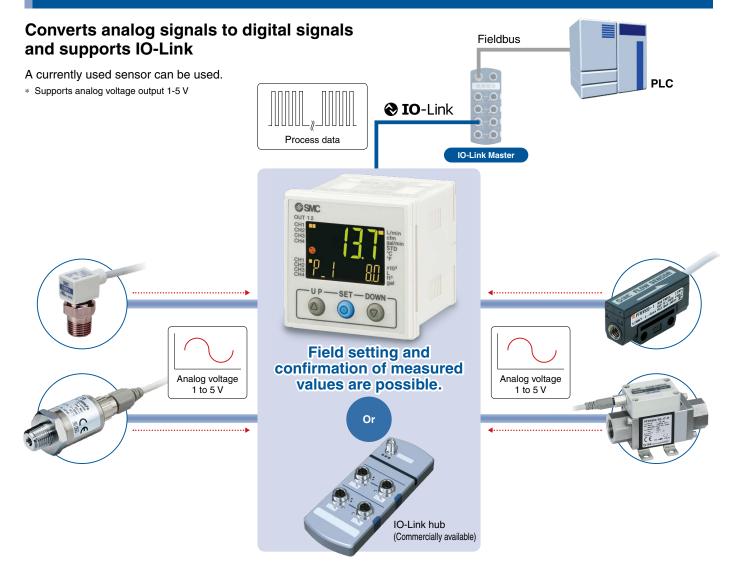

Process Data


FIUCESS	Data																
Bit offset	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	
Item		CH1 measured value: 16-bit signed integer															
Bit offset	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	Measurement data of
Item					(CH2 me	easure	d value	: 16-bit	signed	lintege	er					sensors for 4 channels are
Bit offset	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	combined and cyclically
Item					(CH3 me	easure	d value	: 16-bit	signed	lintege	er					sent as a process data.
Bit offset	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
Item					(CH4 me	easure	d value	: 16-bit	signed	lintege	er					
Bit offset	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Item	Error	System error	Fixed output	Reservation	CH4 diagnosis	CH3 diagnosis	CH2 diagnosis	CH1 diagnosis	CH4 OUT2	CH4 OUT1	СНЗ ОПТ2	CH3 OUT1	CH2 OUT2	CH2 OUT1	CH1 OUT2	CH1 OUT1	Each channel has 2 outputs*1.
						0	0	0									
	\top			,					J								
Diagnosi item	Diagnosis item Internal product malfunction Outside of zero-clear range Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis item Diagnosis ite																
Impleme	ent dia	iagnostic bits in the process data.															

 $[\]ast 1~$ During SIO mode, only CH1 has 2 switch outputs. CH2-4 has one output each.





IO-Link is an open communication interface technology between the sensor/ actuator and the I/O terminal that is an international standard, IEC61131-9.

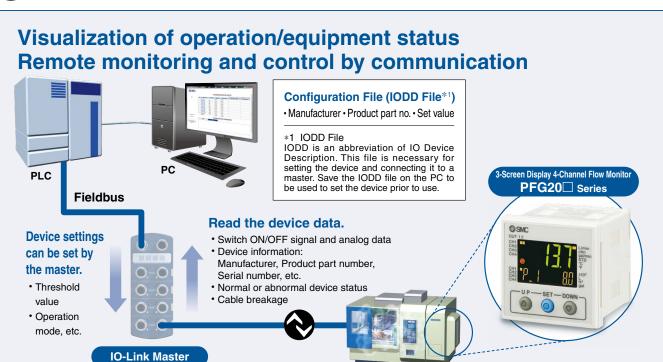

Automatic setting function [Data storage function]

When replacing the sensor monitor with the same type (the same device ID), the parameters (set values) stored in the IO-Link master are automatically copied (set) to the new sensor monitor.



Displays the output communication status and indicates the presence of communication data










Operation and Display

Communication with master	IO-Link status indicator light		Status		Screen display *2	Description
	* 1			Operate	ModE oPE	Normal communication status (readout of measured value)
	(Flashing)		Normal	Start up	ModE Strt	At the start of communication
Yes		IO-Link mode		Preoperate	ModE PrE	At the start of communication
			Abnormal	Version does not match The master uses version 1.0.		IO-Link version does not match that of the master. The master uses version 1.0. * The applicable IO-Link version is 1.1.
	, G			Communication disconnection	ModE oPE ModE Strt ModE PrE	Normal communication was not received for 1 second or longer.
	OFF		SIO mod	le	ModE 5 io	General switch output

- *1 In IO-Link mode, the IO-Link indicator is ON or flashes. *2 When the sub screen is set to Mode
- * "ModE LoC" is displayed when the data storage lock is enabled. (Except for version mismatch or when in SIO mode)

Series Variations

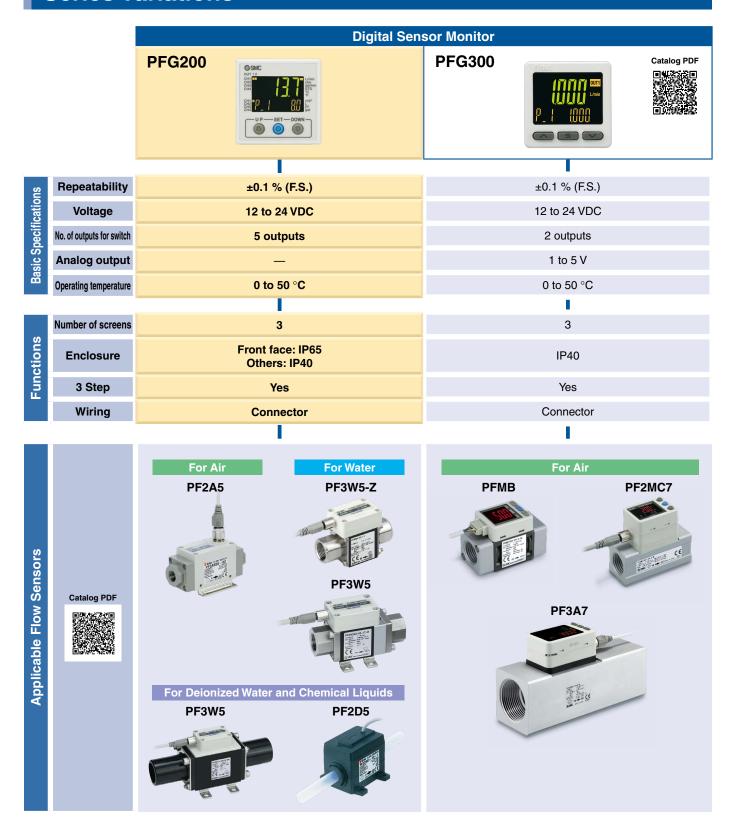

CONTENTS

3-Screen Display 4-Channel Flow Monitor *PFG200 Series*



How to Order	p. 8
Specifications	p. 9
Applicable Flow Sensors	p. 11
Internal Circuits and Wiring Examples	p. 11
Dimensions	p. 15
Function Details	p. 16
Safety Instructions Back of	cove

3-Screen Display 4-Channel Flow Monitor PFG200 Series

How to Order

PFG200

Input/Output specification

Symbol	Description
0	NPN 5 outputs + External input
1	PNP 5 outputs + External input
2*1	IO-Link + NPN 4 outputs or NPN 5 outputs (SIO mode)
3 *1	IO-Link + PNP 4 outputs or PNP 5 outputs (SIO mode)


*1 When the flow monitor is used as an IO-Link device, the total power supply current of the connected sensors should be 200 mA or less.

Unit specification

Nil	With unit selection function*2
М	SI units only*3

- *2 Under the New Measurement Act, switches with the unit selection function are no longer allowed for use in Japan.
- *3 Fixed unit: kPa, MPa, Pa

Option 3

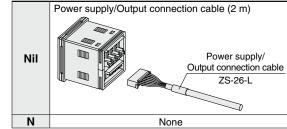

Cable is shipped together, but not connected.

Option 1

Nil	None
Α	Panel mount adapter Mounting screw (M3 x 8L) (Accessory) Panel mount adapter Panel
В	Front protection cover + Panel mount adapter Mounting screw (M3 x 8L) (Accessory) Panel mount adapter Waterproof seal (Accessory)

^{*} Options are not assembled, but shipped together.

Option 2

Nil	None
4C	Sensor connector (4 pcs.) ∗ For PF2A5□, PF2/3W5□
4D	Sensor connector (4 pcs.) ∗ For PF2D5□

Connector is not connected, but shipped together.

Options/Part Nos.

When only optional parts are required, order with the part numbers listed below.

Description	Part no.	Note		
Power supply/Output connection cable	ZS-26-L	Length: 2 m		
For PF2A5□□, PF2W5□□, PF3W5□□ Sensor connector (e-CON)	ZS-28-CA-4	1 pc., Finished O.D.: ø1.15 to ø1.35, Cover color: Blue		
For PF2D5□□ Sensor connector (e-CON)	ZS-28-CA-2	1 pc., Finished O.D.: Ø0.9 to Ø1.0, Cover color: Red		
Panel mount adapter	ZS-26-B	Mounting screw (M3 x 8 L, 2 pcs.), With waterproof seal		
Panel mount adapter + Front protection cover	ZS-26-C	Mounting screw (M3 x 8 L, 2 pcs.), With waterproof seal		
Front protection cover	ZS-26-01	_		
Power supply with M12 connector cable (Made to Order)	ZS-26-LM12	For use when using an M12 connector for IO-Link communication		

Specifications

For flow switch precautions and specific product precautions, refer to the "Operation Manual" on the SMC website.



	Series	PFG20□ Series								
Аp	plicable SMC flow sensor	PF2A510	PF2A550	PF2A511	PF2A521	PF2A551	PF2(3)W504	PF2(3)W520		
Ra	ted flow range	1 to 10 L/min	5 to 50 L/min	10 to 100 L/min	20 to 200 L/min	50 to 500 L/min	0.5 to 4 L/min	2 to 16 L/min		
	tantaneous flow rate play/Set flow rate range	0 to 11 L/min	0 to 55 L/min	0 to 110 L/min	0 to 220 L/min	0 to 550 L/min	0.35 to 4.50 L/min (Flow under 0.35 L/min is displayed as "0.00")	1.7 to 17.0 L/min (Flow under 1.7 L/min is displayed as "0.0")		
Insta	ntaneous flow rate display/Min. setting unit	0.1 L/min	0.1 L/min			5 L/min	0.05 L/min	0.1 L/min		
Accı	mulated flow display/Set flow rate range		0 to 999,	999,999 L		0 to 9,999,999.99 x 10 ³ L	0 to 99,999,999.9 L	0 to 999,999,999 L		
Acc	imulated flow display/Min. setting unit	1L				10 L	0.1 L	1 L		
Accı	mulated pulse flow rate exchange value	0.1L/pulse					0.05 L	0.1 L		
Un	it		L/min, cf	m (depends or	selected rang	ie)	L/min, gal/min (deper	nds on selected range)		
	When used as a switch output device When used as an IO-Link device			12 to	24 VDC ±10%	with 10% ripple (p-p)	or less	•		
Electrical				18		cluding ripple (p-p) 109	%*1 			
ш	Current consumption		-			mA or less				
	Protection					rity protection				
	Power supply voltage for sensor*1	11 115 115				oply voltage] –1.5 V				
	Power supply current for sensor*2	Max. 110 mA (How	ever, the total power	supply current for the		or less, and the total power sup	ply current when used as an IO	-LINK device is 200 mA or less).		
Accuracy	Display accuracy (Linearity)					% F.S. Max.*4				
둜	Repeatability					% F.S. Max.*4				
¥	Temperature characteristics					lax. (Reference: 25°C)				
⊕	Output type					collector output: 5 out				
output (SIO mode)	Output mode	Hysteresis i	Hysteresis mode, Window comparator mode, Accumulated output, Accumulated pulse output, Error output, Output OFF							
5	Switch operation									
S	Max. load current	80 mA								
Ħ	Max. applied voltage (NPN only)	30 VDC								
븕	Internal voltage drop (Residual voltage)	1.5 V or less (at load current of 80 mA)								
	Delay time*3			5 ms or	less, variable f	rom 0 to 60 s/0.01 s in	crements			
Switch	Hysteresis	Variable from 0*5								
Š	Protection				Over cu	urrent protection				
=	Input type			Voltag			: 1 MΩ)			
Analog input	Number of inputs	Voltage input: 1 to 5 VDC (Input impedance: 1 $M\Omega$) 4 inputs (Check the "Internal Circuits and Wiring Examples" on pages 11 to 14.)								
log	Connection method	e-CON								
Ana	Protection			Over vo	oltage protectio		3.4 VDC)			
-	ternal input*8	Over voltage protection (up to a voltage of 26.4 VDC) Voltage free input: 0.4 V or less (Reed or Solid state) for 30 ms or longer								
Ê	Display type	LCD								
1	Number of screens	3-screen display (Main screen, Sub screen x 2)								
<u>a</u>	Display color	Main screen: Red/Green, Sub screen: Orange								
Display	Number of display	Main screen: 4 digits (7 segments), Sub screen (Left): 4 digits (some digits are 11-segments, 7 segments for other),								
۵	digits	Main screen: 4 digits (7 segments), Sub screen (Lett): 4 digits (some digits are 11-segments, 7 segments for other), Sub screen (Right): 5 digits (some digits are 11-segments, 7 segments for other)								
	Indicator light	Lights up when switch output is turned ON. OUT1, OUT2: Orange								
Di	ital filter*6	Variable from 0 to 30 s/0.01 s increments								
\rightarrow	Enclosure	Front face: IP65 (when panel-mounted), Others: IP40								
Environment	Withstand voltage									
Ĕ	Insulation resistance									
ξ	Operating temperature range									
Ë	Operating humidity range	Operating/Stored: 35 to 85% RH (No condensation)								
\perp	indards		CE/UKCA marking							
_	Body	51 g (Excludes power supply and output cable)								
Weight	Power supply/Output cable	60 g								
ĕ	e-CON (1 pc.)					2 g				
\rightarrow	IO-Link type					Device				
mode)	IO-Link type		,	,		V1.1				
اع	Communication speed				COM	12 (38.4 kbps)				
흔	Configuration file					ODD file*7				
	Minimum cycle time				K	4.8 ms				
, E	Process data length			le	nout data: 10 h	/tes, Output data: 0 by	toe			
-	On request data communication			ır	ipui uaia. 10 D)	Yes, Output data: 0 by	103			
흜	Data storage function		,	,						
Ę	<u> </u>					Yes				
é	Event function					Yes				
ပ	Vendor ID	131 (0 x 0083)								

- *1 Check the power supply voltage range of the connected sensor.
 *2 Over current on DC (+) side and DC (-) side of the sensor input connector results in breakage of the product.
 *3 Value without digital filter (at 0 ms)

- *4 The system accuracy when combined with an applicable flow sensor.
- *5 If the applied pressure fluctuates around the set value, the hysteresis must be set to a value more than the amount of fluctuation, or chattering will occur.



3-Screen Display 4-Channel Flow Monitor **PFG200** Series

For flow switch precautions and specific product precautions, refer to the "Operation Manual" on the SMC website.



	Series			PFG20	☐ Series							
Ap	olicable SMC flow sensor	PF2(3)W540	PF2(3)W511	PF3W521	PF2D504	PF2D520	PF2D540					
Rat	ed flow range	5 to 40 L/min	10 to 100 L/min	50 to 250 L/min	0.4 to 4 L/min	1.8 to 20 L/min	4 to 40 L/min					
Inc	tantaneous flow rate	3.5 to 45.0 L/min	7 to 110 L/min	20 to 280 L/min	0.25 to 4.50 L/min	1.3 to 21.0 L/min	2.5 to 45.0 L/min					
	play/Set flow rate range	(Flow under 0.35 L/min		(Flow under 20 L/min	(Flow under 0.25 L/min	(Flow under 1.3 L/min	(Flow under 2.5 L/min					
uis	play/Set flow rate range	is displayed as "0.00")	is displayed as "0")	is displayed as "0")	is displayed as "0.00")	is displayed as "0.0")	is displayed as "0.0")					
Instar	taneous flow rate display/Min. setting unit	0.5 L/min	1 L/min	2 L/min	0.05 L/min	0.1 L/min	0.5 L/min					
	mulated flow display/Set flow rate range	0 to 999,999,999L 0 to 99,999,999.9 L 0 to 999,999,999										
	mulated flow display/Min. setting unit		1L 0.1L 1L									
	mulated pulse flow rate exchange value	0.5 L	1 L	2 L	0.05 L	0.1 L	0.5 L					
Un		L/min, gal/min (depends on selected range) L/min, gal/min (depends on selected range)										
	When used as a switch output device When used as an IO-Link device		121	to 24 VDC ±10% with	n 10% ripple (p-p) or l	ess						
×્ર⊦		18 to 30 VDC, including ripple (p-p) 10%*1										
	Current consumption	55 mA or less										
	Protection	Polarity protection										
- H	Power supply voltage for sensor*1				voltage] -1.5 V							
_	Power supply current for sensor*2	Max. 110 mA (However, the	total power supply current for t			current when used as an IO-Li	nk device is 200 mA or less).					
racy	Display accuracy (Linearity)	±5.0% F.S. Max.*4										
Ų ⊢	Repeatability	±3.0% F.S. Max.*4										
\rightarrow	Temperature characteristics		±0.5% F.S. Max. (Reference: 25°C)									
(g	Output type				llector output: 5 outputs							
	Output mode	Hysteresis mode,	Window comparator			pulse output, Error o	utput, Output OFF					
ō	Switch operation				Reversed output							
_	Max. load current				mA (DO							
t b	Max. applied voltage (NPN only)											
0	Internal voltage drop (Residual voltage)	· · · · · · · · · · · · · · · · · · ·										
tc	Delay time*3	5 ms or less, variable from 0 to 60 s/0.01 s increments Variable from 0*5										
Swi	Hysteresis Protection											
	Input type	Over current protection										
	Number of inputs	Voltage input: 1 to 5 VDC (Input impedance: 1 $M\Omega$) 4 inputs (Check the "Internal Circuits and Wiring Examples" on pages 11 to 14.)										
og i	Connection method	4 inputs (Check the "internal Circuits and Wiring Examples" on pages 11 to 14.) e-CON										
₽u	Protection	Over voltage protection (up to a voltage of 26.4 VDC)										
	ernal input*8	Voltage free input: 0.4 V or less (Reed or Solid state) for 30 ms or longer										
	Display type	LCD										
l F	Number of screens	3-screen display (Main screen, Sub screen x 2)										
lay	Display color	Main screen: Red/Green, Sub screen: Orange										
<u> </u>	Number of display	Main screen: 4 digits (7 segments), Sub screen (Left): 4 digits (some digits are 11-segments, 7 segments for other										
٥	digits	Sub screen (Right): 5 digits (some digits are 11-segments, 7 segments for other)										
l ⊢	Indicator light	Lights up when switch output is turned ON. OUT1, OUT2: Orange										
	ital filter*6	Variable from 0 to 30 s/0.01 s increments										
Ħ	Enclosure	Front face: IP65 (when panel-mounted), Others: IP40										
Environment	Withstand voltage	1000 VAC for 1 minute between terminals and housing										
ő	Insulation resistance	50 $M\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housing										
ا≩	Operating temperature range	Operating: 0 to 50°C, Stored: –10 to 60°C (No condensation)										
E	Operating humidity range	Operating/Stored: 35 to 85% RH (No condensation)										
	ndards	CE/UKCA marking										
= -	Body	51 g (Excludes power supply and output cable)										
ej.	Power supply/Output cable		60 g									
Device Device												
	IO-Link version V1.1											
主	Communication speed			COM2 (38.4 kbps)								
귕	Configuration file	IODD file*7										
	Minimum cycle time				ms							
읉	Process data length				Output data: 0 bytes							
nic	On request data communication											
Ē	Data storage function	Yes										
ĕ	Event function				es oooo\							
	Vendor ID			131 (0								
*6	6 The response time indicates when the set value is 90% in relation to *8 This setting is only possible for the PFG200/PFG201.											


- *6 The response time indicates when the set value is 90% in relation to the step input.
- *7 The configuration file can be downloaded from the SMC website, https://www.smcworld.com
- *8 This setting is only possible for the PFG200/PFG201.
- *9 Products with tiny scratches, marks, or display color or brightness variations which do not affect the performance of the product are verified as conforming products.




Applicable Flow Sensors

Applicable SMC	Rated flow range [L/min]													
flow sensor	0.4 0).5	1 2	4	5	10	20	40	5	0 10	00 2	00 2	50	500
PF2A510			1			10								
PF2A550					5				50					
PF2A511						10				100				
PF2A521							20				200	1		
PF2A551										50				500
PF2(3)W504		0.5		4										
PF2(3)W520			2			16								
PF2(3)W540					5			40						
PF2(3)W511						10				100				
PF3W521										50		250		
PF2D504	0.4	4		4										
PF2D520			1.	8			20							
PF2D540				4				40						

Internal Circuits and Wiring Examples

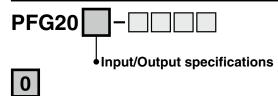


· NPN open collector 5 outputs + External input

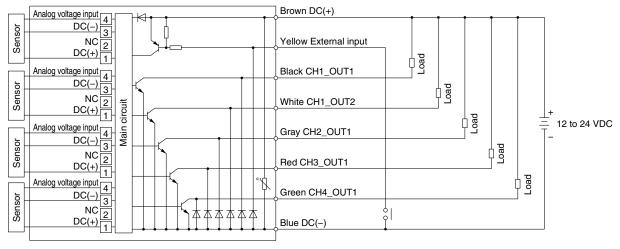

1


· PNP open collector 5 outputs + External input

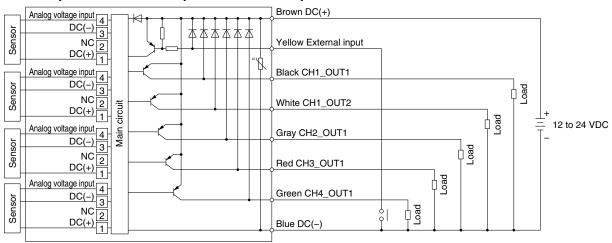

11




Internal Circuits and Wiring Examples

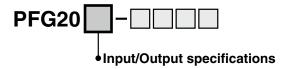




· IO-Link/NPN open collector 1 output + NPN open collector 4 outputs

When used as an IO-Link device

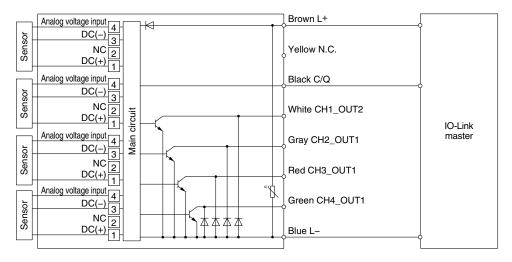


When used as a switch output device

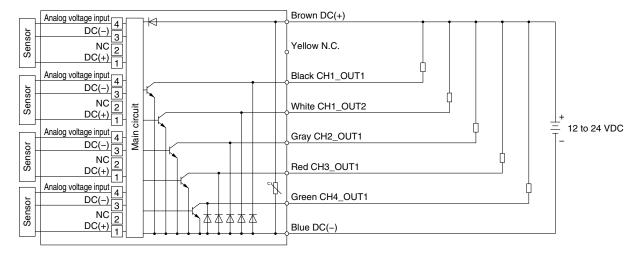




Internal Circuits and Wiring Examples

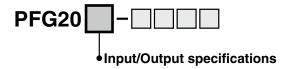




· IO-Link/PNP open collector 1 output + PNP open collector 4 outputs

When used as an IO-Link device

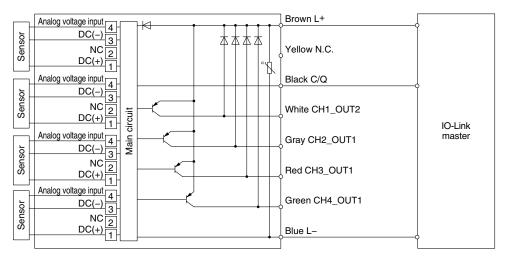


When used as a switch output device

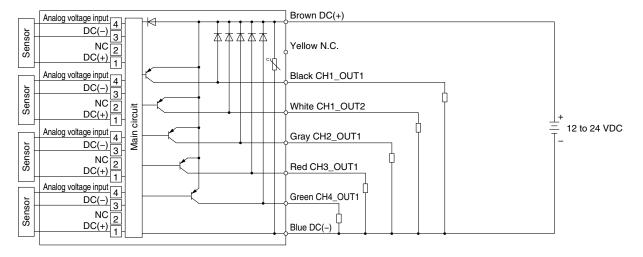

Internal Circuits and Wiring Examples

When using the PF3W5□-1T (with temperature sensor) and measuring instantaneous flow and temperature simultaneously


Example) PF3W520-03-1T (2 units) + PFG200-M (for 4 analog outputs with 2 units)

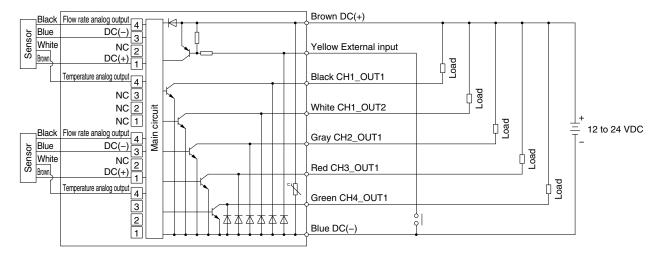


* When connecting the flow rate analog output and temperature analog output using a digital flow switch with a temperature sensor, use two e-con connectors per sensor.



Dimensions

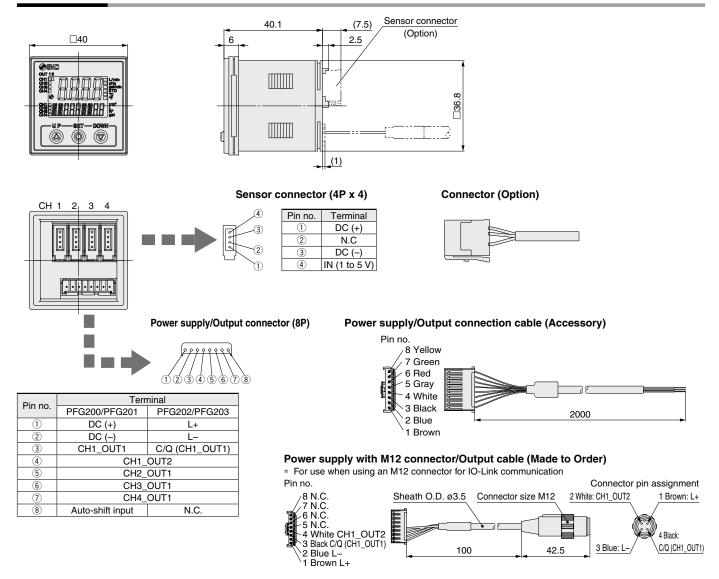

Front protection cover + Panel mount adapter

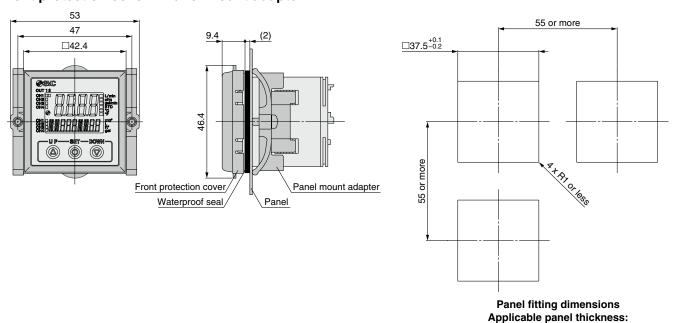






0.5 to 8 mm


PFG200 Series Function Details

Display examples of the main and sub (set value) screens of each mode. (When 100 L/min range is selected)

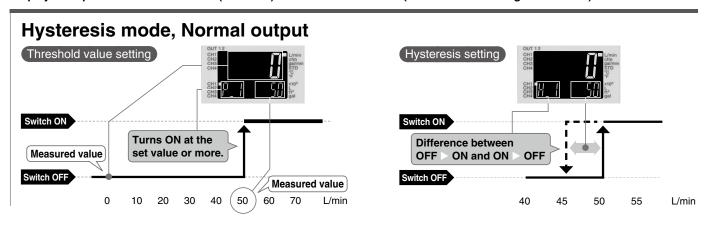

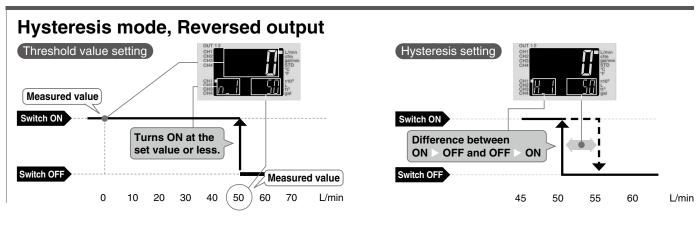

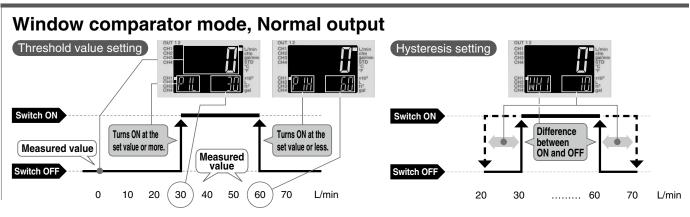

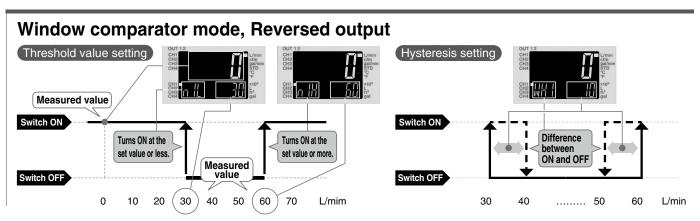

Function Details

A Peak/Bottom value indication function

This function constantly detects and updates the maximum

(minimum) flow when the power is supplied, and allows to hold the maximum (minimum) flow value.

When the @ and @ buttons are simultaneously pressed for 1 second or longer, while "holding", the held value will be reset.

B Key-lock function

This function prevents operation errors such as accidentally changing setting values.

C External input function

The accumulated flow, peak value, and bottom value can be reset remotely.

Accumulated value external reset: The accumulated flow value is reset via external input signal.

In accumulated increment mode, the accumulated value will reset to and increase from zero.

In accumulated decrement mode, the accumulated value will reset to and decrease from the set value.

* When the accumulated value is stored to memory, every time the accumulated value external reset is activated, the memory will be accessed. Take into consideration that the max. number of times the memory can be accessed is 970,000 times. The total number of external inputs and the accumulated value memorizing time interval should not exceed 970,000 times.

Peak/Bottom value reset: The peak value and bottom value are reset.

D Error display function

This function displays error location and content when a problem or error has occurred.

Error name	Error code	Description	Action	
Over current error	Er Er 2 [H:1 of CH:1 of2]	The load current applied to the switch output has exceeded the maximum value. *1 indicates the channel with an error.	Turn the power off and remove the cause of the over current. Then supply the power again.	
Above the upper limit of the display range	XXX	The flow rate or temperature exceeds the upper limit of the setting range.	Decrease the flow rate or temperature.	
Below the lower limit of the display range		The flow rate or temperature exceeds the lower limit of the setting range. A sensor may be disconnected or mis-wired.	Decrease the flow rate or temperature. Check the sensor connection.	
Accumulated flow error	99999999	The accumulated flow has exceeded the accumulated flow range.	Reset the accumulated flow.	
System error	Er B Er Y Er Y	Internal data error	Turn the power off and then on again. If the failure cannot be solved, please contact SMC for investigation.	

If the error cannot be reset after the above measures are taken, or errors other than those above are displayed, please contact SMC for investigation.

Delay time setting

The time from when the instantaneous flow reaches the set value to when the switch output operates can be set.

Setting the delay time can prevent the switch output from chattering. (Default setting: 0 s)

F Zero-cut setting (F14)

When the flow display value is close to zero, this function forces the display to zero. The range to display zero can be changed within the range of 0.0 to 10.0%.

Example: When the PF2A711 (100/Lmin range), zero-cut value = 1.0%, 0 is displayed in the range of -9 to 9 kPa.

0.00 s
0.05 to 0.1 s (Increments of 0.01 s)
0.1 to 1.0 s (Increments of 0.1 s)
1 to 10 s (Increments of 1 s)
20 s
30 s
40 s
50 s
60 s

G Power-saving mode (F80)

Power-saving mode can be selected.

It shifts to power-saving mode automatically when there is no button operation for 30 seconds.

The product is set to normal mode (Power-saving mode is OFF) at the time of factory shipment.

(When in power-saving mode, [ECo] will flash in the sub screen and the operation light will be ON (only when the switch is ON).)

H Setting of security code (F81)

Users can select whether a security code must be entered to release the key lock.

At the time of factory shipment, it is set so that a security code is not required.

Accumulated value hold

The accumulated value is not cleared even when the power supply is turned OFF.

The accumulated value is memorized every 5 minutes during measurement and continues from the last memorized value when the power supply is turned ON again.

The life time of the memory device is 970,000 access times. Take this into consideration before using this function.



Function Details

J Snap shot function

The current flow rate value can be stored to the switch output ON/OFF set point.

When the items on the Sub display (left) are selected in either 3 step setting mode, Simple setting mode or Setting of each function mode, by pressing the (a) and (b) buttons simultaneously for 1 second or longer, the value of the sub display (right) will show "----", and the values corresponding to the current flow rate are automatically displayed.

Output mode	Configurable items	Sub display (left)	Snap shot function
I hyatawa sia wasala	Set value	P_1(n_1)/P_2(n_2)	0
Hysteresis mode	Hysteresis	H_ 1/ H_2	0
Window comparator mode	Set value	₽ ዜ (0
	Hysteresis	YK 17 YK2	×
Accumulated output mode	Set value	Y1, Y2, n1, n2	×

K Output check function

The output is forced ON/OFF when starting the system or during maintenance. This enables confirmation of the wiring and prevents system errors due to unexpected output.

* Also, the increase or decrease of the flow will not change the ON/OFF status of the output while the forced output function is activated.

■ Channel to channel copy function (F95)

Information that can be copied includes the following:


F0 (system setting): Connected range, displayed unit

F1 (OUT1 setting), F3 (digital filter), F10 (sub-screen setting), F14 (zero-cut setting)

When CH1 is copied to CH2, CH3, and CH4, information on OUT1 in CH1 will be copied.

When CH2 (CH3, or CH4) is copied to CH1, information on OUT1 in CH2 (CH3, or CH4) will be copied only to OUT1 in CH1.


st When the channel to channel copy function is used, the copied pressure set value may vary by ± 1 digit. Example) When copying CH1 to another channel

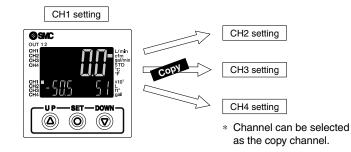

M Channel select function


Flow value for the selected channel is displayed.

The function setting of each channel is performed on the selected channel.

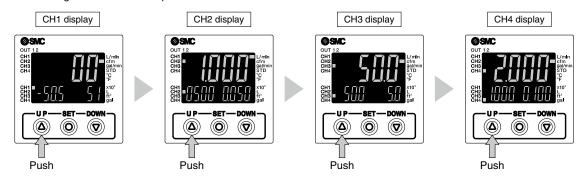

N Channel scan function

Flow values for each channel are displayed in turn every 2 seconds.

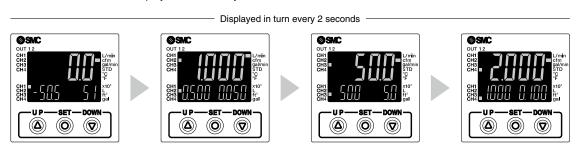



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

★ Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, ⚠ Danger: Danger indicates a nazaru wiun a nigin level on the first avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or
 - replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

⚠ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

↑ Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F.

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362

https://www.smcworld.com

© 2023 SMC Corporation All Rights Reserved

D-G