Flame Resistant (Equivalent to UL-94 Standard V-0) FR Double Layer Polyurethane Tubing

TRBU Series

Model

Fluid

Material

Max. operating


pressure (MPa)

Applicable fittings

Ambient and fluid temperature






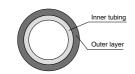

Sectional view of FR double layer tubing

Max. Operating Pressure

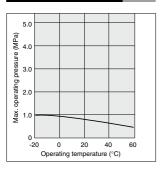

Model TRBU0604 TRBU0805 TRBU1065 TRBU1208 Inner tubing O.D. (mm) 6 10 12 Inner tubing I.D. (mm) 4 5 6.5 8 External layer thickness (mm) 1 1 1 Black (B) External layer color White (W) Red (R) Blue (BU) Yellow (Y) Green (G) Minimum bending 15 20 27 35 radius (mm) **Specifications**

Air/Water

0.65

FR one-touch fittings: KR-W2 series

-20 to +60°C Water: 0 to 40°C (No freezing)

Polyurethane

Polyolefin (Equivalent to UL-94 standard V-0)

Note) The color of all inner tubing is black.


Internal tubing

Outer layer

40°C

60°C

How to Order

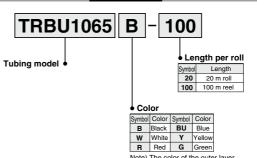


Note) The color of the outer layer of all tubing is opaque.

FR Double Layer Polyurethane Tubing TRBU Series

Installation on One-touch Fittings

∕ Caution

Lengths of tubes to be inserted into One-touch fittings are indicated on the outer layer of TRBU tubes. Cut the tube according to this indication, (Step 1) and then strip off the outer layer (Step 2) for installing into fittings.

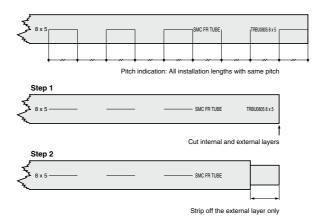

↑ Precautions

I Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 13 to 17 for Fittings and Tubing Precautions.

⚠Caution

Applicable for general industrial water. Please consult with SMC if using for the other kind of fluid.
Also, the surge voltage pressure must be under the maximum operating pressure.
If the surge pressure exceeds the maximum operating pressure, it will result in damage to fittings and tubes.

2. Abnormal temperature rise caused by adiabatic compression may result in the tube bursting.

 The value of the minimum bending radius is measured at the temperature of 20°C as shown in the figure on the right.



Bend the tube into U-form at a temperature of 20°C. Fix one end and close loop gradually. Measure 2R when the tube breaks or is crushed.

KQ2

KQB2

KM KF

M H/DL

L/LL KC

KK

KK130

DM KDM

KB KR

KA KQG2

KG

KFG2

MS

KKA KP

LQ

MQR

IDK

