




ORIGINAL INSTRUCTIONS

Instruction Manual
Stainless Steel Cylinder
55-CG5 Series

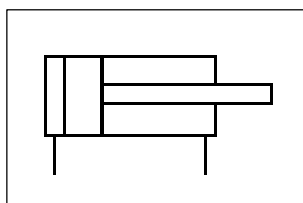

CE Ex II 2GD	Ex h IIC T4/T3 Gb	-10°C ≤ Ta ≤ +60°C
	Ex h IIIC T135°C/T155°C Db	

Product marking shown above is for the standard product.

ATEX Marking Description:

Ex	Specific Marking for Explosion Protection
II	Equipment Group
2	Equipment Category
GD	Environment (Gas/Dust)
Ex h	General Protection Level Symbols
IIC	Gas Sub-Division
IIIC	Dust Sub-Division
T	Temp. Classification
Gb/Db	Equipment Protection Level
X	Special Conditions of Use
Ta	Ambient Temperature Range

The intended use of this ATEX Category 2 actuator is to convert the potential energy provided by compressed air into a force which causes mechanical linear motion.

Certificate Number:	SMC21.0016X
---------------------	-------------

Note 1: The X at the end of the certificate number represents that this product is subject to "Special Conditions of Use", please see Section 2.3.

1 Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ⁽¹⁾, and other safety regulations.

- ⁽¹⁾ ISO 4414: Pneumatic fluid power - General rules relating to systems.
- ISO 4413: Hydraulic fluid power - General rules relating to systems.
- IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)
- ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.

- Refer to product catalogue, Operation Manual and Handling Precautions for SMC Products for additional information.
- Keep this manual in a safe place for future reference.

Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
Danger	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Warning

- Always ensure compliance with relevant safety laws and standards.
- All work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.

2 Specifications

This product is certified to ATEX Category 2GD and therefore is suitable for use in Zones 1, 2, 21 and 22 only.

2.1 Product Specifications:

Refer to the operation manual for this product;

2.1.1 Standard Product:

Fluid	Air			
Proof Pressure	1.5 MPa			
Max. Operating Pressure	1.0 MPa			
Min. Operating Pressure	0.05 MPa			
Ambient & Fluid Temperature	-10°C to +60°C			
Lubrication	Not Required			
Operating Piston Speed	Ø20 ~ Ø63	50 to 1000 mm/s		
	Ø80 ~ Ø100	50 to 750 mm/s		
Cushion	Rubber Bumper	Air Cushion		
	Allowable Kinetic Energy	Ø20	0.28 J	R: 0.35 J / H: 0.42 J
		Ø25	0.41 J	R: 0.56 J / H: 0.65 J
		Ø32	0.66 J	0.91 J
		Ø40	1.20 J	1.80 J
		Ø50	2.00 J	3.40 J
		Ø63	3.40 J	4.90 J
		Ø80	5.90 J	11.80 J
		Ø100	9.90 J	16.70 J

Note 1: "R" is Rod Cover side, "H" is Head Cover side.

2.2 Production Batch Code:

The batch code printed on the label indicates the month and the year of production as per the following table;

		Production Batch Codes											
Year	Month	2021	2022	2023	...	2028	2029	2030	...				
Jan	o	Zo	Ao	Bo	...	Go	Ho	io	...				
Feb	p	ZP	AP	BP	...	GP	HP	iP	...				
Mar	q	ZQ	AQ	BQ	...	GQ	HQ	iQ	...				
Apr	r	ZR	AR	BR	...	GR	HR	iR	...				
May	s	ZS	AS	BS	...	GS	HS	iS	...				
Jun	t	ZT	AT	BT	...	GT	HT	iT	...				
Jul	u	ZU	AU	BU	...	GU	HU	iU	...				
Aug	v	ZV	AV	BV	...	GV	HV	iV	...				
Sep	w	ZW	AW	BW	...	GW	HW	iW	...				
Oct	x	ZX	AX	BX	...	GX	HX	iX	...				
Nov	y	Zy	Ay	By	...	Gy	Hy	iy	...				
Dec	z	ZZ	AZ	BZ	...	GZ	HZ	iz	...				

2.3 Special Conditions of Use:

- Products are suitable for sub-divisions IIC & IIIC.
- Products are suitable for Zones 1, 2, 21 & 22 only.

2.3.1 Temperature Marking:

2.3.1.1 Standard Product:

- In the normal ambient temperature range (-10°C to +40°C) the product is rated to temperature class T4 and has a maximum surface temperature of 135°C.
- In the special ambient temperature range (+40°C to +60°C) the product is rated to temperature class T3 and has a maximum surface temperature of 155°C.

3 Installation

3.1 Installation

Warning

- Do not install the product unless the safety instructions have been read and understood.
- Do not twist or bend the cylinder, or mount the product when subject to tension.

3 Installation - continued

- Do not use in an application where the product is stopped mid-stroke, via an external stop.
- Do not use synchronised cylinders to move a single load.
- In order to install the product, use one of the brackets available found in the standard product catalogue;

Mounting Bracket [Part Number]	Sketch	Mounting Bracket [Part Number]	Sketch
Pivot Bracket [CG-E***SUS]		Axial Foot [CG-L***SUS]	
Flange [CG-F***SUS]			

Note 2: The "****" represents the Bore Size (e.g. Ø32 is 032), see catalogue for more details.

Bore [mm]	Mounting Bracket	Tightening Torque [N.m]
Ø 20	Foot, Flange	1.0
Ø 25 & Ø 32		2.0
Ø 40		3.4
Ø 50		8.3
Ø 63 & Ø 80		14.7
Ø 100		25.5

Rod End Accessories	Sketch	Series
Single Knuckle Joint		I-G**SUS
Double Knuckle Joint		Y-G**SUS
Rod End Nut		NT-**SUS

Note 3: See the product catalogue for the exact code to order which relates to the bore size of your product.

3.2 Environment

Warning

- Do not use in an environment where corrosive gases, chemicals, salt water or steam are present.
- Do not use in an explosive atmosphere.
- Do not expose to direct sunlight. Use a suitable protective cover.
- Do not install in a location subject to vibration or impact in excess of the product's specifications.
- Do not mount in a location exposed to radiant heat that would result in temperatures in excess of the product's specifications.
- Do not use in a place subject to heavy vibration and/or shock.
- Do not use in wet environments, where water can remove the presence of the lubrication.
- Do not use in case of heavy dusty environments where dust can penetrate into the cylinder and dry the grease.
- Do not allow dust layers to build up on the cylinder surface and insulate the product.


3.3 Piping

Caution

- Before connecting piping make sure to clean up chips, cutting oil, dust etc.

3 Installation - continued

- When installing piping or fittings, ensure sealant material does not enter inside the port. When using seal tape, leave 1 thread exposed on the end of the pipe/fitting.
- Tighten fittings to the specified tightening torque.

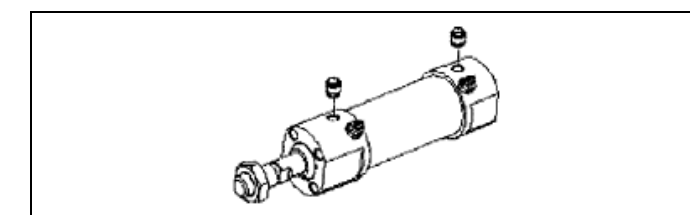

Rubber Bumper		Air Cushion	
Bore [mm]	Port Size	Bore [mm]	Port Size
Ø 20 & Ø 25	[Ni] Rc 1/8 [TN] NPT 1/8 [TF] M5 x 0.8	Ø 20 & Ø 25	M5 x 0.8
Ø 32 & Ø 40	[Ni] Rc 1/8 [TN] NPT 1/8 [TF] G 1/8	Ø 32 & Ø 40	[Ni] Rc 1/8 [TN] NPT 1/8 [TF] G 1/8
Ø 50 & Ø 63	[Ni] Rc 1/4 [TN] NPT 1/4 [TF] G 1/4	Ø 50 & Ø 63	[Ni] Rc 1/4 [TN] NPT 1/4 [TF] G 1/4
Ø 80	[Ni] Rc 3/8 [TN] NPT 3/8 [TF] G 3/8	Ø 80	[Ni] Rc 3/8 [TN] NPT 3/8 [TF] G 3/8
Ø 100	[Ni] Rc 1/2 [TN] NPT 1/2 [TF] G 1/2	Ø 100	[Ni] Rc 1/2 [TN] NPT 1/2 [TF] G 1/2


3.4 Lubrication

Caution

- SMC products have been lubricated for life at manufacture, and do not require lubrication in service.

- If a lubricant is used in the system, refer to catalogue for details.

3.5 Basic Circuit

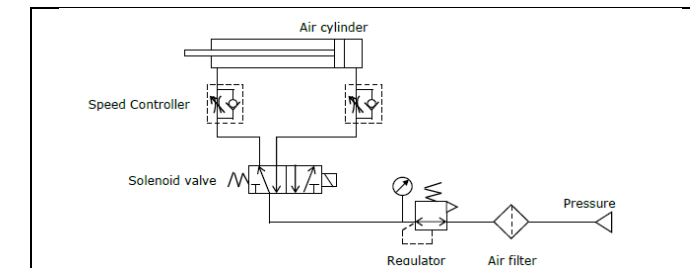

- Plugging one of the ports on the actuator is considered a non-intended use, and could relate to an increase in maximum surface temperature above what the product specification declares.

3.6 Electrical Connection

- The product should be grounded by the piston rod and the body in order to create an electrically conductive path to the system/application.
- Ground the product in accordance with applicable regulations.
- Do not pass an electrical current through the product.

4 Settings

4.1 Air Cushion Adjustment

- For air cushion adjustment, tighten or loosen the cushion valve using a suitable screw driver.

4 Settings - continued

- Be certain to activate the air cushion at the stroke end. When the air cushion is inactivated, if the allowable kinetic energy exceeds the maximum allowable value, the piston-rod assembly or the tie rod may be damaged. Set the air cushion to valid when operating the cylinder.

- Do not operate the cushion valve in the fully closed or fully opened state.

Using it in the fully closed state will cause the cushion seal to be damaged. Using it in the fully opened state will cause the piston rod assembly or the cover to be damaged.

5 How to Order

Refer to standard product catalogue for 'How to Order'.

6 Outline Dimensions

Refer to standard product catalogue for outline dimensions.

7 Maintenance

7.1 General maintenance

⚠ Caution

- Not following proper maintenance procedures could cause the product to malfunction and lead to equipment damage.
- If handled improperly, compressed air can be dangerous.
- Maintenance of pneumatic systems should be performed only by qualified personnel.
- Before performing maintenance, turn off the power supply and be sure to cut off the supply pressure. Confirm that the air is released to atmosphere.
- After installation and maintenance, apply operating pressure and power to the equipment and perform appropriate functional and leakage tests to make sure the equipment is installed correctly.
- If any electrical connections are disturbed during maintenance, ensure they are reconnected correctly and safety checks are carried out as required to ensure continued compliance with applicable national regulations.
- Do not make any modification to the product.
- Do not disassemble the product, unless required by installation or maintenance instructions.
- Do not use a product which looks or contains damage, this will


invalidate the certification. If damage is seen, please replace the product immediately.

- Periodically check the product for any damage or rust appearing. This could result in an increase in friction and lead to dangerous conditions. Replace the whole actuator if any of these conditions appear.
- Periodically check the condition of the rod seal and for the presence of lubrication, where possible. If these areas appear to be dry, please follow the lubrication procedure.
- Replace the seals, when air leakage is above the allowable value given in the table below;


	Allowable Leakage
Internal Leakage	10 cm ³ / min (ANR)
External Leakage	5 cm ³ / min (ANR)

7.2 Disassembly Procedure

- Ø50 or larger bore size cannot be disassembled. These should be replaced with a new product if leakage is experienced.
- For Ø20-Ø40, follow the following steps.

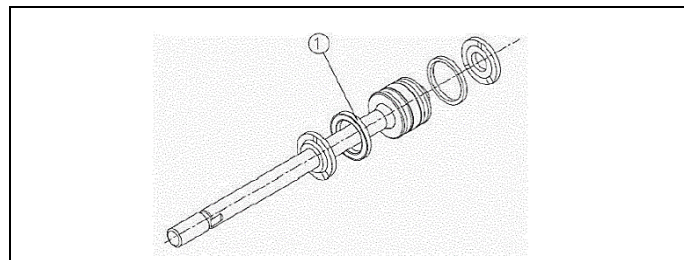

7 Maintenance - continued

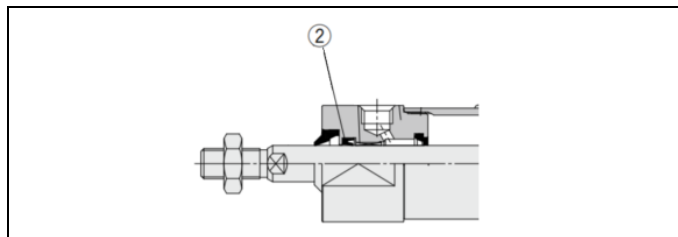

1	Piston Seal	2	Rod Seal
---	-------------	---	----------

- Gently hold the head cover on the spanner flats in a vice. Ensure this is securely fastened. Loosen the rod cover by applying a spanner or a monkey wrench to the flats on the rod cover.
- Disassemble the cylinder components and place the parts on a clean cloth in a clean environment. Remove the old grease.
- The 55-CG5 series uses thread sealant to ensure an air-tight construction. When disassembling ensure to remove the sealant from any threads.

⚠ Caution

- If a magnet is present on the piston do not remove it. The magnet is not replaceable.

7.3 Seal Replacement Part Numbers

⚠ Warning

Only use SMC seal kits as listed in the table below;

Description	Applicable Bore [mm]	Part Number
Single Rod Rubber Bumper ('SR')	Ø 20 ~ Ø 40	CG5N*SR-PS
Single Rod Air Cushion ('SR')	Ø 20 ~ Ø 40	CG5A*SR-PS
Single Rod Rubber Bumper ('SV')	Ø 20 ~ Ø 40	CG5N*SV-PS
Single Rod Air Cushion ('SV')	Ø 20 ~ Ø 40	CG5A*SV-PS

Note 4: The * represents the Bore Size (e.g. Ø20 is 20).

7.4 Lubrication Procedure

- Apply lubricant to:

- The rod seal and the rod bush.
- The piston outer surface and piston seal groove.
- The piston seal and cushion seals.
- The piston rod surface and cylinder tube internal surface.

- Lubricate the parts with the grease packs provided with the seal kit. For additional grease use the grease pack listed below.

Product	Grease Pack Number	Weight [g]
Standard	GR-R-010	10

The amount of lubricant to be applied is listed in the following table.

Bore [mm]	Stroke up to 100mm [g]	For each additional 50mm Stroke [g]
Ø 20	2	0.5
Ø 25 ~ Ø 32	3	0.5
Ø 40	3 ~ 4	1.0

7.5 Reassembly Procedure

- Insert the new seals into the appropriate seal groove.
- Insert the piston rod assembly into the cylinder tube. Be careful not to damage the piston seal.
- Attach the cover to the tube. Be careful not to damage the rod seal.
- Attach Loctite 542 thread sealant or equivalent product to the threads when reassembling.
- On reassembly, tighten the rod cover so that it is between 0° and 2° further rotated than it was prior to dismantling.
- Check the cylinder for smooth movement and for air leakage before fully re-installing to the machine.

8 Limitations of Use

8.1 Limited warranty and disclaimer/compliance requirements

Refer to Handling Precautions for SMC Products.

8.2 Obligations of the end-user

- Ensure the product is used within the specification outlined.

- Ensure that the maintenance periods are suitable for the application.
- Ensure any cleaning processes to remove dust layers are made with the atmosphere in mind (e.g. using a damp cloth to avoid static build up).
- Ensure that the application does not introduce additional hazards by mounting, loading, impacts or other methods.
- Ensure that there is sufficient ventilation and air circulation around the product.
- If the product is subject to direct heat sources in the application, they should be shielded so that the actuator temperature stays within the stated operating range.

⚠ Danger

- Do not exceed any of the specifications listed in Section 2 of this document as this will be deemed improper use.
- Air equipment has an air leakage during operation within certain limits. Do not use this equipment when the air itself introduces additional hazards and could lead to an explosion.
- Use only ATEX certified auto switches. These should be ordered separately.
- Do not use this product in the presence of strong magnetic fields that could generate a surface temperature higher than the product specification.
- Avoid applications where the piston rod end and the adjoining part in the application can create a possible ignition source.
- Do not install or use these actuators where there is the possibility for the piston rod to impact foreign objects.
- In the event of damage or failure of any parts located in the vicinity where this product has been installed, it is the responsibility of the user to determine whether or not this has compromised the safety and condition of this product and/or the application.
- External impact on the cylinder body could result in a spark and/or cylinder damage. Avoid any application where foreign objects can hit or impact the cylinder. In such situations the application should install a suitable guard to prevent this occurrence.
- Do not use this equipment where vibration could lead to failure.

9 Product Disposal

This product shall not be disposed of as municipal waste. Check your local regulations and guidelines to dispose this product correctly, in order to reduce the impact on human health and the environment.

10 Contacts

Refer to www.smcworld.com or www.smc.eu for your local distributor/importer.

SMC Corporation

URL : <https://www.smcworld.com> (Global) <https://www.smc.eu> (Europe)
SMC Corporation, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, Japan
Specifications are subject to change without prior notice from the manufacturer.
© 2021 SMC Corporation All Rights Reserved.
Template DKP50047-F-085M