



Instruction Manual

Electric Actuator / Slider type

Series LEKFS

Motor: AC servo motor (100-200 VAC)



The intended use of this Electrical Actuator is to convert an electrical input signal into mechanical motion.

1 Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)⁽¹⁾, and other safety regulations.

- ⁽¹⁾ ISO 4414: Pneumatic fluid power - General rules relating to systems.
ISO 4413: Hydraulic fluid power - General rules relating to systems.
IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots - Safety. etc.
- Refer to the product catalogue, Operation Manual and Handling Precautions for SMC Products for additional information.
 - Keep this manual in a safe place for future reference.

	Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
	Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
	Danger	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Warning

- Always ensure compliance with relevant safety laws and standards. All work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.

2 Specifications

2.1 LEKFS – AC Servo motor type S* / T*

Model		LEKFS25**			LEKFS32**			LEKFS40**			
Actuator specification	Stroke [mm]	100 to 500			100 to 500			200 to 600			
	Max. Work load [kg] * ⁽¹⁾	Horizontal	10	20	20	30	40	45	30	50	60
		Vertical	4	8	15	5	10	20	7	15	30
	Speed [mm/s] * ⁽²⁾	Stroke Up to 400	1500	900	450	1500	1000	500	1500	1000	500
		401 to 500	1200	720	360	1500	1000	500	1500	1000	500
		501 to 600	-	-	-	-	-	-	1500	1000	500
	Max. acceleration / deceleration [mm/s ²]	20000 (refer to catalogue for limit according to work load / duty rate).									
	Positioning repeatability [mm]	±0.01									
	Lost motion [mm] * ⁽³⁾	0.05 or less									
	Screw Lead [mm]	20	12	6	24	16	8	30	20	10	
Impact / Vibration resistance [m/s ²] * ⁽⁴⁾	50 / 20										
Actuation method	Ball screw (LEKFS*) Ball screw + Belt (LEKFS*R/L)										
Guide type	Linear guide										
Operating temperature	5 to 40 °C										
Operating humidity	90 %RH or less (no condensation)										
Electrical	Motor output / size [mm]	100 W / □40			200 W / □60			400 W / □60			
	Motor type	AC Servo motor (100 / 200 VAC)									
	Encoder * ⁽⁷⁾	S2, S3, S4	Incremental 17 bit encoder (131072 pulse / rev)								
		T6, T7, T8	Absolute 22 bit encoder (4194304 pulse / rev) (For LECSB-T□, LECS-S-T□, LECSN-T□)								
		T6, T7, T8	Absolute 18 bit encoder (262144 pulse / rev) (For LECS-C-T□)								
Max. Power [W] * ⁽⁵⁾	445			725			1275				
Lock	Lock Type * ⁽⁶⁾	Non magnetizing lock									
	Holding force [N]	78	131	255	131	197	385	220	330	660	
	Power [W] @ 20°C	6.3			7.9			7.9			
	Power Supply voltage [V]	24 VDC +0/-10%									

- *1) Check the "Speed-Work Load Graph" as a Guide in the catalogue on the SMC website (URL: <https://www.smcworld.com>).
- *2) The allowable speed varies according to the stroke.
- *3) A reference value for correcting an error in reciprocal operation.
- *4) Impact resistance: No malfunction occurred when the actuator was tested with a drop tester in both an axial and a perpendicular direction to the lead screw. The test was performed with the actuator in the initialized state.
Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. The test was performed in both an axial and a perpendicular direction to the lead screw. The test was performed with the actuator in the initialized state.
- *5) Indicates the maximum power consumption during operation, including the driver. Refer to the driver operation manual for power supply selection.
- *6) For models with lock only.
- *7) For motor type T6, T7 and T8 the encoder resolution changes depending on the driver type.

2.1.1 Product weight [kg]

Series	LEKFS25**S2/T6					
Stroke [mm]	100	200	300	400	500	
Motor type	S2	2.1	2.4	2.7	2.9	3.2
	T6	2.2	2.5	2.8	3.0	3.3
Lock weight [kg]	S2: 0.2 / T6: 0.3					

Series	LEKFS32**S3/T7					
Stroke [mm]	100	200	300	400	500	
Motor type	S3	3.6	4.0	4.5	4.9	5.3
	T7	3.5	3.9	4.4	4.8	5.2
Lock weight [kg]	S3: 0.4 / T7: 0.5					

Series	LEKFS40**S4/T8					
Stroke [mm]	200	300	400	500	600	
Motor type	S4	6.2	6.8	7.4	8.0	8.6
	T8	6.3	6.9	7.5	8.1	8.7
Lock weight [kg]	0.5					

2 Specifications (continued)

2.2 LEKFS – AC Servo motor type V*

Model		LEKFS25*V6			LEKFS32*V7			LEKFS40*V8			
Actuator specification	Stroke [mm]	100 to 500			100 to 500			200 to 600			
	Max. Work load [kg] * ⁽¹⁾	Horizontal	10	20	20	30	40	45	30	50	60
		Vertical	4	8	15	5	10	20	7	15	30
	Speed [mm/s] * ⁽²⁾	Stroke Up to 400	1500	900	450	1500	1000	500	1500	1000	500
		401 to 500	1200	720	360	1500	1000	500	1500	1000	500
		501 to 600	-	-	-	-	-	-	1500	1000	500
	Max. acceleration / deceleration [mm/s ²]	20000 (refer to catalogue for limit according to work load / duty rate).									
	Positioning repeatability [mm]	±0.01									
	Lost motion [mm] * ⁽³⁾	0.05 or less									
	Screw Lead [mm]	20	12	6	24	16	8	30	20	10	
Impact / Vibration resistance [m/s ²] * ⁽⁴⁾	50 / 20										
Actuation method	Ball screw (LEKFS*) Ball screw + Belt (LEKFS*R/L)										
Guide type	Linear guide										
Operating temperature	5 to 40 °C										
Operating humidity	90 %RH or less (no condensation)										
Electrical	Motor output / size [mm]	100 W / □40			200 W / □60			400 W / □60			
	Motor type	AC Servo motor (100 / 200 VAC)									
	Encoder	Absolute 20 bit encoder (1048576 pulse / rev)									
Lock	Max. Power [W] * ⁽⁵⁾	445			725			1275			
	Lock Type * ⁽⁶⁾	Non magnetizing lock									
	Holding force [N]	78	131	255	131	197	385	220	330	660	
	Power [W] @ 20°C	5.5			6.0			6.0			
Power Supply voltage [V]	24 VDC +0/-10%										

- *1) Check the "Speed-Work Load Graph" as a Guide in the catalogue on the SMC website (URL: <https://www.smcworld.com>).
- *2) The allowable speed varies according to the stroke.
- *3) A reference value for correcting an error in reciprocal operation.
- *4) Impact resistance: No malfunction occurred when the actuator was tested with a drop tester in both an axial and a perpendicular direction to the lead screw. The test was performed with the actuator in the initialized state.
Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. The test was performed in both an axial and a perpendicular direction to the lead screw. The test was performed with the actuator in the initialized state.
- *5) Indicates the maximum power consumption during operation, including the driver. Refer to the driver operation manual for power supply selection.
- *6) For models with lock only.

2.2.1 Product weight [kg]

Series	LEKFS25*V6				
Stroke [mm]	100	200	300	400	500
Product weight [kg]	2.2	2.5	2.8	3.0	3.3
Lock weight [kg]	0.3				

Series	LEKFS32*V7				
Stroke [mm]	100	200	300	400	500
Product weight [kg]	3.6	4.0	4.5	4.9	5.3
Lock weight [kg]	0.7				

Series	LEKFS40*V8				
Stroke [mm]	200	300	400	500	600
Product weight [kg]	6.3	6.9	7.5	8.1	8.7
Lock weight [kg]	0.7				

Warning

- Special products (-X#, -D#) might have specifications different from those shown in the specifications section. Contact SMC for specific drawings.


3 Installation

3.1 Installation

Warning

- Do not install the product unless the safety instructions have been read and understood.
- Do not use the product in excess of its allowable specification.
- When installing, inspecting or performing maintenance on the product, be sure to turn off the power supplies. Then, lock it so it cannot be tampered with while work is happening.
- Keep the flatness of the mounting surface to within 0.1 mm maximum. Insufficient flatness of a work piece or actuator mounting surface can cause play in the guide and increased sliding resistance. In the case of overhang mounting (including cantilever), use a support plate or support guide to avoid deflection of the actuator body.
- When mounting the actuator, use all mounting holes.
- If all mounting holes are not used, this will not maintain the specified performance. e.g. the amount of displacement of the table will increase.
- When mounting the actuator leave a gap of 40 mm or more to allow for bending of the actuator cable.
- When mounting the actuator or workpiece, use screws with adequate length and tighten them with adequate torque.
- Tightening the screws with a torque higher than recommended may cause malfunction, whilst tightening with a torque lower than recommended can cause displacement of the mounting position, or dropping of the work piece.


Actuator Mounting

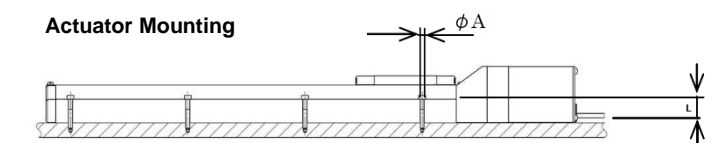

Model	Screw size	Max. tightening torque [N.m]	Ø A [mm]	L [mm]
LEKFS25	M4	1.5	4.5	24
LEKFS32	M5	3.0	5.5	30
LEKFS40	M6	5.2	6.6	31

Work piece Mounting

- In order to prevent the work piece fixing screws from damaging the table, use screws at least 0.5 mm shorter than the maximum thread depth. Longer screws can hit the body and cause operation failure.

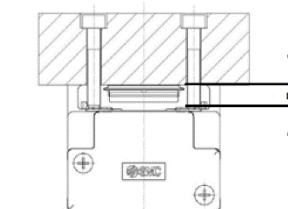

Model	Screw size	Max. tightening torque [N.m]	L Max. thread depth [mm]
LEKFS25	M5 x 0.8	3.0	8
LEKFS32	M6 x 1.0	5.2	9
LEKFS40	M8 x 1.25	12.5	13

3.2 Environment

Warning

- Do not use in an environment where corrosive gases, chemicals, salt water or steam are present.
- Do not use in an explosive atmosphere.
- Do not expose to direct sunlight. Use a suitable protective cover.
- Do not install in a location subject to vibration or impact in excess of the product's specifications.
- Do not mount in a location exposed to radiant heat that would result in temperatures in excess of the product's specifications.
- Prevent foreign particles from entering the product.

3 Installation (continued)

3.3 Mounting

Warning

- Observe the required tightening torque for screws. Unless stated otherwise, tighten the screws to the recommended torque for mounting the product.
- Do not make any alterations to the product. Alterations made to this product may lead to a loss of durability and damage to the product, which can lead to injury and damage to other equipment and machinery. Do not scratch or dent the sliding parts of the table or mounting face etc., by striking or holding them with other objects. The components are manufactured to precise tolerances, so that even a slight deformation may cause faulty operation or seizure.
- Do not use the product until it has been verified that the equipment can be operated correctly. After mounting or repair, connect the power supply to the product and perform appropriate functional inspections to check it is mounted correctly.
- Do not use the product until it has been verified that the equipment can be operated correctly. After mounting or repair, connect the power supply to the product and perform appropriate functional inspections to check it is mounted correctly.

3.4 Lubrication

Caution

- SMC products have been lubricated for life at manufacture, and do not require lubrication in service.
- If a lubricant is used in the system, refer to the catalogue for details.
- The recommended grease is lithium grade No.2

Apply for	Grease Pack order No.
Ball screw and Guide	GR-S-010(10g)
	GR-S-020(20g)

4 Wiring

4.1 Wiring

Warning

- Adjustment, mounting or wiring changes should not be carried out before disconnecting the power supply to the product. Electric shock, malfunction and damage can result.
- Do not disassemble the cables.
- Use only specified cables. Use only specified cables otherwise there may be risk of fire and damage.
- Do not connect or disconnect the wires, cables and connectors when the power is turned on.


Caution

- Wire the connector correctly and securely. Check the connector for polarity and do not apply any voltage to the terminals other than those specified in the Operation Manual.
- Take appropriate measures against noise. Noise in a signal line may cause malfunction. As a countermeasure separate the high voltage and low voltage cables, and shorten the wiring lengths, etc.
- Do not route input/output wires and cables together with power or high voltage cables. The product can malfunction due to noise interference and surge voltage from power and high voltage cables close to the signal line. Route the wires of the product separately from power or high voltage cables.
- Take care that actuator movement does not catch cables.
- Operate with all wires and cables secured.
- Avoid bending cables at sharp angles where they enter the product. Avoid twisting, folding, rotating or applying an external force to the cable. Risk of electric shock, wire breakage, contact failure and loss of control of the product can result.

4 Wiring (continued)

- Select "Robotic cables" in applications where cables are moving repeatedly (encoder/ motor/ lock).
- Confirm correct insulation. Poor insulation of wires, cables, connectors, terminals etc. can cause interference with other circuits. Also there is the possibility that excessive voltage or current may be applied to the product causing damage.
- Refer to the auto switch references in "Best Pneumatics" when an auto switch is to be used

4.2 Wiring of Actuator to Driver

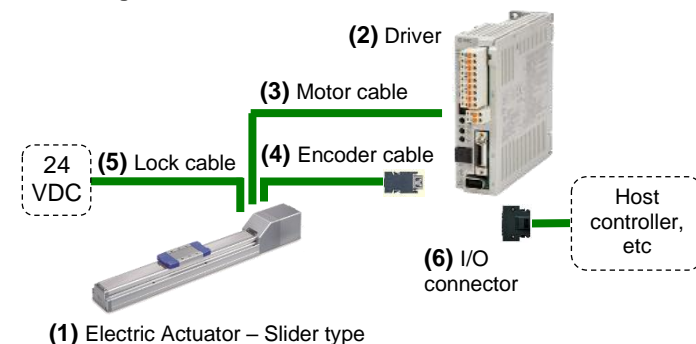

*1 The picture shows the LECSA driver.

*2 The shape of the driver and I/O connectors differ depending on the driver type.

4.3 Actuator Ground connection

- The Actuator must be connected to ground to shield the actuator from electrical noise. The screw and cable with crimping terminal and toothed washer should be prepared separately by the user.
- The ground wire cross sectional area should be 2 mm² minimum.
- Avoid shared grounding points with other devices.

5 How to Order

Refer to the catalogue on the SMC website (URL: <https://www.smcworld.com>) for the How to Order information.

6 Outline Dimensions (mm)

Refer to the drawings / operation manual on the SMC website (URL: <https://www.smcworld.com>) for outline dimensions.

7 Maintenance

7.1 General Maintenance

Caution

- Not following proper maintenance procedures could cause the product to malfunction and lead to equipment damage.
- If handled improperly electricity and compressed air can be dangerous.
- Maintenance of electromechanical and pneumatic systems should be performed only by qualified personnel.
- Before performing maintenance, turn off the power supply and be sure to cut off the supply pressure. Confirm that the power has been discharged and the air is released to atmosphere.
- After installation and maintenance, apply operating pressure and power to the equipment and perform appropriate functional and leakage tests to make sure the equipment is installed correctly.
- If any electrical or pneumatic connections are disturbed during maintenance, ensure they are reconnected correctly and safety checks are carried out as required to ensure continued compliance with applicable national regulations.
- Do not make any modification to the product.
- Do not disassemble the product, unless required by installation or maintenance instructions.
- Incorrect handling can cause an injury, damage or malfunction of the equipment and machinery, so ensure that the procedure for the task is followed.

7 Maintenance (continued)

- Always allow sufficient space around the product to complete any maintenance and inspection.

7.2 Periodical Maintenance

- Maintenance should be performed according to the table below:

Frequency	Appearance Check	Internal check	Belt Check
Before daily operation	✓	✓	✓
Every 6 months*	✓	✓	✓
Every 1,000 km*	✓	✓	✓
Every 5 million cycles*	✓	✓	✓

*whichever of these occurs first.

- Following any maintenance, always perform a system check. Do not use the product if any error occurs, as safety cannot be assured if caused by any un-intentional malfunction.

7.3 Appearance Check

- The following items should be visually monitored to ensure that the actuator remains in good condition and there are no concerns flagged;
 - Loose Screws,
 - Abnormal level of dust or dirt,
 - Visual flaws / faults,
 - Cable connections,
 - Abnormal noises or vibrations.

7.4 Belt Check

- If one of the 6 conditions below are seen, do not continue operating the actuator, contact SMC immediately.

- **Tooth shaped canvas is worn out.**

Canvas fibre becomes "fuzzy", rubber is removed, and the fibre gains a white colour. The lines of fibre become very unclear.



- **Peeling off or wearing of the side of the belt.**

The corner of the belt becomes round and frayed, with threads beginning to stick out.

- **Belt is partially cut.**

Belt is partially cut. Foreign matter could be caught in the teeth and cause flaws.



- **Vertical line of belt teeth.**

Flaw which is made when the belt runs on the flange.

- **Rubber back of the belt is softened and sticky.**

- **Crack on the back of the belt.**



8 Limitations of Use

8.1 Limited warranty and Disclaimer/Compliance Requirements

- Refer to Handling Precautions for SMC Products.

9 Product disposal

This product should not be disposed of as municipal waste. Check your local regulations and guidelines to dispose of this product correctly, in order to reduce the impact on human health and the environment.

10 Contacts

Refer to www.smcworld.com or www.smc.eu for your local distributor / importer.

SMC Corporation

URL : <http://www.smcworld.com> (Global) <http://www.smc.eu> (Europe)
 SMC Corporation, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, Japan
 Specifications are subject to change without prior notice from the manufacturer.
 © 2021 SMC Corporation All Rights Reserved.
 Template DKP50047-F-085M