

ORIGINAL INSTRUCTIONS

Instruction Manual Electric Actuator / Rod Type Series LEY

Motor: Step [Servo 24 VDC], Battery-less absolute [Step 24 VDC], Servo [24 VDC], High performance Step motor [Servo 24 VDC], High performance Battery-less absolute [Step 24 VDC]



The intended use of this Electrical Actuator is to convert an electrical input signal into mechanical motion.

1 Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) *1), and other safety regulations. *1 ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots -Safety. etc.

- Refer to the product catalogue, Operation Manual and Handling Precautions for SMC Products for additional information.
- Keep this manual in a safe place for future reference.

▲ Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
▲ Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Marning

- Always ensure compliance with relevant safety laws and standards.
- All work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.

2 Specifications

Series LEY - Motor: Step [servo 24 VDC]

	Model					EY1	6	L	EY2	5	L	EY3	2	L	LEY40	
		Stro	ke [mm]	30) to 3	00	30) to 4	00	30) to 50	00	30) to 50	00
		(Con	zontal toller	(3000 mm²/s)	6	17	30	20	40	60	30	45	60	50	60	80
	Work	LEC	XC*1/ CP1)	(2000 mm²/s)	10	23	35	30	55	70	40	60	80	60	70	90
	load [kg]* 1	(Cor	ontal toller XC*2,3	(3000 mm²/s)	4	11	20	12	30	30	20	40	40	30	60	60
	1	ļ [*]	/ CPA)	(2000 mm²/s)	6	17	30	18	50	50	30	60	60	-	-	-
		Ver	tical	(3000 mm²/s)	2	4	8	8	16	30	11	22	43	13	27	53
	Pushing force [N] *2*3*4		14 to 38	27 to 74	51 to 141	63 to 122	126 to 238	232 to 452	80 to 189	156 to 370	296 to 707	132 to 283	266 to 553	562 to 105		
Actuator		JXC□1*/LECP1		15 to	8 to	4 to	18 to	9 to	5 to	24 to	12 to 300	6 to 150		12 to 350	6 to 175	
Aci	[mm/s	LECPA/JXC□2,3		500	250	125	500	250	125		12 to 250	6 to 125	24 to 300	12 to 150	6 to 75	
	Acceleration/deceleration							3,0	00							
		٠.	ed [m m	•	50	or le	ss	35	or le	ss	30	or le	ss	30	or le	ss
				bility [mm]		+/- 0.02										
			[mm] ^{*6}		0.1 or less											
		lead [10	5	2.5	12	6	3	16	8	4	16	8	4
			n/s²] *7		50 / 20											
								Ball s	crew	and	Belt (For "L	EY=))		
	Actua	tion typ	е									.EY□[
	Guide							Slidi	ing b	ush(F	iston	rod	oart)			
	range	[°C]	mperati							5 to						
	Opera		ımıdıtyı	range [%RH]		⊓28		90 c	r les: ⊓42	s(No		ensat ⊒56.4			□56.4	1
_	Motor	-				⊔20		Ste		tor (S		24VD				•
ectrical	Encod				I	ncren					0 pul		tation)		
Elect		l voltag							24	VDC	+/- 10)%				
Ш	Maxinstantaneous power consumption [[W]*8				43			48			104			106		
ŧ	Type *9										g locl					
Lock unit		ng force		***	20	39	78	78		294	108	216	421	127		519
Loo			umption	[W] *10		2.9			5			5			5	
	Rated voltage [V]								24	VDC	+/-10	%				

Series LEY - Motor: Battery-less absolute [Step 24 VDC]

	M	odel	L	EY16*	*E	L	EY 25**	Έ	L	EY32*	E.	L	EY40*	*E	
	Strok	e [mm]	3	0 to 30	0	3	30 to 40)	3	0 to 50	0	3	0 to 50	0	
		Horizontal (3000 mm ² /s)	6	17	30	20	40	60	30	45	60	50	60	80	
	Work load [kg] *1	Horizontal (2000 mm ² /s)	10	23	35	30	55	70	40	60	80	60	70	90	
		Vertical (3000 mm ² /s)	2	4	8	8	16	30	11	22	43	13	27	53	
	Pushing fo	rce [N] *2 *3 *4	14 to 38	27 to 74	51 to 141	63 to 122	126 to 238	232 to 452	80 to 189	156 to 370	296 to 707	132 to 283	266 to 553	562 to 1058	
	Speed [mn	n/s]	15 to 500	8 to 250	4 to 125	18 to 500	9 to 250	5 to 125	24 to 500	12 to 300	6 to 150	24 to 500	12 to 300	6 to 150	
	Acceleration						3,0	000							
ъ	Pushing sp	5	0 or les	s	3	5 or les	s	3	0 or les	s	3	0 or les	s		
Actuator	,	repeatability						+/- (0.02						
⋖	[mm]	- (1 %						0.4							
	Lost motio Screw lead		10	5	2.5	12	6	0.1 or	16	8	4	16	8	4	
	Impact /Vil		10	5	2.5	12	О	3	16	٥	4	16	٥	4	
	resistance			50 / 20											
	Actuation t	уре				E	Ball scre	w and E screw (F)				
	Guide type)						bush(P							
		temperature						•		, ,					
	range [°C]							5 to	40						
	Operating I range [%F	,					90 or l	ess(No	conden	sation)					
	Motor size			□28			□42			□56.4			□56.4		
_	Type of Mo	otor				Batter	y-less a	absolute	(Step	motor24	VDC)				
Electrical	Encoder					Batter	y-less a	bsolute	(4096)	oulse/ro	tation)				
8	Rated volt	age [V]	24 VDC+/- 10%												
iii	Max.instan	taneous power	ous power 43 48 104 10					106							
	Type *9		 				No	n-magne	etizina li	nck					
Lock unit	Holding for	rce [N]	20	39	78	78	157	294	108	216	421	127	264	519	
ž		sumption [W] *10	20	2.9	, 0	, 0	5	234	100	5	721	121	5	515	
2	Rated volt		1	2.3				24 VDC	+/-10%				J		
	rtatou voit	490 [1]	L					,,,,,	., 10 /						

2 Specifications (continued)

Series LEY - Motor: Servo [24 VDC]

	Mo		LEY16A		LEY25A						
	Stroke	e [mm]	,	30 to 300)		30 to 400				
	Work load	Horizontal (3000 mm ² /s)	3	6	12	7	15	30			
	[kg] *1	Vertical (3000 mm ² /s)	2	4	8	3	6	12			
	Pushing force [N] *2*3*4		16 to 30	30 to 58	57 to 111	18 to 35	35 to 72	66 to 130			
	Speed [mm/s]		1 to 500	1 to 250	1 to 125	2 to 500	1 to 250	1 to 125			
	Acceleration/deceleration				3,0	000					
	Pushing sp		50 or less	3		35 or less	3				
tor	Positioning	repeatability			./ /	0.02					
Actuator	[mm]				+/- (J.UZ					
Ac	Lost motion	n [mm] ^{*6}			0.1 o	r less					
	Screw lead		10	5	2.5	12	6	3			
	Impact /Vib				50	/ 20					
	resistance	[m/s²] *7									
	Actuation ty				Belt (For						
						For "LEY					
	Guide ty pe			Slidin	g bush(F	iston rod	part)				
	Operating to	emperature	5 to 40								
	range [°C] Operating h	umidity									
	range [%R	•		90 or	less(No	condens	ation)				
	Motor size			□28			□42				
	Motor outpu	ıt [W]		30			36				
g	Motor type	[]			erv o mot	or (24VD					
Electrical	Encoder		Increme				rotation)	Z phase			
Ē	Rated volta	age [V]			<u> </u>	+/- 10%	,				
		aneous power				T					
	consumption		59			96					
ij	Ty pe ^{*9}		N	on-magn	etizing lo	ck					
5	Holding for	ce [N]	20	39	78	78	157	294			
Lock unit		sumption [W] *10									
	Rated volta	age [V]			24 VDC	+/-10%					
	•	-	•								

Series LEY - Motor: High performance Step motor [Servo 24 VDC]

	Model				EY 16	F	L	EY 25	F	LEY40F		
		Stroke [mm	1]	3	0 to 30	00	30) to 40	00	30) to 50	00
		Horizontal	(10000[mm ² /s])	4	8	30	13	25	40	30	34	70
	Work load	Honzontai	(3000[mm ² /s])	6	18	36	26	40	70	50	90	100
	[kg]*1	Vertical	(5000[mm ² /s])	2	4	8	7	14	25	8	22	32
	Voltioal		(3000[mm ² /s])	2	4	8	8	16	30	13	26	46
			*3 *4	14	27	51	63	126	232	132	266	562
	Pusning	force [N] *2		to 38	to 74	to 141	to 122	to 238	to 452	to 283	to 553	to 1058
			to 300	15 to 700	8 to 350	4 to 175	18 to 700	9 to 450	5 to 225	24 to 800	12 to 400	4 to 200
J.	Speed [mm/s]	Stroke range	350 to 400	-	-	-	18 to 600	9 to 300	5 to 150	24 to 800	12 to 400	4 to 200
Actuator	400 to 500		-	-	-	-	-	-	24 to 640	12 to 320	4 to 160	
	Acceleration/deceleration							10000				
	Pushing speed [mm/s] *5			50	or le	SS	35	or les	ss	30	or le	ss
	Position	ing repeatab	ility [mm]				+	H/- 0.0	2			
	Lost mo	otion [mm] *6					0.	1 or le	SS			
	Screw le	ead [mm]		10	5	2.5	12	6	3	16	8	4
		/Vibration		50 / 20							-	
	resistan	ce [m/s²] *7		*** *								
	Actuatio	on type		Ball screw and Belt (For "LEY □F) Ball screw (For "LEY □DF)								
	Guide ty	/ pe		Sliding bush(Piston rod part)								
		ng temperatu	ire					5 to 40)			
	range [°		[0/DII]			00	//			-4:\		
	Motor si		ange [%RH]	-	□28	90 OI	less(l	NO COI	idensa		□56.4	ı
_	Motor ty				LEO	Sten	moto		/o 24\		_00	
Electrical	Encoder				Incren			,			tation)
ect	Rated v	oltage [V]						DC +/-				
Ш	Max.instantaneous power consumption [W] *8				116			126			222	
.=	Type *9				N	on-ma	anetiz	ina loc	:k			
unit		force [N]		20	39	78	78	157	294	127	265	519
Lock	Power consumption [W] *10		2.9 5 5									
2	Rated voltage [V]			24 VDC+/-10%								

2 Specifications (continued)

Series LEY - Motor: High performance Battery-less absolute [Step 24 VDC]

	Model			L	LEY16G LEY25G				G	LEY40G			
		Stroke [mm]	3	0 to 30	00	30) to 40	00	30	0 to 50	00	
		Horizontal	(10000[mm ² /s])	4	8	30	13	25	40	30	34	70	
	Work load	TTOTIZOTICAL	(3000[mm ² /s])	6	18	36	26	40	70	50	90	100	
	[kg]*1	Vertical	(5000[mm ² /s])	2	4	8	7	14	25	8	22	32	
		vortiou.	(3000[mm ² /s])	2	4	8	8	16	30	13	26	46	
	Duchine	force [N] *2	*3 *4	14	27	51 to	63 to	126 to	232 to	132	266 to	562 to	
	l usining	roice [iv]		to 38	to 74	141	122	238	452	to 283	553	1058	
			to 300	15 to 700	8 to 350	4 to 175	18 to 700	9 to 450	5 to 225	24 to 800	12 to 400	4 to 200	
or	Speed [mm/s]	Stroke range	350 to 400	-	-	-	18 to 600	9 to 300	5 to 150	24 to 800	12 to 400	4 to 200	
Actuator			400 to 500	-	-	-	-	-	-	24 to 640	12 to 320	4 to 160	
	Acceleration/deceleration							10000					
	Pushing speed [mm/s] *5			50	or les	ss	35	or le	ss	30	or les	ss	
		ing repeatab	ility [mm]				1	-/- 0.0	2				
	Lost mo	otion [mm] *6					0.	1 or le	ss				
		ead [mm]		10	5	2.5	12	6	3	16	8	4	
		/Vibration ice [m/s ²] *7		50 / 20									
	Actuation	on type		Ball screw and Belt (For "LEY G) Ball screw (For "LEY DG)									
	Guide ty	/ pe		Sliding bush(Piston rod part)									
		ng temperatu	re										
	range [°	[C]						5 to 40					
	Operation	ng humidity i	ange [%RH]			90 or	less(l	No co	ndensa	ation)			
	Motor s				□28			□42			□56.4		
g	Motor ty	•				_		_ \		otor24			
∃lectrical	Encode				Batter	y -less				ılse/ro	tation)	1	
Ше	Rated voltage [V]						24 VI	DC +/-	- 10%				
	Max.instantaneous power consumption [W] *8		oower	l	116			126			222		
.=						N	on-ma	gnetiz	ing loc	ck			
unit	Holding force [N]		20	39	78	78	157	294	127	265	519		
상		onsumption	[W] *10	2.9 5 5									
2	Rated v	oltage [V]					24 V	DC+/	-10%	•			
Lock			[vv] ··		2.9		24 V		-10%		5		

Actuator Weight (LEY series) kg

Weight: Motor Top/Parallel Type

	Series	76-			LEY16							
	Stroke[mm]	30	50	100	150	200	250	300				
	Step motor	0.58	0.62	0.73	0.87	0.98	1.09	1.2				
	Servo motor	0.58	0.62	0.73	0.87	0.98	1.09	1.2				
Product												
w eight[kg]	Battery-less Absolute	0.75	0.79	0.9	1.04	1.15	1.26	1.37				
	High performance	0.72	0.76	0.87	1.01	1.12	1.23	1.34				
	High performance Battery-less absolute	0.75	0.79	0.9	1.04	1.15	1.26	1.37				
	Series		LEY25									
Stroke[mm]		30	50	100	150	200	250	300	350	400		
	Step motor/ Battery-less Absolute	1.18	1.25	1.42	1.68	1.86	2.03	2.21	2.38	2.56		
Product	Servo motor	1.14	1.21	1.38	1.64	1.82	1.99	2.17	2.34	2.52		
w eight[kg]	High performance	1.40	1.47	1.64	1.90	2.08	2.25	2.43	2.60	2.78		
	High performance Battery-less absolute	1.43	1.50	1.67	1.93	2.11	2.28	2.46	2.63	2.81		
	Series						LEY32					
	Stroke[mm]	30	50	100	150	200	250	300	350	400	450	500
	Step motor/ Battery-less Absolute	2.09	2.2	2.49	2.77	3.17	3.46	3.74	4.03	4.32	4.6	4.89
Product	Servo motor	-	-	-	-	-	-	-	-	-	-	-
w eight[kg]	High performance	-	-	-	-	-	-	-	-		-	
	High performance Battery-less absolute	,		ı	,	1	1		-	-	1	
	Series						LEY40					
	Stroke[mm]	30	50	100	150	200	250	300	350	400	450	500
	Step motor/ Battery-less Absolute	2.39	2.5	2.79	3.07	3.47	3.76	4.04	4.33	4.62	4.9	5.19
Product	Servo motor			-		-			-	-	-	-
w eight[kg]	High performance	2.84	2.95	3.24	3.52	3.92	4.21	4.49	4.78	5.07	5.35	5.64
	High performance Battery-less absolute	2.88	2.99	3.28	3.56	3.96	4.25	4.53	4.82	5.11	5.39	5.68

2 Specifications (continued)

	Series				LEY16D	1						
	Stroke[mm]	30	50	100	150	200	250	300				
	Step motor	0.58	0.62	0.73	0.87	0.98	1.09	1.2				
	Servo motor	0.58	0.62	0.73	0.87	0.98	1.09	1.2				
Product w eight[kg]	Battery-less Absolute	0.72	0.76	0.87	1.01	1.12	1.23	1.34				
weigniqkgj	High performance	0.69	0.73	0.84	0.98	1.09	1.20	1.31				
	High performance Battery-less absolute	0.72	0.76	0.87	1.01	1.12	1.23	1.34				
	Series					LEY25D)				ĺ	
	Stroke[mm]	30	50	100	150	200	250	300	350	400	ĺ	
	Step motor/ Battery-less Absolute	1.17	1.24	1.41	1.67	1.85	2.02	2.2	2.37	2.55		
Product	Servo motor	1.13	1.2	1.37	1.63	1.81	1.98	2.16	2.33	2.51	ĺ	
w eight[kg]	High performance	1.33	1.40	1.57	1.83	2.01	2.18	2.36	2.53	2.71	ĺ	
	High performance Battery-less absolute	1.36	1.43	1.60	1.86	2.04	2.21	2.39	2.56	2.74		
	Series						LEY32D)				
	Stroke[mm]	30	50	100	150	200	250	300	350	400	450	500
	Step motor/ Battery-less Absolute	2.08	2.19	2.48	2.76	3.16	3.45	3.73	4.02	4.31	4.59	4.88
Product	Servo motor	-	-	-	-	-	-	-	-	-	-	-
w eight[kg]	High performance	-	-	-	-	-	-	-	-	-	-	-
	High performance Battery-less absolute	-	-	-	-	-	-	-	-	-	-	-
	Series						LEY40D)				
	Stroke[mm]	30	50	100	150	200	250	300	350	400	450	500
	Step motor/ Battery-less Absolute	2.38	2.49	2.78	3.06	3.46	3.75	4.03	4.32	4.61	4.89	5.18
Product	Servo motor	-	-	-	-	-	-	-	-	-	-	-
w eight[kg]	High performance	2.76	2.87	3.16	3.44	3.84	4.13	4.41	4.70	4.99	5.27	5.56
	High performance Battery-less absolute	2.80	2.91	3.20	3.48	3.88	4.17	4.45	4.74	5.03	5.31	5.60

Additional weight (kg)

	Size	16	25	32	40
Step motor / Servo motor		0.12	0.26	0.53	0.53
Lock	Battery-less Absolute	0.16	0.26	0.53	0.53
	High performance / High performance Battery-less absolute		0.33	-	0.65
Motor cover	0.02	0.03	0.04	0.05	
Lock/Motor cover		0.16	0.32	0.61	0.62
Rod end male thread	Male thread	0.01	0.03	0.03	0.03
Rod end male thread	Nut	0.01	0.02	0.02	0.02
Foot bracket (2 sets in	ncluding mounting bolt)	0.06	0.08	0.14	0.14
Rod flange (including	mounting bolt)	0.40	0.47	0.00	0.00
Head flange (including	0.13	0.17	0.20	0.20	
Double clevis (includir	Double clevis (including pin, retaining ring,and mounting bolt)			0.22	0.22

Note1) Horizontal: The maximum value of the work load. An external guide is necessary to support the load (Friction coefficient of guide: 0.1 or less). The actual work load and transfer speed change according to the condition of the external guide. Check the work load, speed, accelaration and duty by "Model Selection" on Web catalogue.

Vertical: Check the work load, speed, accelaration and duty by "Model Selection" on Web catalogue.

The values shown in () are the acceleration/deceleration.

Note2) Pushing force accuracy is ±20% (F.S.).

Note3) The pushing force values for

LEY16* is 35% to 85%, for LEY25* is 35% to 65%, for LEY32* is 35% to 85%, and for LEY40* is 35% to 65%.

LEY16*A is 60% to 95% and for LEY25*A is 70% to 95%.

LEY16*E is 20% to 65%, LEY25*E is 30% to 50%, for LEY32*E is 30% to 70%, and for LEY40*E is 35% to 65%.

LEY16*F is 35% to 85%, LEY25*G is 35% to 65%, and for LEY40*F is 35% to 65%

LEY16*G is 20% to 65%, LEY25*G is 30% to 50%, and for LEY40*G is 25% to 50%.

he pushing force varies according to the duty ratio and pushing

speed. Check the "Model Selection" in the catalogue. Note 4) The speed and force may vary depending on the cable length,

load, and mounting conditions. Furthermore, if the cable length exceeds 5 m, it will decrease by up to 10% for each 5 m. (At 15 m: Reduced by up to 20%)

Note5) The allowable speed for pushing operation. When push conveying a workpiece, operate at the vertical work load or less. Note6) A reference value for correcting an error in reciprocal operation

Note7) Impact resistance: No malfunction occurred when the actuator was tested with a drop tester in both an axial and a perpendicular direction to the lead screw (The test was performed with the actuator in the initialized state).

Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. The test was performed in both an axial and a perpendicular direction to the lead screw (The test was performed with the actuator in the initialized state).

2 Specifications (continued)

Note8) The maximum instantaneous power consumption (including the controller) is for when the actuator is operating. This value can be used for the selection of the power supply.

Note9) With lock only

Note10) For an actuator with lock, add the power consumption for the

↑ Warning

For special products which include a suffix of "-X#", "-D#", please refer to the customer drawing of that specific product.

3 Installation

3.1 Installation

⚠ Warning

- Do not install the product unless the safety instructions have been read and understood.
- Do not use the product outside of its allowable specification.
- Ensure the product is sized correctly and is suitable for the application.
- Do not operate the product by fixing the piston rod and moving the
- · Avoid using the electric actuator in a way that rotational torque would be applied to the piston rod. If rotational torque is applied to the piston rod it will cause deformation, damage and/or reduce the non-rotational accuracy of the product. The allowable rotational torque is listed below.

Allowable Rotational torque	LEY16	LEY25	LEY32	LEY40
(N.m or less)	0.8	1.1	1.4	1.4

• When attaching a bracket or nut to the end of the rod, ensure the piston rod is fully retracted.







• When installing, inspecting or performing maintenance on the product, be sure to turn off the power supplies. Then, lock it so it cannot be tampered with while work is happening.

3.2 Environment

⚠ Warning

- . Do not use in an environment where corrosive gases, chemicals, salt water or steam are present.
- Do not use in an explosive atmosphere.
- Do not expose to direct sunlight. Use a suitable protective cover.
- Do not install in a location subject to vibration or impact in excess of the product's specifications.
- Do not mount in a location exposed to radiant heat that would result in temperatures in excess of the product's specifications
- Prevent foreign particles from entering the product.

3.3 Mounting

Marning

• Observe the required tightening torque for screws. Unless stated otherwise, tighten the screws to the recommended torque for mounting the product.

• Do not make any alterations to the product.

Alterations made to this product may lead to a loss of durability and damage to the product, which can lead to injury and damage to other equipment and machinery.

Do not scratch or dent the sliding parts of the table or mounting face etc., by striking or holding them with other objects. The components are manufactured to precise tolerances, so that even a slight deformation may cause faulty operation or seizure.

3 Installation (continued)

- Do not use the product until it has been verified that the equipment can be operated correctly.
- After mounting or repair, connect the power supply to the product and perform appropriate functional inspections to check it is mounted
- Do not use the product until it has been verified that the equipment can be operated correctly
- · After mounting or repair, connect the power supply to the product and perform appropriate functional inspections to check it is mounted
- Allow sufficient space for maintenance and inspection.

A Caution

. When mounting the product, use screws with adequate length and tighten them to the recommended torque.


Tightening with larger torque than the specified range may cause mal-function while the tightening with smaller torque can allow the displacement of actuator position. In extreme conditions the actuator could become detached from it's mounting position.

Work fixed / Rod end female thread




Model	Screw	Max. tightening torque [Nm]	Max. thread length [mm]	Rod end width across flats [mm]
LEY16	M5 x 0.8	3.0	10	14
LEY25	M8 x 1.25	12.5	13	17
LEY32	M8 x 1.25	12.5	13	22
LEY40	M8 x 1.25	12.5	13	22

Work fixed / Rod end male thread



Model	Screw	Max. tightening torque [Nm]	Max. thread length [mm]	Rod end width across flats [mm]
LEY16	M8 x 1.25	12.5	12	14
LEY25	M14 x 1.5	65.0	20.5	17
LEY32	M14 x 1.5	65.0	20.5	22
LEY40	M14 x 1.5	65.0	20.5	22

	Rod end nut		thread
Model	Width across flats [mm]	Length [mm]	depth of bracket[mm]
LEY16	13	5	8.5
LEY25	22	8	14
LEY32	22	8	14
LEY40	22	8	14




Tighten the product mounting screws to the specified torque.

Tightening to a torque over the specified range can cause operation failure, and insufficient torque can cause displacing or dropping of the attachment.

3 Installation (continued)


Mounting / Screw bottom tapped style

Model	Screw	Max. tightening torque [Nm]	Max. thread depth [mm]
LEY16	M4 x 0.7	1.5	5.5
LEY25	M5 x 0.8	3.0	6.5
LEY32	M6 x 1.0	5.2	8.5
LEY40	M6 x 1.0	5.2	8.5



Mounting / Rod side - Head side tapped style

Model	Screw	Max. tightening torque [Nm]	Max. thread depth [mm]
LEY16	M4 x 0.7	1.5	7
LEY25	M5 x 0.8	3.0	8
LEY32	M6 x 1.0	5.2	10
LEY40	M6 x 1.0	5.2	10



3.4 Lubrication

Caution

- SMC products have been lubricated for life at manufacture, and do not require lubrication in service.
- If a lubricant is used in the system, refer to catalogue for details.
- The recommended grease is lithium grade No.2

Applied Region	Grease Pack Number	Weight [g]
Piston rod	GR-S-010	10
Guide	GR-S-020	20

• For products which include a "25A-" prefix the recommended grease is low condensation grease.

Applied Region	Grease Pack Number	Weight [g]
Piston rod Guide	GR-D-010	10

3.5 Wiring

♠ Warning

- · Adjustment, mounting or wiring changes should not be carried out before disconnecting the power supply to the product. Electric shock, malfunction and damage can result.
- · Do not disassemble the cables.
- Use only specified cables.
- Use only specified cables otherwise there may be risk of fire and
- Do not connect or disconnect the wires, cables and connectors when the power is turned on.

A Caution

- · Wire the connector correctly and securely.
 - Check the connector for polarity and do not apply any voltage to the terminals other than those specified in the Operation Manual.
- Take appropriate measures against noise.

Noise in a signal line may cause malfunction. As a countermeasure separate the high voltage and low voltage cables, and shorten the wiring lengths, etc.

3 Installation (continued)

 Do not route input/output wires and cables together with power or high voltage cables.

The product can malfunction due to noise interference and surge voltage from power and high voltage cables close to the signal line. Route the wires of the product separately from power or high voltage cables.

- Take care that actuator movement does not catch cables.
- Operate with all wires and cables secured.
- Avoid bending cables at sharp angles where they enter the product.
- Avoid twisting, folding, rotating or applying an external force to the cable.

Risk of electric shock, wire breakage, contact failure and loss of control of the product can result. Select "Robotic cables" in applications where cables are moving repeatedly (encoder/ motor/ lock).

Refer to the relevant operation manual for the bending life of the cable.

• Confirm correct insulation.

Poor insulation of wires, cables, connectors, terminals etc. can cause interference with other circuits. Also there is the possibility that excessive voltage or current may be applied to the product causing damage.


 Refer to the auto switch references in "Best Pneumatics" when an auto switch is to be used

3.6 Actuator Ground connection

A Caution

• The Actuator must be connected to ground to shield the actuator from electrical noise. The screw and cable with crimping terminal and toothed washer should be prepared separately by the user.

3.7 Wiring of Actuator to Controller

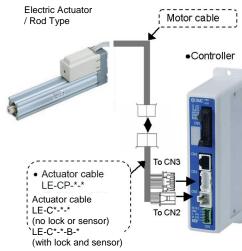

4 How to Order

 For standard products, refer to the catalogue on the SMC website (URL: https://www.smcworld.com) for the how to order information.

5 Outline Dimensions

 For standard products, refer to the catalogue on the SMC website (URL: https://www.smcworld.com) for outline dimensions.

6 Maintenance

6.1 General Maintenance

A Caution

- Not following proper maintenance procedures could cause the product to malfunction and lead to equipment damage.
- If handled improperly electricity and compressed air can be dangerous.
- Maintenance of electromechanical and pneumatic systems should be performed only by qualified personnel.
- Before performing maintenance, turn off the power supply and be sure to cut off the supply pressure. Confirm that the power has been discharged and the air is released to atmosphere.
- After installation and maintenance, apply operating pressure and power to the equipment and perform appropriate functional and leakage tests to make sure the equipment is installed correctly.
- If any electrical or pneumatic connections are disturbed during maintenance, ensure they are reconnected correctly and safety checks are carried out as required to ensure continued compliance with applicable national regulations.
- Do not make any modification to the product.
- Do not disassemble the product, unless required by installation or maintenance instructions.
- Incorrect handling can cause an injury, damage or malfunction of the equipment and machinery, so ensure that the procedure for the task is followed.
- Always allow sufficient space around the product to complete any maintenance and inspection.

6.2 Periodical Maintenance

Maintenance should be performed according to the table below:	Appearance Check	Belt Check
Inspection before daily operation	✓	
Inspection every six months*	✓	✓
Inspection every 1,000 km*	✓	✓
Inspection every 5 million cycles*	✓	√

*whichever of these occurs first.

 Following any maintenance, always perform a system check. Do not use the product if any error occurs, as safety cannot be assured if caused by any un-intentional malfunction.

6.3 Appearance Check

- The following items should be visually monitored to ensure that the actuator remains in good condition and there are no concerns flagged;
 - · Loose Screws,
 - Abnormal level of dust or dirt,
 - Visual flaws / faults,
 - · Cable connections,
 - · Abnormal noises or vibrations.

6.4 Belt Check

• If one of the 6 conditions below are seen, do not continue operating the actuator, contact SMC immediately.

• Tooth shaped canvas is worn out.

Canvas fibre becomes "fuzzy", rubber is removed, and the fibre gains a white colour. The lines of fibre become very unclear.



· Peeling off or wearing of the side of the belt.

The corner of the belt becomes round and frayed, with threads beginning to stick out.

Belt is partially cut.

Belt is partially cut. Foreign matter could be caught in the teeth and cause flaws.



6 · Maintenance (continued)

Vertical line of belt teeth.

- Flaw which is made when the belt runs on the flange.
- · Rubber back of the belt is softened and sticky.
- · Crack on the back of the belt.



7.1 Limited warranty and disclaimer/compliance requirements

• Refer to Handling Precautions for SMC Products.

8 Product disposal

7 Limitations of Use

This product should not be disposed of as municipal waste. Check your local regulations and guidelines to dispose of this product correctly, in order to reduce the impact on human health and the environment.

9 Contacts

Refer to <u>www.smcworld.com</u> or <u>www.smc.eu</u> for your local distributor / importer

SMC Corporation

URL: http://www.smcworld.com/ (Global) http://www.smceu.com/ (Europe) 'SMC Corporation, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, Japan Specifications are subject to change without prior notice from the manufacturer. © 2021 SMC Corporation All Rights Reserved.

Template DKP50047-F-085M